

ITEM NO.

ANCHOR WINDLASS (ABS AND USCG)

Remove the bearing caps from two (2) anchor bearings and roll the lower halves for inspection by ABS Surveyor.

Replace bearings and caps renewing all gasketing and fastenings.

Prior to dock and sea trials test operate the anchor windlass to the satisfaction of the ABS and MarAd representatives.

Data: Mfr. Underwood Mfg. Co.

I.D. 2 5/8 inch spur gear windings

Two (2) Wildcats