

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
J-1140/DSM		DISTRIBUTION BOX	U	NE 4	NE 4		N0028	
J-1141/DSM		DISTRIBUTION BOX	U	NE 4	NE 4		N0028	
J-1142/DSM		DISTRIBUTION BOX	U	NE 4	NE 4		N0028	
J-1143/DSM		DISTRIBUTION BOX	U	NE 4	NE 4		N0028	
J-1144/DSM		DISTRIBUTION BOX	U	NE 4	NE 4		N0028	
J-1145/DSM		DISTRIBUTION BOX	U	NE 4	NE 4		N0028	
J-1146/DSM		TERMINAL BOX	U	NE 4	NE 4		N0028	
J-1147/DSM		TERMINAL BOX	U	NE 4	NE 4		N0028	
J-1148/DSM		DISTRIBUTION BOX	U	NE 4	NE 4		N0028	
J-1149/FPS-26		INTERCONNECTING BOX	U	AR	AT U	01/60	A0070	
J-1150/FPS-26		INTERCONNECTING BOX	U	AR	AT U	01/60	A0070	
J-1151/FPS-26		JUNCTION BOX	U	AR	AT U	01/60	A0070	
J-1152/FPS-26		JUNCTION BOX	U	AR	AT U	01/60	A0070	
J-1153/FPS-26		JUNCTION BOX	U	AR	AT U	01/60	A0070	
J-1154/FPS-26		JACK BOX	U	AR	AT U	01/60	A0070	
J-1155/DFB-4		INTERCONNECTING BOX	U	AD	AS D	02/60	A0070	
J-1156(I)/MFS-14		DISTRIBUTION BOX	U	LE	LE	06/63	L0014	
J-1157/FPS-26		INTERCONNECTING BOX	U	AR	AT U	02/60	A0070	
J-1158/APM-145		INTERCONNECTING BOX	U	NE 4	NE 4		N0032	
J-1159/APM-145		INTERCONNECTING BOX	U	NE 4	NE 4		N0072	
J-1159/FPS-26		INTERCONNECTING BOX	U	AR	AT U	03/60	A0070	
J-1160/SPR		JACK BOX	U	NS 2	NS 2		N0000	
J-1160/MSA-5		JACK BOX	U	AR	AT U	03/60	A0070	
J-1161/FPS-26		INTERCONNECTING BOX	U	AR	AT U	06/63	L0014	
J-1162(I)/FPS-61		DISTRIBUTION BOX-POWER SUPPLY	U	LE	LE	06/63	L0014	
J-1163/FPS-50(V)		INTERCONNECTING BOX	U	AR	AL	03/60	A0070	
J-1164/FPS-50(V)		INTERCONNECTING BOX	U	AR	AL	03/60	A0070	
J-1165/FPS-50(V)		INTERCONNECTING BOX	U	AR	AL	03/60	A0070	
J-1166/FPS-26		JACK BOX	U	AR	AT U	03/60	A0070	
J-1167/FPS-26		JACK BOX	U	AR	AT U	03/60	A0070	
J-1168/FPS-69		DISTRIBUTION BOX-POWER SUPPLY	U	LE	LE	06/63	L0033	
J-1169/ARM-46		DISTRIBUTION BOX	U	NE 4	NE 4		N0000	
J-1170/APS-20		JUNCTION BOX	U	NS 2	NS 2		N0000	
J-1170/FPS-21A		INTERCONNECTING BOX	U	LE	LE	04/60	L0067	
J-1171/FPS-26		JACK BOX	U	AR	AT U	04/60	A0070	
J-1172/FPS-26		JACK BOX	U	AR	AT U	04/60	A0070	
J-1173/FPS-26		JACK BOX	U	AR	AT U	04/60	A0070	
J-1174/FPS		INTERCONNECTING BOX	U	NS 2	NS 2		N0041	
J-1175/SPS-43		DISTRIBUTION BOX	U	NS 2	NS 2		N0076	
J-1176/SRW		INTERCONNECTING BOX	U	AD	AS D	05/60	A0070	
J-1177/ASA-28		INTERCONNECTING BOX	U	AD	AS D	05/60	A0070	
J-1178/ASA-28		INTERCONNECTING BOX	U	AD	AS D	05/60	A0070	
J-1179/ASA-28		INTERCONNECTING BOX	U	AD	AS D	05/60	A0070	
J-1180/TIC-1		JACK BOX	U	LE	LE	05/60	D000L0063	
J-1180/ASA-28		INTERCONNECTING BOX	U	AD	AS D	05/60	A0070	
J-1181/ASA-28		INTERCONNECTING BOX	U	AD	AS D	05/60	A0070	
J-1182/FPS-26		INTERCONNECTING BOX	U	AT U	AT U	05/60	L0015	
J-1183(I)/FPS-70		DISTRIBUTION BOX-POWER SUPPLY	U	LE	LE	05/60	A0070	
J-1184/FPS-24		DISTRIBUTION BOX	U	AR	AT U	05/60	A0070	
J-1185/FPS-24		DISTRIBUTION BOX	U	AR	AT U	05/60	A0070	
J-1185A/FPS-24		DISTRIBUTION BOX	U	AR	AT U	05/63	A0028	
J-1186/FPS-24		DISTRIBUTION BOX	U	AR	AT U	05/60	A0070	
J-1187/FPS-24		DISTRIBUTION BOX	U	AR	AT U	06/60	A0070	
J-1187A/FPS-24		DISTRIBUTION BOX	U	AR	AT U	07/61	A0070	
J-1188/FPS-24		DISTRIBUTION BOX	U	AR	AT U	05/60	A0070	
J-1189/FPS		INTERCONNECTING BOX	U	AR	AT U	06/60	N0000	
J-119/APA-5A		JUNCTION BOX	U	NS 2	NS 2		N0000	
J-1190/FPS-6		INTERCONNECTING BOX	U	AT A	AT A	06/60	D070A0125	
J-1191/FPS-6		DISTRIBUTION BOX	U	AR	AT U	06/60	A0070	
J-1192/APS-80		INTERCONNECTING BOX	U	NS 2	NS 2		N0042	
J-1193/UPM-114		JACK BOX	U	NE 4	NE 4		N0037	
J-1194/GRC-46		INTERCONNECTING BOX	U	LE	LE	06/63	L0015	
J-1195/GRC-46		INTERCONNECTING BOX	U	LE	LE	06/63	L0015	
J-1196/FPN		DISTRIBUTION BOX	U	NS 2	NS 2		N0036	
J-1197/AMA-6		JUNCTION BOX	U	AR	AT U	06/60	A0070	
J-1198/FPS-26		CIRCUIT BREAKER BOX	U	AR	AT U	02/61	A0070	
J-1199/FPS-26		INTERCONNECTING BOX	U	AR	AT U	02/61	A0000	
J-12/ATA-1		JACK BOX	U	AD	AS D		D000L0063	
J-120/GR		JACK BOX	U	AD	AS D	06/60	A0070	
J-1200/ASR-5(V)		INTERCONNECTING BOX	U	NS 4	NE 4		N0038	
J-1201/DSM-60		ADAPTER, CABLE BREAKOUT	U	NS 4	NE 4		N0038	
J-1202/SPG-55A		DISTRIBUTION BOX	U	NS 2	NS 2		N0048	
J-1203/SPG-55A		DISTRIBUTION BOX	U	NS 2	NS 2		N0048	
J-1204/SPG-55A		DISTRIBUTION BOX	U	NS 2	NS 2		N0039	
J-1205/ALM-2		INTERCONNECTING BOX	U	NS 1	NS 1		N0101	
J-1206/ASA-16		INTERCONNECTING BOX	U	NS 1	NS 1		N0101	
J-1206A/ASA-16		INTERCONNECTING BOX	U	NS 1	NS 1		N0101	
J-1207/FPS-50(V)		DISTRIBUTION BOX	U	AR	AL	07/60	A0070	
J-1208/MRM-7		INTERCONNECTING BOX	U	AR	AS D	09/60	A0070	
J-1209/MSM-42		DISTRIBUTION BOX	U	AD	AS D	08/60	A0070	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
J-121/TPQ-1		JUNCTION BOX	U	LE	LE		0000L0063	
J-1210/MSM-42		DISTRIBUTION BOX	U	AD	AS D	08/60	A0070	
J-1211/AVO-1		INTERCONNECTING BOX	U	AD	AS D	09/60	A0070	
J-1211A/ATQ-1		INTERCONNECTING BOX	U	AD	AS D	01/64	A0094	
J-1212/SPQ-2		INTERCONNECTING BOX	U	NS	NS		N0041	
J-1213/FPS-26		INTERCONNECTING BOX	U	AR	AT U	09/60	A0070	
J-1214/FPS-26		INTERCONNECTING BOX	U	AR	AT U	09/60	A0070	
J-1215/DJW-4C		DISTRIBUTION BOX	U	AD	AS D	00/60	A0070	
J-1216/ASM-31		INTERCONNECTING BOX	U	NS 4	NE 4		N0043	
J-1217/FPS-24		DISTRIBUTION BOX	U	AR	AT U	00/60	A0070	
J-1218/FPS-24		DISTRIBUTION BOX	U	AR	AT U	00/60	A0070	
J-1219/FPS-24		DISTRIBUTION BOX	U	AR	AT U	00/60	A0070	
J-122/TPN-2		JUNCTION BOX	U	AD	AS D		A0070	
J-1220/FPS-24		DISTRIBUTION BOX	U	AR	AT U	00/60	A0070	
J-1220A/FPS-24		DISTRIBUTION BOX	U	AR	AT U	05/63	A0028	
J-1221/FPS-26		INTERCONNECTING BOX	U	AR	AT U	00/60	A0070	
J-1222/FPA-13		TERMINAL BOX	U	NC 2	NC 2		N0043	
J-1223/FPA		TERMINAL BOX	U	NC 2	NC 2		N0043	
J-1224(I)/500-14		INTERCONNECTING BOX	U	NS 3	NS 3		N0044	
J-1225/MSA-19		INTERCONNECTING BOX	U	LI	LI		0000L0067	
J-1226/ASQ-12		INTERCONNECTING BOX	U	AD	AS D	00/60	A0070	
J-1227/APM-90A		INTERCONNECTING BOX	U	NS 4	NE 4		N0047	
J-1228/SLR-10		DISTRIBUTION BOX	U	NS 7	NS 7		N0047	
J-1229/FPS-26		INTERCONNECTING BOX	U	AR	AT U	01/61	A0070	
J-123/ARM-3		JUNCTION BOX	U	AD	AT U	02/44	D067A0081	
J-1230/DPB-A		INTERCONNECTING BOX	U	AD	AT G	01/61	A0070	
J-1231/DSM-60		INTERCONNECTING BOX	U	NS 4	NE 4		N0049	
J-1232/FPS-72		INTERCONNECTING BOX	U	AR	AT U	01/60	A0070	
J-1233/SPS-35A		TERMINAL BOX	U	NS 2	NS 2		N0048	
J-1234/GSW		DISTRIBUTION BOX	U	AL	AL	02/61	A0070	
J-1235/FPS-50(V)		INTERCONNECTING BOX	U	AR	AR	01/61	A0070	
J-1236/FPS-50(V)		INTERCONNECTING BOX	U	AR	AR	01/61	A0070	
J-1237/FPS-50(V)		INTERCONNECTING BOX	U	AR	AR	01/61	A0070	
J-1238/FPS-50(V)		INTERCONNECTING BOX	U	AR	AR	01/61	A0070	
J-1239/MRC		DISTRIBUTION BOX	U	NS 1	NS 1		N0049	
J-124/FPA-5A		JUNCTION BOX	U	NS 2	NS 2		N0000	
J-1240/MRC		DISTRIBUTION BOX	U	NS 1	NS 1		N0049	
J-1241/FPS-35		TERMINAL BOX	U	AD	AT U	01/61	A0070	
J-1242/OPN-61		INTERCONNECTING BOX	U	AD	AS D	01/61	N0050	
J-1243/ALH-5		INTERCONNECTING BOX	U	NS 7	NS 7		N0050	
J-1244/GCC		TERMINAL BOARD ASSEMBLY	U	AR	AT U	01/61	A0070	
J-1245/MCC-12		JACK ASSEMBLY, TELEPHONE	U	AR	AT U	01/61	A0070	
J-1246/FSA		INTERCONNECTING BOX	U	AR	AT U	01/61	A0070	
J-1247/FPS-24		DISTRIBUTION BOX	U	AR	AT U	02/61	A0070	
J-1248/SPG-55A		DISTRIBUTION BOX	U	NS 2	NS 2		N0051	
J-1249/GJQ-17		CIRCUIT BREAKER-FILTER ASSEMBLY	U	AL	AL	03/61	A0070	
J-125/OPS-6		VIDEO JUNCTION BOX	U	AR	AT U	26/45	D067A0081	
J-125A/OPS-6		VIDEO JUNCTION BOX	U	AR	AT U	06/45	D067A0081	
J-1250/FPS-35		INTERCONNECTING BOX	U	AR	AT U	09/64	D070A0091	
J-1251/FPS-35		INTERCONNECTING BOX	U	AR	AT U	02/61	A0070	
J-1252(I)/SPM-14		DISTRIBUTION BOX	U	NS 4	NE 4		N0054	
J-1253(I)/SPM-14		JUNCTION BOX	U	NS 4	NE 4		N0054	
J-1254(I)/SPM-14		POWER DISTRIBUTION UNIT	U	NS 4	NE 4		N0054	
J-1255/FPS-22		INTERCONNECTING BOX	U	AR	AT U	02/61	A0070	
J-1256/50A-10		TERMINAL BOX	U	NS 3	NS 3		N0053	
J-1256A/50A-10		TERMINAL BOX	U	NS 3	NS 3		N0078	
J-1256B/50A-10		TERMINAL BOX	U	NS 3	NS 3		N0078	
J-1257/PPM-16		INTERCONNECTING BOX	U	AT U	AT U	03/61	A0070	
J-1258/FRP-5		INTERCONNECTING BOX	U	AR	AS D	03/61	A0070	
J-1259/FRP-56(V)		INTERCONNECTING BOX	U	AR	AS D	05/61	A0070	
J-126(I)/TRA-16		CONNECTOR PANEL	U	LE	LE		D000L0063	
J-1260/FR		INTERCONNECTING BOX	U	AR	AS D	03/61	A0070	
J-1261/GPA-73(V)		INTERCONNECTING BOX	U	AR	AS D	03/61	A0070	
J-1262/GSW		DISTRIBUTION BOX	U	AL	AS D	05/61	A0070	
J-1262A/GSW		RELAY BOX, AC POWER DISTRIBUTION, GROUND	U	AL	AS D	02/63	A0003	
J-1263/GSW		SUPPORT EQUIPMENT	U	AL	AS D	05/61	A0070	
J-1264/JRC-40		DISTRIBUTION BOX	U	LE	AS D	06/63	L0018	
J-1265/U		INTERCONNECTING BOX	U	NS 1	NS 1		D067A0081	
J-1266/CPN-10C		INTERCONNECTING BOX	U	AR	AT U	04/61	A0070	
J-1267/TTT		CHAMBER, CABLE TERMINAL	U	AR	AT U	04/61	A0070	
J-1268/G		INTERCONNECTING BOX	U	AR	AT U	04/61	A0070	
J-1269/GSW-4		DISTRIBUTION BOX (CANCELLED)	U	AL	AL	06/64	D003A0079	
J-127(I)/TRA-16		CONNECTOR PANEL	U	LE	LE	06/63	L0018	
J-1270/FPS		TERMINAL BOX	U	LE	LE		L0038	
J-1271/ASQ-38		INTERCONNECTING BOX	U	NS 4	NE 4		A0070	
J-1271/ASN-38		INTERCONNECTING BOX	U	NS 4	NE 4		A0070	
J-1272/50S-26		INTERCONNECTING BOX	U	NS 3	NS 3		A0070	
J-1273/ASB-7		DISTRIBUTION BOX	U	NS 3	NS 3		A0070	
J-1274/ALM-29		INTERCONNECTING BOX	U	NS 4	NE 4		N0058	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
J-1980/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1981/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1982/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1983/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1984/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1985/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1986/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1987/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1988/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1989/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1990/MRC-2	JUNCTION BOX	U A U A	01/61	0000L0063	0017			
J-1990/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1991/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1992/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1993/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1994/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1995/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1996/SAS-298	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1997/SAS-308	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1998/SAS	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-1999/GRA	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2000/APS-2-T1	JUNCTION BOX	U A A A	01/61	A0000	0017			
J-2000/APS-2-T1	JUNCTION BOX	U A A A	01/61	A0000	0017			
J-2000/APS-10	JUNCTION BOX	U A A A	01/61	A0000	0017			
J-2000/APS-33	JUNCTION BOX	U A A A	01/61	A0000	0017			
J-2000/GGA-1	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2001/GSM-4	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2002(I)/ART-36	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2003/PPS-16(V)	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2004/PPS-16(V)	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2005/PPS-16(V)	CIRCUIT BREAKER	U A A A	01/61	A0000	0017			
J-2006/ARM-40	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2007/PPS-49A	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2007/PPS-49A	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2008/PPS-27	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2009(I)/ASR-5	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2010/APS-53	JUNCTION BOX	U A A A	01/61	A0000	0017			
J-2010/ASR-5(V)	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2011/ASR-5(V)	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2012/ARM-59	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2013/PPS-27	TERMINAL BOX	U A A A	01/61	A0000	0017			
J-2014/GPA	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2015/PPS-16(V)	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2016/PPS-16(V)	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2017/GSM-57	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2018/ASM-81	DISTRIBUTION BOX-POWER SUPPLY	U A A A	01/61	A0000	0017			
J-2019/ASM	BOX, TEST POINT	U A A A	01/61	A0000	0017			
J-2020/APS-53	JUNCTION BOX	U A A A	01/61	A0000	0017			
J-2020(I)/ASM-84	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2021/ASM-84	TEST POINT BOX	U A A A	01/61	A0000	0017			
J-2022(I)/ASM-85	DISTRIBUTION BOX-POWER SUPPLY	U A A A	01/61	A0000	0017			
J-2022A/ASM-85	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2022B/ASM-85	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2023/ASM-86	DISTRIBUTION BOX-POWER SUPPLY	U A A A	01/61	A0000	0017			
J-2023A/ASM-86	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2024/ASM-85	BOX, TEST POINT	U A A A	01/61	A0000	0017			
J-2025/FYQ-5	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2026/FYQ-5	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2027/G	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2028/GSM-4	JACK ASSEMBLY, TEST	U A A A	01/61	A0000	0017			
J-2029/PPS-30	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2030/PPN	JUNCTION BOX (CANCELLED)	U A A A	01/61	A0000	0017			
J-2030/PPS-30	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2031/PPS-30	DISTRIBUTION BOX	U A A A	01/61	A0000	0017			
J-2032/ASQ-80	INTERCONNECTING BOX-SYNCHRO SIGNAL	U A A A	01/61	A0000	0017			
J-2033(I)/NSW-6	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2034/PPS-22	CIRCUIT BREAKER BOX	U A A A	01/61	A0000	0017			
J-2035/PPS-62	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2036/SPC-49A	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2037/SPC-49A	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2038/GSM-4	CIRCUIT BREAKER BOX	U A A A	01/61	A0000	0017			
J-2039/GSM-4	CIRCUIT BREAKER BOX	U A A A	01/61	A0000	0017			
J-2040/MRC-2	JUNCTION BOX	U A A A	01/61	A0000	0017			
J-2040/GSM-4T1	CIRCUIT BREAKER BOX	U A A A	01/61	A0000	0017			
J-2041/GSM-4T1	CIRCUIT BREAKER BOX	U A A A	01/61	A0000	0017			
J-2042/GSM-4T1	RELAY SWITCH	U A A A	01/61	A0000	0017			
J-2043/GSM-4T1	TERMINAL DRAWER	U A A A	01/61	A0000	0017			
J-2044/ASM-9	DISTRIBUTION BOX, CONTROL-MONITOR	U A A A	01/61	A0000	0017			
J-2044A/ASM-12	DISTRIBUTION BOX, CONTROL-MONITOR	U A A A	01/61	A0000	0017			
J-2045/PPS-49	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			
J-2046/FPT-9A	INTERCONNECTING BOX	U A A A	01/61	A0000	0017			

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
J-2047/FSA	DISTRIBUTION BOX	U A A A	04/62	A0000	0017			
J-2048/FSA-36	INTERCONNECTING BOX (CANCELLED)	U A A A	03/63	A0076				
J-2049/PPS-92	INTERCONNECTING BOX	U A A A	06/65	A0112				
J-2050/APS-54	JUNCTION BOX	U A A A	02/48	0067A0131				
J-2050/F	CIRCUIT BREAKER BOX	U A A A	08/62	A0076				
J-2051/SPC-49A	DISTRIBUTION BOX	U A A A	03/64	N0102				
J-2052/F5Q-42	CIRCUIT BREAKER BOX (CANCELLED)	U A A A	03/64	N0109				
J-2054/ALD-2	DISTRIBUTION BOX	U A A A	05/62	N0000				
J-2055/TRC-27	JUNCTION BOX	U A A A	05/62	N0000				
J-2056/GJA-16	INTERCONNECTING BOX	U A A A	03/65	A0076				
J-2056A/GJA-16	INTERCONNECTING BOX	U A A A	06/62	0006A0076				
J-2057/GJA-15	INTERCONNECTING BOX	U A A A	05/62	A0076				
J-2058/GSM-4T1	JUNCTION BOX	U A A A	01/63	A0003				
J-2059/GSM-4T2	JACK BOX	U A A A	07/45	0000A0067				
J-2060/GSM-4T2	JUNCTION BOX	U A A A	01/63	A0003				
J-2061/GSM-4T2	JACK BOX	U A A A	01/63	A0003				
J-2062/GSM-4T2	JACK BOX	U A A A	01/63	A0003				
J-2063/GSM-4T2	JACK BOX	U A A A	01/63	A0003				
J-2064/GSM-4T2	JACK BOX	U A A A	01/63	A0003				
J-2065/GSM-4T2	JACK BOX	U A A A	01/63	A0003				
J-2066/GSM-4T2	JACK BOX	U A A A	01/63	A0003				
J-2067/GSM-4T2	DISTRIBUTION BOX	U A A A	01/63	A0076				
J-2068/GSM-4T2	JUNCTION BOX	U A A A	01/63	A0076				
J-2069/GSM-4T2	DISTRIBUTION BOX	U A A A	01/63	A0076				
J-2070/MRC-2	JUNCTION BOX	U A A A	01/63	A0076				
J-2070/GSM-4T2	DISTRIBUTION UNIT	U A A A	07/62	0000L0063				
J-2071/GSM-4T2	JACK BOX	U A A A	07/62	A0076				
J-2072/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2073/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2074/FPT-9	INTERCONNECTING BOX	U A A A	08/63	A0076				
J-2075/PPS-49A	DISTRIBUTION BOX	U A A A	08/63	A0076				
J-2076/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2077/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2078/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2079/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2080/TRC-6	JUNCTION BOX	U A A A	03/65	A0114				
J-2080/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2081/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2082/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2083/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2084/FPA-25	INTERCONNECTING BOX	U A A A	03/65	A0114				
J-2085/FPT-9	CIRCUIT BREAKER BOX (CANCELLED)	U A A A	02/62	A0076				
J-2086/F	INTERCONNECTING BOX	U A A A	02/62	A0076				
J-2087/F5Q-51	INTERCONNECTING CABINET	U A A A	08/63	A0076				
J-2088/PPS-49A	CIRCUIT BREAKER BOX (CANCELLED)	U A A A	02/63	A0076				
J-2089/ARM-54	INTERCONNECTING BOX	U A A A	06/62	A0076				
J-2090/APS-19	TEST PANEL	U A A A	06/62	N0000				
J-2090/ARM-55	INTERCONNECTING BOX	U A A A	06/62	A0076				
J-2091/PPS-27	INTERCONNECTING BOX	U A A A	05/62	A0076				
J-2092/PPS-27	INTERCONNECTING BOX	U A A A	05/62	A0076				
J-2093/PPS-27	DISTRIBUTION BOX	U A A A	03/66	A0126				
J-2094/FPT-7	TERMINAL BOARD ASSEMBLY	U A A A	06/62	A0076				
J-2095/FPT-7	DISTRIBUTION BOX	U A A A	06/62	A0076				
J-2096(I)/ALR-1	INTERCONNECTING BOX	U A A A	06/63	L0023				
J-2097/G	JACK ASSEMBLY	U A A A	06/63	L0023				
J-2098/G	JACK ASSEMBLY	U A A A	06/63	L0023				
J-2099/G	JACK ASSEMBLY	U A A A	06/63	L0023				
J-2100/G	JUNCTION BOX	U A A A	06/63	L0023				
J-2101/G	JUNCTION BOX	U A A A	06/63	L0023				
J-2102/G	JACK ASSEMBLY	U A A A	06/63	L0023				
J-2103/PPS-49	DISTRIBUTION BOX	U A A A	06/62	A0076				
J-2104/PPS-49	DISTRIBUTION BOX	U A A A	06/62	A0076				
J-2105/PPS-49	DISTRIBUTION BOX	U A A A	06/62	A0076				
J-2106/PPS-49	JACK BOX	U A A A	08/62	N0000				
J-2107/SAS	INTERCONNECTING BOX	U A A A	09/62	A0000				
J-2108/FIC	TERMINAL BOARD ASSEMBLY (CANCELLED)	U A A A	09/62	N0000				
J-2109/G	JACK ASSEMBLY	U A A A	06/63	L0023				
J-2110/PPS-4	JUNCTION BOX	U A A A	09/45	0067A0081				
J-2111/PPS-4	JUNCTION BOX	U A A A	03/51	0067A0081				
J-2110/FSC-5	JACK BOX	U A A A	06/62	A0076				
J-2111/FSM	DISTRIBUTION BOX	U A A A	08/63	A0076				
J-2112/FIC-1	TERMINAL BOARD	U A A A	08/62	A0076				
J-2113/FIC-1	TERMINAL BOARD ASSEMBLY (CANCELLED)	U A A A	09/62	A0076				
J-2114/FIC-1	TERMINAL BOARD ASSEMBLY	U A A A	09/62	A0076				
J-2115/FIC-1	DISTRIBUTION BOX	U A A A	06/62	A0076				
J-2116/FIC-1	DISTRIBUTION BOX	U A A A	06/62	A0076				
J-2117/GPA-107(V)	INTERCONNECTING BOX	U A A A	06/62	N0075				
J-2118/GPA-107(V)	INTERCONNECTING BOX	U A A A	06/62	N0075				

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
J-2119/GPA-79	INTERCONNECTING BOX	U	AR	2	AT	07/62	A0076	
J-2120/UPA-15	JUNCTION BOX	U	AR	2	AT	02/45	N0090	
J-2120/FSA-53	INTERCONNECTING CABINET	U	AR	2	AT	02/45	A0076	
J-2121/AAH-4	JUNCTION BOX	U	AR	2	AT	07/62	N0092	
J-2122/752-18	DISTRIBUTION BOX	U	AR	2	AT	07/62	N0075	
J-2123/PRT-51	INTERCONNECTING BOX	U	AR	2	AT	06/63	L0023	
J-2124/GSM-85(V)	JACK BOX	U	AR	2	AT	02/62	0003A0076	
J-2125/FSA-46	TERMINAL BOX	U	AR	2	AT	07/62	A0076	
J-2126/FSA-46	TERMINAL BOX	U	AR	2	AT	07/62	A0076	
J-2127/FSA-46	TERMINAL BOX	U	AR	2	AT	07/62	A0076	
J-2128/FSA-45	TERMINAL BOX	U	AR	2	AT	07/62	A0076	
J-2129/FPS-74	DISTRIBUTION BOX	U	AR	2	AT	07/62	A0076	
J-2130/MPN-3	POWER INPUT PANEL	U	AR	2	AT	07/62	N0000	
J-2130/ASH-109	INTERCONNECTING BOX	U	AR	2	AT	07/62	N0076	
J-2131/GRR-13	INTERCONNECTING BOX	U	AR	2	AT	08/62	0076A0107	
J-2132/ASB-12	INTERCONNECTING BOX	U	AR	2	AT	02/62	N0092	
J-2133/FYQ-8	DISTRIBUTION BOX	U	AR	2	AT	02/62	A0076	
J-2134/APM-92	TERMINAL BOX	U	AR	2	AT	02/62	N0092	
J-2135/APM-92	TERMINAL BOX	U	AR	2	AT	02/62	N0092	
J-2136/ASA-48	ADAPTER TEST SIGNAL DATA CONVERTER	U	AR	2	AT	02/62	N0092	
J-2137/FLR-9(V)	INTERCONNECTING BOX	U	AR	2	AT	02/62	N0092	
J-2138/FPS-26A	INTERCONNECTING BOX	U	AR	2	AT	09/62	A0076	
J-2139/FPS-26A	INTERCONNECTING BOX	U	AR	2	AT	09/62	A0076	
J-2140/APS-26AX	JUNCTION BOX	U	AR	2	AT	00/45	0000A0067	
J-2140A/APS-26AX	DISTRIBUTION BOX	U	AR	2	AT	01/64	0077N0098	
J-2141/APS-26AX	INTERCONNECTING BOX	U	AR	2	AT		N0077	
J-2142/FRD-10(V)	DISTRIBUTION BOX	U	AR	2	AT		N0077	
J-2143/FRD-10(V)	DISTRIBUTION BOX	U	AR	2	AT		N0077	
J-2144/FRD-10(V)	DISTRIBUTION BOX	U	AR	2	AT		N0077	
J-2145/FRD-10(V)	DISTRIBUTION BOX	U	AR	2	AT		N0077	
J-2146/FT-1	TERMINAL BOARD ASSEMBLY	U	AR	2	AT	00/62	A0076	
J-2147/ACC-2	CONNECTOR ASSEMBLY ELECTRICAL	U	AR	2	AT	01/62	A0076	
J-2148/GRT-12	INTERCONNECTING BOX	U	AR	2	AT	00/62	0076A0107	
J-2149/MSQ-54	DISTRIBUTION BOX	U	AR	2	AT	00/45	0000A0067	
J-2150/APS-5-T1	JUNCTION BOX	U	AR	2	AT		N0077	
J-2150/FLR-9(V)	INTERCONNECTING BOX	U	AR	2	AT	01/62	A0076	
J-2151/FLR-9(V)	INTERCONNECTING BOX	U	AR	2	AT	01/62	A0076	
J-2152/FPS-74	DISTRIBUTION BOX	U	AR	2	AT	01/62	A0001	
J-2153/FPS-27	JUNCTION BOX	U	AR	2	AT	01/62	A0001	
J-2154/GLR-1	JUNCTION BOX	U	AR	2	AT	02/62	A0002	
J-2155/GLR-1	JUNCTION BOX	U	AR	2	AT	02/62	A0002	
J-2156/AM-10	DISTRIBUTION BOX	U	AR	2	AT	02/62	N0092	
J-2157/G	DISTRIBUTION BOX	U	AR	2	AT	06/63	L0024	
J-2158/G	INTERCONNECTING BOX	U	AR	2	AT	02/62	A0009	
J-2159/FPS-35	DISTRIBUTION BOX	U	AR	2	AT	02/62	A0009	
J-2160/APS-5-T1	JUNCTION BOX	U	AR	2	AT	00/45	0000A0067	
J-2160/FPS-49	INTERCONNECTING BOX	U	AR	2	AT	02/62	A0009	
J-2161/FSA-45	TERMINAL BOX	U	AR	2	AT	02/62	A0076	
J-2162/FSA-46	TERMINAL BOX	U	AR	2	AT	02/62	A0076	
J-2163/F	CIRCUIT BREAKER BOX	U	AR	2	AT	02/62	A0003	
J-2164/AM-19	INTERCONNECTING BOX	U	AR	2	AT	01/63	A0003	
J-2166/THN-14	DISTRIBUTION BOX	U	AR	2	AT	02/62	A0003	
J-2167/TSW-5	DISTRIBUTION BOX	U	AR	2	AT	02/62	A0003	
J-2168/GSQ	DISTRIBUTION BOX	U	AR	2	AT	01/63	A0003	
J-2169/GJQ-6	DISTRIBUTION BOX	U	AR	2	AT	01/63	A0003	
J-2170/CPX-1	JACK BOX	U	AR	2	AT	04/46	0067A0081	
J-2171/CLR-1	JUNCTION BOX	U	AR	2	AT	01/63	A0009	
J-2172/FPS-26A	INTERCONNECTING BOX	U	AR	2	AT	01/63	A0009	
J-2173/CPX-9	DISTRIBUTION BOX	U	AR	2	AT	02/63	A0009	
J-2174/TSQ	FUSE BOX	U	AR	2	AT	01/63	A0010	
J-2175/ARM-72	INTERCONNECTING BOX	U	AR	2	AT	02/63	N0094	
J-2176/BRA-8	TERMINAL BOX	U	AR	2	AT	02/63	N0083	
J-2178/APS-23	JUNCTION BOX	U	AR	2	AT	04/46	0000A0067	
J-2180/APS-23	JUNCTION BOX	U	AR	2	AT	01/51	0000A0067	
J-2180/ARM-10	JACK BOX	U	AR	2	AT	02/63	N0094	
J-2181/FLR-12	INTERCONNECTING BOX	U	AR	2	AT	02/63	A0010	
J-2182/FLR-12	INTERCONNECTING BOX	U	AR	2	AT	02/63	A0010	
J-2183/FLR-12	INTERCONNECTING BOX	U	AR	2	AT	02/63	A0008	
J-2184/FLR-12	INTERCONNECTING BOX	U	AR	2	AT	02/63	A0008	
J-2185/MPN	INTERCONNECTING BOX	U	AR	2	AT	02/63	A0014	
J-2186/SPG-55B	DISTRIBUTION BOX	U	AR	2	AT	02/63	N0094	
J-2187/SPG-55B	DISTRIBUTION BOX	U	AR	2	AT	02/63	N0094	
J-2188/TPS-35	INTERCONNECTING BOX	U	AR	2	AT	02/63	A0014	
J-2189/TPS-35	INTERCONNECTING BOX	U	AR	2	AT	02/63	A0014	
J-2190/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2191/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2192/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2193/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2194/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2195/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2196/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2197/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2198/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2199/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2200/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2201/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2202/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2203/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2204/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2205/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2206/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2207/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2208/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2209/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2210/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2211/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2212/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2213/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2214/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2215/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2216/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2217/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2218/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2219/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2220/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2221/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2222/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2223/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2224/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2225/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2226/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2227/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2228/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2229/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2230/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2231/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2232/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2233/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2234/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2235/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2236/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2237/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2238/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2239/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2240/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2241/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2242/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2243/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2244/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2245/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2246/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2247/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2248/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2249/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2250/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2251/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2252/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2253/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2254/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2255/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2256/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2257/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2258/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2259/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2260/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2261/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2262/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2263/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2264/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2265/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2266/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2267/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2268/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2269/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2270/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2271/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2272/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2273/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2274/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2275/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2276/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	
J-2277/APS-23	JUNCTION BOX	U	AR	2	AT	02/63	A0014	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CODE	PROC CODE	GROUP DATE	SOURCE DATA	NOTES
J-2709/GSM-170	INTERCONNECTING BOX	U	AL	AL	06/66	A0126		
J-271/APG-5C	JUNCTION BOX	U	AD	AS D	05/47	0000A0067		
J-2711/GSM-170	INTERCONNECTING BOX	U	AL	AL	06/66	A0126		
J-2712/GSM-170	INTERCONNECTING BOX	U	AL	AL	06/66	A0126		
J-2713/GSM-10	INTERCONNECTING BOX	U	AL	AL	06/66	A0126		
J-2716/GR-13	INTERCONNECTING CABINET	U	AL	AL	07/66	A0126		
J-2717/TTC-27	INTERCONNECTING BOX	U	AR	AR	07/66	A0127		
J-2719/SAS-26CX	DISTRIBUTION BOX	U	NS	NS	07/66	N0107		
J-2721/APG-19	TERMINAL BOX	U	LE	LE	08/66	N0000		
J-2720/GSM-10	INTERCONNECTING CABINET	U	LE	LE	08/66	A0127		
J-2722/TC	TERMINAL BOX	U	LE	LE	08/66	L0064		
J-2723/ALR-6(V)	INTERCONNECTING BOX	U	NS	NS	09/66	N0109		
J-2725/FSH-5	INTERCONNECTING BOX	U	NS	NS	09/66	N0109		
J-2726/TRC	JACK ASSEMBLY, TELEPHONE	U	LE	LE	09/66	L0065		
J-2727/TRC	JACK ASSEMBLY, TELEGRAPH	U	LE	LE	09/66	L0065		
J-2729/ALC-2A(V)	DISTRIBUTION BOX	U	NS	NS	01/66	N0110		
J-273/FFN	TERMINAL BOX	U	AR	AT U	02/49	0067A0081		
J-2730/ALC-2A(V)	DISTRIBUTION BOX	U	NS	NS	01/66	N0110		
J-2731/GR	DISTRIBUTION BOX	U	LE	LE	01/66	L0064		
J-2732/TPS-48	INTERCONNECTING BOX	U	AR	AR	01/66	A0131		
J-274/UPX	TERMINAL BOX	U	AL	AL	02/66	N0000		
J-2744/GS-114	INTERCONNECTING BOX	U	AD	AS D	02/66	A0132		
J-275/APG	TERMINAL BOX	U	AD	AS D	01/47	A0067		
J-276/ALC-5	TERMINAL BOX	U	NS	NS		N0000		
J-277/MPN-1B	TERMINAL BOX	U	NS	NS		N0000		
J-278/MPQ-2A	DISTRIBUTION PANELBOARD	U	NS	NS		N0000		
J-279/CPG-9	TERMINAL BOX	U	LE	LE		0000L0063		
J-28/APC-5	JUNCTION BOX	U	LE	LE		N0000		
J-280/CPG-9	TERMINAL BOX	U	LE	LE		0000L0063		
J-281/MPQ-2A	JACK BOX	U	AD	AS D		N0000		
J-282/APG-27	JUNCTION BOX	U	AD	AS D	02/48	0000A0067		
J-282/MPQ-2A	DISTRIBUTION PANEL	U	AD	AS D	03/48	N0000		
J-283/MPQ-2A	DISTRIBUTION PANEL	U	AD	AS D	03/48	N0000		
J-284/MPQ-2A	JACK BOX	U	AD	AS D	04/48	0081A0108		
J-285/CPG-6B	TERMINAL BOX	U	AD	AS D	04/48	0081A0108		
J-286/CPG-6B	TERMINAL BOX	U	AD	AS D	04/48	0081A0108		
J-287/MPN-1	TERMINAL BOX	U	AD	AS D	04/48	0067A0081		
J-289/APG-28	TERMINAL BOX	U	AD	AS D	04/48	0000A0067		
J-29/MPN-1	JUNCTION BOX	U	AD	AS D		A0000		
J-290(1)/UR-5	TERMINAL BOX	U	AD	AS D		N0000		
J-291/MPQ-2A	FUSE BOX	U	AD	AS D		N0000		
J-292/APG-71	TERMINAL BOX	U	AD	AS D	05/48	0067A0081		
J-293/APG-28	TERMINAL BOX	U	AD	AS D	06/48	0000A0067		
J-294/APA-56	SIGNAL DISTRIBUTOR	U	NS	NS	02/55	N0000		
J-295/APA-56	JUNCTION BOX	U	NS	NS		N0000		
J-296/APA-56	JUNCTION BOX	U	NS	NS		N0000		
J-297/APA-56	JUNCTION BOX	U	NS	NS		N0000		
J-298/APA-56	JUNCTION BOX	U	NS	NS		N0000		
J-299/APQ-23	TERMINAL BOX	U	AD	AS D	07/48	0000A0067		
J-3/APC-1	JUNCTION BOX	U	AD	AS D	03/43	0000A0067		
J-30/MPN-1	JUNCTION BOX	U	AD	AS D	03/43	A0000		
J-30A/MPN-1	JUNCTION BOX	U	AD	AS D	01/49	0000A0067		
J-300/APQ-23	TERMINAL BOX	U	AD	AS D	07/48	0000A0067		
J-301/APQ-23	TERMINAL BOX	U	AD	AS D	07/48	0000A0067		
J-301A/APQ-23	TERMINAL BOX	U	AD	AS D		A0000		
J-302/CPG-6B	TERMINAL BOX	U	AD	AS D	08/48	0000A0067		
J-303/CPG-6B	TERMINAL BOX	U	AD	AS D	08/48	0000A0067		
J-304/CPG-6B	TERMINAL BOX	U	AD	AS D	08/48	0000A0067		
J-305(1)/TH-9	TERMINAL BOX	U	LE	LE	09/48	0000A0067		
J-306/GR	TERMINAL BOX	U	AR	AR	09/48	0000A0067		
J-307/CPG-6	JACK BOX	U	AT U	AS D	02/34	0081A0108		
J-307/CPG-6B	JACK BOX	U	AD	AS D		A0000		
J-308/CPG-6B	JACK BOX	U	AT U	AS D	02/54	0081A0108		
J-309/CPG-6B	JACK BOX	U	AT U	AS D	02/54	0081A0108		
J-31/MPN-1	JUNCTION BOX	U	AD	AS D		A0000		
J-31A/MPN-1	JUNCTION BOX	U	AD	AS D		A0000		
J-310/CPG-6B	JACK BOX	U	AD	AS D		A0000		
J-311/CPG-6B	JACK BOX	U	AT U	AS D	02/54	0081A0108		
J-312/CPG-6B	JACK BOX	U	AT U	AS D	09/48	0081A0108		
J-313/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-314/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-315/APS-20B	TERMINAL BOX	U	NS	NS	01/53	N0000		
J-316/CPG-6B	JACK BOX	U	NS	NS	08/54	0081A0108		
J-317/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-318/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-319/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-32/ARN-9	JUNCTION BOX	U	NS	NS		N0000		
J-320/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CODE	PROC CODE	GROUP DATE	SOURCE DATA	NOTES
J-321/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-322/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-323/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-324/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-325/CPG-6B	JACK BOX	U	AT U	AS D	08/54	0081A0108		
J-326/CPG-6B	JACK BOX	U	AT U	AS D	02/48	0081A0108		
J-327/CPG-6B	JACK BOX	U	AT U	AS D	02/48	0081A0108		
J-328/CPG-6B	JACK BOX	U	AT U	AS D	02/48	0081A0108		
J-329/CPG-6B	JACK BOX	U	AT U	AS D	02/48	0081A0108		
J-33/VRC-1	JUNCTION BOX	U	NS	NS		0000L0063		
J-330(1)/BLR-1	JUNCTION BOX	U	NS	NS	7-302/46	N0067		
J-331/GT	TERMINAL BOX	U	AT U	AS D	01/48	0081A0108		
J-332/CPG-6B	TERMINAL BOX	U	AT U	AS D	01/48	0081A0108		
J-333/GT	TERMINAL BOX	U	AT U	AS D	01/48	0081A0108		
J-334/CPG-6B	TERMINAL BOX	U	AT U	AS D	01/48	0081A0108		
J-335(1)/ASB-1	JUNCTION BOX	U	NS	NS	01/48	N0000		
J-336/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-337/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-338/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-339/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-34/ARC-5	JUNCTION BOX	U	NS	NS		N0000		
J-340/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-341/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-342/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-343/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-344/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-345/GT	TERMINAL BOX	U	AT U	AS D	02/48	0081A0108		
J-346/FRR-12X	TERMINAL BOX	U	LE	LE		0000L0063		
J-347/ATC	JACK BOX	U	AD	AS D	03/49	A0067		
J-348/GT	TERMINAL BOX	U	AT U	AS D	04/49	0081A0108		
J-349/FPN-20	TERMINAL BOX	U	AT U	AS D	04/49	0067A0081		
J-35/APA-14	JUNCTION BOX	U	NS	NS		N0000		
J-350(1)/APA-80	JUNCTION BOX	U	NS	NS		N0000		
J-351(1)/APA-80	JUNCTION BOX	U	NS	NS		N0000		
J-352/APS-20C	JUNCTION BOX	U	NS	NS		N0000		
J-353/CPG-6B	TERMINAL BOX	U	AT U	AS D	00/49	0081A0108		
J-354/APG-5C	TERMINAL BOX	U	AT U	AS D	00/49	0067A0081		
J-355/TRC	CONNECTOR ASSEMBLY, ELECTRICAL	U	LE	LE		0000L0063		
J-356/TRC-26	CONNECTOR ASSEMBLY, ELECTRICAL	U	LE	LE		0000L0063		
J-357/FPN-1A	TERMINAL BOX	U	NS	NS		N0000		
J-358/FPN-1A	CONNECTOR PANEL	U	NS	NS		N0000		
J-359/FPN-1A	TERMINAL BOX	U	NS	NS		N0000		
J-36/ATA-2	JUNCTION BOX	U	NS	NS		N0000		
J-36A/ATA-2	JUNCTION BOX	U	NS	NS		N0000		
J-360/FPN-1A	CONNECTOR PANEL	U	NS	NS		N0000		
J-361/FRM-3	DISTRIBUTION PANEL	U	NS	NS		N0000		
J-362/GT	TERMINAL BOX	U	AT U	AS D	02/49	0067A0081		
J-363/GT	TERMINAL BOX	U	AT U	AS D	02/49	0067A0081		
J-364/GT	TERMINAL BOX	U	AT U	AS D	02/49	0067A0081		
J-365/GT	TERMINAL BOX	U	AT U	AS D	02/49	0067A0081		
J-366/GT	TERMINAL BOX	U	AT U	AS D	02/49	0067A0081		
J-367/GT	TERMINAL BOX	U	AT U	AS D	02/50	0067A0081		
J-368/GT	TERMINAL BOX	U	AT U	AS D	02/49	0067A0081		
J-369/UGN-1	JUNCTION BOX	U	NS	NS		N0000		
J-37/ATA-14	JACK BOX	U	AD	AS D	00/43	0000A0067		
J-370/FRA-4	JACK BOX	U	AD	AS D		N0000		
J-371/MPG-9	DISTRIBUTION PANEL	U	AT U	AS D	02/49	0081A0108		
J-372/MPG-9	DISTRIBUTION PANEL	U	AT U	AS D	02/49	0081A0108		
J-373/U	JACK BOX	U	NS	NS		N0000		
J-374/G	PANEL	U	NS	NS		N0000		
J-375/FRM-3	DISTRIBUTION PANEL	U	NS	NS		N0000		
J-376/CPG-6B	TERMINAL BOX	U	AT U	AS D	02/50	0081A0108		
J-377/FRC-18	RADIO SET ADAPTER	U	AT U	AS D	02/50	0067A0081		
J-378/FPN	JUNCTION BOX	U	AT U	AS D	02/50	0067A0081		
J-379/APA-82	JUNCTION BOX	U	AD	AS D	02/54	0000A0067		
J-379A/APA-82	JUNCTION BOX	U	AD	AS D	02/54	0000A0067		
J-38/APA-13	JUNCTION BOX	U	AD	AS D	00/43	0000A0067		
J-380/MPN-8	TERMINAL BOX	U	AT U	AS D	06/53	0081A0130		
J-381/FPG-3	TERMINAL BOX	U	AT U	AS D	03/50	0081A0108		
J-382/MPG-9	TERMINAL BOX	U	AT U	AS D	03/50	0081A0108		
J-383/MPG-9	TERMINAL BOX	U	AT U	AS D	03/50	0081A0108		
J-384/MPG-9	TERMINAL BOX	U	AT U	AS D	02/54	0081A0108		
J-385/CPG-6B	TERMINAL BOX	U	AT U	AS D	04/58	0081A0108		
J-386/GT	JACK BOX	U	AT U	AS D	04/50	0081A0108		
J-387/U	TERMINAL BOARD	U	NS	NS		N0000		
J-388/APA-83	TERMINAL BOX	U	AD	AS D	05/50	0000A0067		
J-389/APA-83	TERMINAL BOX	U	AD	AS D	05/50	0000A0067		
J-39/APB-13	JUNCTION BOX	U	AT U	AS D	00/43	0000A0067		
J-390/GR	DISTRIBUTION PANEL	U	AT U	AS D	01/57	0067A0081		
J-390A/GR	PANEL, POWER DISTRIBUTION	U	AT U	AS D	09/60	0067A0081		
J-391/CPN-18	TERMINAL BOX	U	AT U	AS D	06/50	0081A0108		

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG C06	PROC C06	GROUP DATE	SOURCE DATA	NOTES
	J-392/CRD-2A	TERMINAL BOX	U	LE	LE		0000LD0063	
	J-393/APG-36	TERMINAL BOX	U	LE	AS D	00/51	0000AD0067	
	J-394(1)/TRD-4	TERMINAL BOX (CANCELLED)	U	LE	LE	04/63	001DL0067	
	J-395/GPN	TERMINAL BOX	U	U	A	09/50	0081AD108	
	J-396/GPN	JUNCTION BOX	U	U	A	01/50	0081AD108	
	J-397/GPN	TERMINAL BOX	U	U	A	01/50	0081AD108	
	J-397A/APA-82	JUNCTION BOX	U	U	AS D	05/54	AD067	
	J-398/GPN	JUNCTION BOX	U	U	A	01/50	0081AD108	
	J-398A/GPN	INTERCONNECTING BOX	U	U	U	07/63	AD037	
	J-399/APS-27	JUNCTION BOX	U	AD	AS D	00/50	AD067	
	J-4/APG-1	JUNCTION BOX	U	AD	AS D		AD000	
	J-4/APG-1	JUNCTION BOX	U	AD	L	03/43	LD000	0017
	J-40/APQ-13	JUNCTION BOX	U	AD	AS D	00/43	0000AD0067	
	J-40A/APQ-13	JUNCTION BOX	U	AD	AS D	03/44	0000AD0067	
	J-40B/APQ-13	JUNCTION BOX	U	AD	AS D	00/44	0000AD0067	
	J-400/APS-27	JUNCTION BOX	U	AD	AS D	00/50	AD067	
	J-401/LRC-7	TERMINAL BOX	U	NC	1 NC 1		N0000	
	J-401A/LRC-7	TERMINAL BOX	U	NC	1 NC 1		N0000	
	J-402/BAR-1	JUNCTION BOX	U	NW	6 NW 6		N0096	
	J-403/FPS-3	POWER DISTRIBUTION PANEL	U	NW	6 NW 6	02/50	0000AD0067	
	J-404/FPS-3	JACK BOX	U	AR	AR	02/50	0000AD0067	
	J-405/FPS-3	JACK BOX	U	AR	AR	02/50	0000AD0067	
	J-406/FPS-3	JACK BOX	U	AR	AR	02/50	0000AD0067	
	J-407/FPS-3	JACK BOX	U	AR	AR	02/50	0000AD0067	
	J-408/FPS-3	JACK BOX	U	AR	AR	02/50	0000AD0067	
	J-409/FPS-3	JACK BOX	U	AR	AR	02/50	0000AD0067	
	J-41/FPS-2F	JUNCTION BOX	U	NW	1 NW 1		N0000	
	J-410/FPS-3	JACK BOX	U	AT	U A	02/50	0081AD108	
	J-411/FPS-3	JACK BOX	U	AT	U A	02/50	0081AD108	
	J-412/FPS-3	JACK BOX	U	AT	U A	02/50	0081AD108	
	J-413/FPS-3	JACK BOX	U	AT	U A	02/50	0081AD108	
	J-414/FPS-3	JACK BOX	U	AT	U A	02/50	0081AD108	
	J-415/FPS-3	JACK BOX	U	AT	AT U	02/50	0067AD081	
	J-416/FPS-3	JACK BOX	U	AT	AT U	02/50	0067AD081	
	J-417/FPS-3	JACK BOX	U	AT	U A	02/50	0081AD108	
	J-418/GPX-6	TERMINAL BOX	U	AS X	AS X	02/50	0081AD108	
	J-419/GPX-6	TERMINAL BOX	U	AS X	AS X	02/50	0081AD108	
	J-42/APG-6A	JUNCTION BOX	U	NW	1 NW 1		N0000	
	J-420/GPX-3	TERMINAL BOX	U	AS X	AS X	02/50	0081AD108	
	J-421/GRC-33	ELECTRICAL CONNECTOR ASSEMBLY	U	AR	AT U	02/50	0067AD081	
	J-422/SPG	TERMINAL BOX	U	NS	2 NS 2		N0000	
	J-423/APA-83	TERMINAL BOX	U	AD	NS 2	02/50	0067AD081	
	J-424(1)/APS-20B	JUNCTION BOX	U	NW	2 NW 2		N0000	
	J-425/GTA-4	JACK BOX	U	AT	U A	01/51	0081AD108	
	J-426/GTA-4	JACK BOX	U	AT	U A	01/51	0081AD108	
	J-427/GTA-4	JACK BOX	U	AT	U A	01/51	0081AD108	
	J-428/GTA-4	TERMINAL BOX	U	AT	U A	01/51	0081AD108	
	J-429/GTA-4	TERMINAL BOX	U	AT	U A	01/51	0081AD108	
	J-43/APG-11	JUNCTION BOX	U	NS	1 NW 1		N0000	
	J-430/GTA-4	TERMINAL BOX	U	AT	U A	01/51	0081AD108	
	J-431/GTA-4	TERMINAL BOX	U	AT	U A	01/51	0081AD108	
	J-432/GTA-4	TERMINAL BOX	U	AT	U A	01/51	0081AD108	
	J-433(1)/APG-39	JUNCTION BOX	U	NW	2 NW 2		N0000	
	J-434/APA-44A	INTERCONNECTING BOX	U	AD	AS D	02/51	0000AD0067	
	J-434A/APA-44A	INTERCONNECTING BOX	U	AD	AS D	03/51	0000AD0067	
	J-435/FRA-3	ELECTRICAL CONNECTOR ASSEMBLY	U	NS	1 NS 1		N0000	
	J-436/FRA-3	ELECTRICAL CONNECTOR ASSEMBLY	U	NS	1 NS 1		N0000	
	J-437/ARR-27A	FUSE BOX	U	NS	1 NS 1		N0000	
	J-438/APS-23	INTERCONNECTING BOX	U	AD	AS D	03/51	0000AD0067	
	J-438A/APS-23A	INTERCONNECTING BOX	U	AD	AS D	01/53	0000AD0067	
	J-439/VRC	TERMINAL BOX	U	LE	LE		0000LD0063	
	J-44/APA-18	JUNCTION BOX	U	AD	AS D	01/43	AD067	
	J-44/APA-18	JUNCTION BOX	U	NW	1 NW 1		N0000	
	J-440/GTA-4	INTERCONNECTING BOX	U	AT	U A	03/51	0081AD108	
	J-441/GTA-4	TERMINAL BOX	U	AT	U A	05/51	0081AD108	
	J-442/U	TERMINAL BOX	U	NC	NC		N0000	
	J-442A/U	TERMINAL BOX	U	NC	NC		N0000	
	J-443/GR	TELEPHONE JACK ASSEMBLY (CANCELLED)	U	AR	AT U	00/54	0068AD081	
	J-444/APA-91	TERMINAL BOX	U	AT	2 NW 2		N0000	
	J-445/TPS-100	TERMINAL BOX	U	AT	2 NW 2	03/51	0081AD108	
	J-446(1)/APA-56	INTERCONNECTING BOX	U	NW	2 NW 2		N0000	
	J-447/FGC-1	TERMINAL BOX	U	LE	LE		0000LD0063	
	J-448/APQ-36	INTERCONNECTING BOX	U	NW	2 NW 2		N0000	
	J-449/APQ-36	INTERCONNECTING BOX	U	NW	2 NW 2		N0000	
	J-45/MPN-1	OUTLET BOX	U	AD	AS D		AD000	
	J-451/TRT-2B	TERMINAL BOX	U	LE	LE		0000LD0063	
	J-452/GTA-4	JACK BOX	U	AT	U A	04/51	0081AD108	
	J-453/GTA-4	JACK BOX	U	AT	U A	04/51	0081AD108	
	J-454(1)/BPS-2	TERMINAL BOX	U	NC	NC		N0000	
	J-455/FPN	TERMINAL BOX	U	NC	NC		N0000	
	J-455A/FPN	TERMINAL BOX	U	NC	NC		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDS	PROC CDS	GROUP DATE	SOURCE DATA	NOTES
J-456/GR	CONNECTOR ASSEMBLY, ELECTRICAL	U	LE	LE			0000L0063	
J-457/GR	CONNECTOR ASSEMBLY, ELECTRICAL	U	LE	LE			0000L0063	
J-458/GR	CONNECTOR ASSEMBLY, ELECTRICAL	U	LE	LE			0000L0063	
J-459/GR	CONNECTOR ASSEMBLY, ELECTRICAL	U	LE	LE			0000L0063	
J-46/APG-2	FUSE BOX	U	LE	AS	D	01/43	0000A0067	
J-460/GR	INTERCONNECTING BOX	U	LE	LE			0000L0063	
J-461/GR	INTERCONNECTING BOX	U	LE	LE			0000L0063	
J-462 ()/TTQ-3	CHAMBER, CABLE TERMINAL (CANCELLED)	U	LE	LE			0000L0063	
J-463/MPG-10	JUNCTION BOX	U	LE	LE			0000L0063	
J-464/APG	INTERCONNECTING BOX	U	AD	AS	D	05/51	0000A0068	
J-465/U	JUNCTION BOX	U	AD	LE			0000L0063	
J-466/GRN	TERMINAL BOX	U	NC	1	NC	06/51	N0000	
J-467/GPM-1A	INTERCONNECTING BOX	U	NC	1	NC		A0068	
J-468/FPS-1A	TERMINAL BOX	U	NC	NS	NS		N0000	
J-469 ()/APG-42	TERMINAL BOX	U	NC	NS	NS		N0000	
J-47/APA-9	JACK BOX	U	AD	AS	D		A0000	
J-470/FPS	TERMINAL BOX	U	AD	AS	D		A0000	
J-470/FPS-6	TERMINAL BOX	U	AD	AT	U	06/51	D081A0108	
J-471/MPN-1	INTERCONNECTING BOX	U	AR	AT	U	06/51	0068A0081	
J-472/MPN-1	INTERCONNECTING BOX	U	AR	AT	U	06/51	0068A0081	
J-473/MPN-1	INTERCONNECTING BOX	U	AR	AT	U	06/51	0068A0081	
J-474/MPN-1	INTERCONNECTING BOX	U	AR	AT	U	06/51	0068A0081	
J-475/GRC-33	INTERCONNECTING BOX	U	AR	AT	U	07/51	0068A0081	
J-476/CRD-6	JUNCTION BOX	U	AR	AT	U	07/51	0068A0081	
J-477/CPG-6B	INTERCONNECTING BOX	U	AT	AT	U	07/51	0068A0081	
J-478/CPG-6B	INTERCONNECTING BOX	U	AT	U	A	07/51	D081A0108	
J-478/GPS-6B	INTERCONNECTING BOX	U	AT	U	A	07/51	0081A0108	
J-479/CPG-6B	INTERCONNECTING BOX	U	AT	U	A	07/51	D081A0108	
J-48/APA-5	JUNCTION BOX	U	AD	AS	D	02/44	A0067	
J-48/APA-5	JUNCTION BOX	U	AD	1	NS		N0000	
J-48D/GRC-33	INTERCONNECTING BOX	U	AR	AT	U	07/51	0068A0081	
J-481/GRC-33	CONNECTOR ASSEMBLY, ELECTRICAL (CANCELLED)	U	AR	AT	U	09/53	0068A0081	
J-482/SRA-9	PANEL FILTER	U	NS	NS	NS		N0000	
J-483/BPS-4	TERMINAL BOX	U	NS	NS	NS		N0000	
J-484/BPS-4	FUSE BOX	U	NS	NS	NS		N0000	
J-485/MPG-7	INTERCONNECTING BOX (CANCELLED)	U	AT	U	NS	01/52	D081A0108	
J-486/GT	INTERCONNECTING BOX	U	AR	AT	U	08/51	0068A0081	
J-487/GT	INTERCONNECTING BOX	U	AR	AT	U	08/51	0068A0081	
J-488/GT	INTERCONNECTING BOX	U	AR	AT	U	08/51	0068A0081	
J-489/FRC-25	INTERCONNECTING BOX	U	AR	AT	U	08/51	0068A0081	
J-49/A	TERMINAL BOX	U	AD	AS	D	01/44	0000A0067	
J-49/A	TERMINAL BOX	U	AD	1	NS		N0000	
J-490/FRC-25	INTERCONNECTING BOX	U	AR	AT	U	09/51	0068A0081	
J-491/STC-1	JUNCTION BOX	U	NS	NS	1		N0000	
J-492 ()/AR	TERMINAL BOX	U	NS	1	NS		N0000	
J-493/UR	TERMINAL BOX	U	NS	1	NS		N0000	
J-494/APS-19B	JACK BOX	U	NS	NS	1		N0000	
J-495 ()/APX-17	PANEL, TEST, ELECTRICAL	U	NS	NS	1		N0000	
J-496/MPG-13	INTERCONNECTING BOX	U	AR	AT	U	00/51	0068A0081	
J-497/SRA-11	JUNCTION BOX	U	LE	LE			0000L0063	
J-498/VRC-2X	FUSE BOX	U	LE	LE			0000L0063	
J-499/GRC	INTERCONNECTING BOX	U	LE	LE	U	01/51	0068A0081	
J-5/APS-4	JUNCTION BOX	U	NS	2	NS	04/43	L0000	0017
J-5/APS-4	JUNCTION BOX	U	NS	2	NS		N0000	
J-50/TRC-6	CONNECTOR PANEL	U	LE	LE			0000L0063	
J-500/FPS-6	INTERCONNECTING BOX	U	LE	AS	D	01/52	0081A0108	
J-501/AAS-1	INTERCONNECTING BOX	U	AD	AS	D	01/52	A0068	
J-502/ARC	JACKBOX	U	LE	LE			0000L0063	
J-503/ARC	TERMINAL BOX	U	LE	LE			0000L0063	
J-504/ARC	TERMINAL BOX	U	LE	LE			0000L0063	
J-505/ARC	TERMINAL BOX	U	LE	LE			0000L0063	
J-506/ARC	TERMINAL BOX	U	LE	LE			0000L0063	
J-507 ()/FPM-29	INTERCONNECTING BOX	U	NS	2	NS		0000L0063	
J-507 ()/FPM-29	INTERCONNECTING BOX	U	NS	2	NS		N0000	
J-508/MPG-4	JUNCTION BOX	U	NS	2	NS		N0000	
J-509/USQ-1A	INTERCONNECTING BOX	U	NS	3	NS		N0000	
J-51/APG-7	JUNCTION BOX	U	AD	AS	D	01/44	0000A0067	
J-51A/APG-7	JUNCTION BOX	U	AD	AS	D	08/48	0000A0067	
J-510/SPG-10	INTERCONNECTING BOX	U	NS	NS	NS		N0000	
J-510A/SPG-10	INTERCONNECTING BOX	U	NS	NS	NS		N0000	
J-510B/SPG-10	INTERCONNECTING BOX	U	NS	NS	NS		N0000	
J-510C/SPG-10	INTERCONNECTING BOX	U	NS	NS	NS		N0000	
J-511/USG	INTERCONNECTING BOX	U	NS	3	NS		N0000	
J-512/APN-81	INTERCONNECTING BOX	U	AD	AS	D	03/52	0000A0068	
J-513/MPG-7	INTERCONNECTING BOX	U	AT	AS	D	03/52	0081A0108	
J-514/MPG-7	INTERCONNECTING BOX	U	AT	U	A	03/52	0081A0108	
J-515/APA-95	INTERCONNECTING BOX	U	AD	AS	D	04/53	0000A0068	
J-516/APS-58	INTERCONNECTING BOX	U	AD	AS	D	03/52	A0068	
J-517/G	JACK BOX	U	LE	LE			0000L0063	
J-518/APN-81	INTERCONNECTING BOX	U	AD	AS	D	04/55	0000A0068	
J-519/APA-95	INTERCONNECTING BOX	U	AD	AS	D	04/55	0000A0068	
J-52/APG-7	JUNCTION BOX	U	AD	AS	D		A0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
J-652/APQ-38	INTERCONNECTING BOX		U	AD	AS	05/54	0000A0068	
J-653/GPQ-T1	JACK ASSEMBLY, TELEPHONE		U	AD	AS	05/54	0000A0068	
J-654/G	INTERCONNECTING BOX		U	AD	AS	0000L0063		
J-655/TSQ	INTERCONNECTING BOX		U	AD	AS	N0000		
J-656/SPS	INTERCONNECTING BOX	POWER SUPPLY	U	AD	AS	N0000		
J-657/SPS	INTERCONNECTING BOX		U	AD	AS	N0000		
J-658/SPS	INTERCONNECTING BOX		U	AD	AS	N0000		
J-659/SPS	TERMINAL BOX		U	AD	AS	N0000		
J-66/A	JUNCTION BOX		U	AD	AS	A0000		
J-660/SPS	TERMINAL BOX		U	AD	AS	N0000		
J-661/APW-17	JUNCTION BOX		U	AD	AS	06/54	0000A0068	
J-662/APW-17	JUNCTION BOX		U	AD	AS	06/54	0000A0068	
J-663/SPS	INTERCONNECTING BOX		U	AD	AS	N0000		
J-664/GPX	INTERCONNECTING BOX		U	AD	AS	06/54	0081A0108	
J-665/SPQ-2	JACK BOX		U	AD	AS	N0000		
J-666/SPQ-2	INTERCONNECTING BOX		U	AD	AS	N0000		
J-667/APW-17	INTERCONNECTING BOX		U	AD	AS	07/54	0005A0124	
J-668/GR	INTERCONNECTING BOX		U	AD	AS	04/63	L00010	
J-669/APG-51	INTERCONNECTING BOX		U	AD	AS	N0000		
J-67/APG-51	JUNCTION BOX		U	AD	AS	N0000		
J-670/APG-51A	INTERCONNECTING BOX		U	AD	AS	N0000		
J-671/GPN-T2	INTERCONNECTING BOX		U	AD	AS	09/54	0068A0068	
J-672/GPX-8	INTERCONNECTING BOX		U	AD	AS	09/54	0081A0108	
J-673 (/) /FCC	INTERCONNECTING BOX		U	AD	AS	0000L0063		
J-674/ASN-8	INTERCONNECTING BOX		U	AD	AS	01/54	0005A0123	
J-675/ARN	INTERCONNECTING BOX		U	AD	AS	04/63	L0004	
J-676/ARN	INTERCONNECTING BOX		U	AD	AS	04/63	L0004	
J-677/ARN	INTERCONNECTING BOX		U	AD	AS	04/63	L0004	
J-678/MPS-19	TERMINAL BOX		U	AD	AS	01/54	0081A0108	
J-679/ALR-4	INTERCONNECTING BOX		U	AD	AS	01/54	A0068	
J-68/ARC-3	POWER JUNCTION BOX		U	AD	AS	00/50	0067A0128	
J-68A/ARC-3	POWER JUNCTION BOX		U	AD	AS	01/53	0067A0128	
J-680/MRC-45	TERMINAL BOX		U	AD	AS	02/54	0081A0108	
J-681/MRC-45	TERMINAL BOX		U	AD	AS	02/54	0081A0108	
J-682/GPN	INTERCONNECTING BOX		U	AD	AS	01/55	0081A0108	
J-683/GPA-41	INTERCONNECTING BOX	(CANCELLED)	U	AD	AS	02/55	0081A0108	
J-684 (/) /APQ-48	INTERCONNECTING BOX		U	AD	AS	01/55	N0000	0017
J-685/MPN-25	INTERCONNECTING BOX		U	AD	AS	0000L0063		
J-686/MPN-25	INTERCONNECTING BOX		U	AD	AS	0000L0063		
J-687/ARH-23	INTERCONNECTING BOX		U	AD	AS	N0000		
J-688/M	JUNCTION BOX		U	AD	AS	A0000		
J-689/A	INTERCONNECTING BOX		U	AD	AS	01/55	0000A0130	
J-69/AP	JUNCTION BOX		U	AD	AS	04/44	A0067	
J-69/AP	JUNCTION BOX		U	AD	AS	N0000		
J-690/BPS-3	JUNCTION BOX		U	AD	AS	N0000		
J-691/BPS-3	JUNCTION BOX		U	AD	AS	N0000		
J-692/APG-64	INTERCONNECTING BOX		U	AD	AS	N0000		
J-692A/APG-64	INTERCONNECTING BOX		U	AD	AS	N0000		
J-693/FSA-4A	INTERCONNECTING BOX		U	AD	AS	03/54	0081A0108	
J-694/FSA-4A	JUNCTION BOX		U	AD	AS	02/55	0081A0108	
J-694A/FSA-4A	JUNCTION BOX		U	AD	AS	02/55	0081A0108	
J-695/FSA-4A	INTERCONNECTING BOX		U	AD	AS	02/55	0081A0108	
J-696/MSQ-4	INTERCONNECTING BOX		U	AD	AS	N0000		
J-697/MSQ-4	INTERCONNECTING BOX		U	AD	AS	N0000		
J-698/MSQ-4	INTERCONNECTING BOX		U	AD	AS	N0000		
J-699/MSQ-4	INTERCONNECTING BOX		U	AD	AS	N0000		
J-7/MRN-1	JUNCTION BOX		U	AD	AS	N0000		
J-70/GPS-T1	JUNCTION BOX		U	AD	AS	N0000		
J-700/MSQ-4	TERMINAL BOX		U	AD	AS	N0000		
J-701/MSQ-4	TERMINAL BOX		U	AD	AS	N0000		
J-702/MSQ-4	INTERCONNECTING BOX		U	AD	AS	N0000		
J-703/MSQ-4	INTERCONNECTING BOX		U	AD	AS	N0000		
J-704/MSQ-4	INTERCONNECTING BOX		U	AD	AS	N0000		
J-705/APG-60	INTERCONNECTING BOX		U	AD	AS	A0000		
J-706/GPX	INTERCONNECTING BOX		U	AD	AS	04/55	0081A0108	
J-707/TPN-10	INTERCONNECTING BOX		U	AD	AS	N0000		
J-707A/TPN-10	INTERCONNECTING BOX		U	AD	AS	N0000		
J-708/FPN	JUNCTION BOX		U	AD	AS	A0000		
J-709/FPN	JUNCTION BOX		U	AD	AS	A0000		
J-71/APG-5	JUNCTION BOX		U	AD	AS	04/44	0000A0067	
J-710/FPN	TERMINAL BOX		U	AD	AS	A0000		
J-711/MPX-7	INTERCONNECTING BOX		U	AD	AS	A0000		
J-712 (/) /APW-69	INTERCONNECTING BOX		U	AD	AS	N0000		
J-713/SPG-49	INTERCONNECTING BOX		U	AD	AS	N0000		
J-714/SPG-49	INTERCONNECTING BOX		U	AD	AS	N0000		
J-715/SPG-49	INTERCONNECTING BOX		U	AD	AS	N0000		
J-716/SPG-49	INTERCONNECTING BOX		U	AD	AS	N0000		
J-717/SPG-49	INTERCONNECTING BOX		U	AD	AS	N0000		
J-718/SPG-49	INTERCONNECTING BOX		U	AD	AS	N0000		
J-719/SPG-49	INTERCONNECTING BOX		U	AD	AS	N0000		
J-72/GR	TERMINAL BOX		U	AD	AS	0000L0063		

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
J-72/GR	TERMINAL BOX		U	AD	AS			
J-720/SAS-15	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-721/SPG-49	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-722/SPG-49	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-723/FSA-4A	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-724/GPS	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-725/APS-238	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-726/FSG	MANUAL DATA INTERCONNECTING UNIT		U	AD	AS	09/57		A0018
J-727/FSG	WARNING LIGHT INTERCONNECTING UNIT		U	AD	AS	09/57		A0018
J-728/SIC	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-729/SIC	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-73 (/) /GRA-1	JACK BOX		U	AD	AS	NS 1		0000L0063
J-730/SIC	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-731/APS-64	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-733 (/) /APN-67	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-734 (/) /APN-67	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-735/MRC-32	FUSE BOX		U	AD	AS	NS 1		N0000
J-736/MPS-16	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-737/SIC	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-738/U	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-739/GPS-4	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-74/MPN	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-74/MPN	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-740/M	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-741/M	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-742/FPF-19	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-743 (/) /U	TERMINAL BOARD		U	AD	AS	NS 1		N0000
J-744 (/) /ARC	TERMINAL BOX (CANCELLED)		U	AD	AS	NS 1		N0000
J-745/FPN-28	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-746/FPN-28	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-747/FPN-28	DISTRIBUTION BOX		U	AD	AS	NS 1		N0000
J-748/FPN-28	DISTRIBUTION BOX		U	AD	AS	NS 1		N0000
J-749/FIC-11	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-75/ARC-10	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-750/FPF-19	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-751/FPF-19	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-752/FPF-19	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-753/FPF-19	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-753/SRA-4	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-754 (/) /GPA-27	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-755/FPF	DISTRIBUTION BOX		U	AD	AS	NS 1		N0000
J-756/FPF	DISTRIBUTION BOX		U	AD	AS	NS 1		N0000
J-757/FPF	DISTRIBUTION BOX		U	AD	AS	NS 1		N0000
J-758/AIC-15	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-759/MPF-7	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-76/APS-4-T1	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-760 (/) /FJQ	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-761/GPN-T2A	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-762/ARC-518	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-764/FSA-4	TERMINAL BOARD ASSEMBLY		U	AD	AS	NS 1		N0000
J-765/FSA-T1	TERMINAL BOARD ASSEMBLY		U	AD	AS	NS 1		N0000
J-766/FSA-T1	TERMINAL BOARD ASSEMBLY		U	AD	AS	NS 1		N0000
J-767/SPN-22	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-769/SPG-49	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-77/APA-28	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-770/MPF-16	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-771 (/) /DPN-41	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-772/PPA-6	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-773/MPF-16	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-774/APG-56	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-775/GRS-1	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-776/GRS-1	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-777 (/) /DRW-10	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-778/DPG-4	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-779/FPF	DISTRIBUTION BOX		U	AD	AS	NS 1		N0000
J-78/APA-28	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-780/APG-39	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-781/GPX-6A	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-782/GPX-6A	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-783/ARC-27	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-784/GSN-3	DISTRIBUTION BOX		U	AD	AS	NS 1		N0000
J-785/FRC-45	TERMINAL BOX		U	AD	AS	NS 1		N0000
J-786/DRN-1	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-787/DRN-1	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-788 (/) /DPN	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-789/BLR	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000
J-79/G	JUNCTION BOX		U	AD	AS	NS 1		N0000
J-790/FSW-1	TERMINAL BOARD ASSEMBLY		U	AD	AS	NS 1		N0000
J-791/APN-87	INTERCONNECTING BOX		U	AD	AS	NS 1		N0000

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
J-927/DSM-48	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-928/DSM-48	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-929/DSM-48	JACK BOX	UN NS 4 4 4					N0000	
J-930/VI	TERMINAL BOX	UN NS 4 4 4					N0000	
J-930/M	TERMINAL BOX	UN NS 4 4 4					N0000	
J-931/FQ0-1	JACK BOX	UN NS 3 3 3				00/57	0000L0063	0017
J-932/FQ0-1	JACK BOX	UN NS 3 3 3					N0000	
J-933/FPA-3A	INTERCONNECTING BOX	UN NS 3 3 3					N0000	
J-934/TRC-69	INTERCONNECTING BOX	UN NS 3 3 3				00/57	N0000	0017
J-935/MRN-12	DISTRIBUTION BOX	UN NS 3 3 3				00/57	A0000	0017
J-936/APS-64	INTERCONNECTING BOX	UN NS 3 3 3				01/57	A0000	0017
J-937/APS-74	INTERCONNECTING BOX	UN NS 3 3 3				01/57	A0000	0017
J-938/SPA-5A	INTERCONNECTING BOX	UN NS 3 3 3				01/57	N0000	0017
J-939/U	JACK BOX	UN NS 1 1 1					N0000	
J-939A/U	JACK BOX	UN NS 1 1 1					N0000	
J-939B/U	JACK BOX	UN NS 1 1 1					N0000	
J-94-UPM-1	DETECTOR JUNCTION BOX	UN NS 4 4 4				01/57	N0000	0017
J-940/FRT-41	INTERCONNECTING BOX	UN NS 4 4 4				01/57	A0000	0017
J-941/FRC-44	JUNCTION BOX	UN NS 1 1 1				01/57	N0000	0017
J-942/ARA-50	INTERCONNECTING BOX	UN NS 1 1 1				02/57	N0000	0017
J-943/APN-105	INTERCONNECTING BOX	UN NS 1 1 1				02/57	N0000	0017
J-944/APN-78	INTERCONNECTING BOX	UN NS 4 4 4				02/57	N0000	0017
J-945/DSM-52	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-946/DSM-52	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-947/MCC	INTERCONNECTING BOX	UN NS 4 4 4				01/58	A0000	0017
J-948/MCC	INTERCONNECTING BOX	UN NS 4 4 4				01/58	A0000	0017
J-949/MCC	INTERCONNECTING BOX	UN NS 4 4 4				01/58	A0000	0017
J-95/CRD-2	JUNCTION BOX	UN NS 4 4 4					0000L0063	
J-95A/CRD-2	JUNCTION BOX	UN NS 4 4 4					0000L0063	
J-95B/CRD-2	JUNCTION BOX	UN NS 4 4 4					0000L0063	
J-950/MCC-2	INTERCONNECTING BOX	UN NS 4 4 4				01/58	A0000	0017
J-951/FP5-20A	INTERCONNECTING BOX	UN NS 4 4 4				03/59	A0000	0017
J-951A/FP5-20A	INTERCONNECTING BOX	UN NS 4 4 4				03/59	A0000	0017
J-952/ARR-58	INTERCONNECTING BOX	UN NS 1 1 1					N0000	
J-953/ARR-58	INTERCONNECTING BOX-POWER SUPPLY	UN NS 1 1 1					N0000	
J-954/FSA-17	JACK BOX	UN NS 1 1 1					N0000	
J-955/FRR-53	TERMINAL BOX	UN NS 4 4 4				03/58	A0000	0017
J-956/GR0-6	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-957/GR0-6	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-958/GR0-6	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-959/GR0-2	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-96/CRD-2	JUNCTION BOX	UN NS 4 4 4					0000L0063	
J-960/GR0-2	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-961/GR0-2	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-962/GRS-1	INTERCONNECTING BOX	UN NS 4 4 4				04/62	A0001	
J-963/GRS-1	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-964/GRS-1	INTERCONNECTING BOX	UN NS 4 4 4				02/58	A0001	
J-965/APS-14	DISTRIBUTION BOX	UN NS 4 4 4				03/59	N0401	
J-966/AP0-72	DISTRIBUTION BOX	UN NS 4 4 4					N0401	
J-967/FP5-16AX	CIRCUIT BREAKER BOX	UN NS 4 4 4					N0000	
J-968/FP5-16AX	CIRCUIT BREAKER BOX	UN NS 4 4 4					N0000	
J-969/FP5-16AX	CIRCUIT BREAKER BOX	UN NS 4 4 4					N0000	
J-97/CRD-3	JUNCTION BOX	UN NS 8 8 8					0000L0063	
J-970/GM0-14A	INTERCONNECTING BOX	UN NS 8 8 8					N0000	
J-971/CSQ-33	INTERCONNECTING BOX	UN NS 4 4 4				01/58	A0000	0017
J-972/SPS-29	DISTRIBUTION BOX	UN NS 4 4 4					N0000	
J-973/SPS-29	DISTRIBUTION BOX	UN NS 4 4 4					N0000	
J-974/AJB-3	DISTRIBUTION BOX	UN NS 4 4 4					N0000	
J-975/ULB-5	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-976/DSM	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-977/FPA-3B	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-978/DSM	INTERCONNECTING BOX	UN NS 4 4 4				04/58	N0000	0017
J-979/FSA-14	INTERCONNECTING BOX	UN NS 4 4 4				04/58	A0001	
J-98/APS-15-71	JUNCTION BOX	UN NS 2 2 2					N0000	
J-980/FSA-14	INTERCONNECTING BOX	UN NS 2 2 2				04/58	A0001	
J-981/U	INTERCONNECTING BOX	UN NS 2 2 2				04/63	L0010	
J-982/MPW-49	INTERCONNECTING BOX	UN NS 2 2 2				06/63	L0015	
J-983/GSG	INTERCONNECTING BOX	UN NS 2 2 2					L0038	
J-984/APN-94	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-985/ASB-7	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-986/ASB-7	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-987/APN-90	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-988/FRC-47	TERMINAL BOX	UN NS 2 2 2				06/58	A0000	0017
J-989/SPG-51	TERMINAL BOX ASSEMBLY	UN NS 2 2 2					N0000	
J-99/CRD-3	JUNCTION BOX	UN NS 2 2 2					0000L0063	
J-990/ALT-68	INTERCONNECTING BOX	UN NS 2 2 2				06/58	A0000	0017
J-991/FP5-20	INTERCONNECTING BOX	UN NS 2 2 2				07/58	A0000	0017
J-992/ASB-29	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-993/TPG-4	INTERCONNECTING BOX	UN NS 4 4 4					L0058	
J-994/ASB-29	INTERCONNECTING BOX	UN NS 4 4 4					N0000	
J-995/ARM-38	DISTRIBUTION BOX	UN NS 4 4 4					N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
J-996/AP0-70	INTERCONNECTING BOX	UN NS 2 2 2				07/58	A0000	0017
J-997/FP5-6B	DISTRIBUTION BOX (CANCELLED)	UN NS 2 2 2				03/59	A0000	0017
J-998/FPN-59	DISTRIBUTION BOX	UN NS 2 2 2				09/58	A0000	0017
J-999/NR	TERMINAL BOX	UN NS 2 2 2					A0000	
JA	UNDERWATER SOUND RECEIVER	UN NS 3 3 3					N0000	
JAA	SONAR TRIANGULATION LISTENING/RANGING	UN NS 3 3 3				02/44	N0090	
JAB	SONAR TRIANGULATION LISTENING/RANGING	UN NS 3 3 3				02/44	N0090	
JBA	UNDERWATER SOUND RECEIVER	UN NS 3 3 3				02/44	N0090	
JBA	SONAR TRIANGULATION LISTENING/RANGING	UN NS 3 3 3					N0090	
JC	UNDERWATER SOUND RECEIVER	UN NS 3 3 3					N0090	
JCA	SONAR TRIANGULATION LISTENING/RANGING	UN NS 3 3 3					N0090	
JD	UNDERWATER SOUND RECEIVER	UN NS 3 3 3					N0000	
JE	UNDERWATER SOUND RECEIVER	UN NS 3 3 3					N0000	
JF	UNDERWATER SOUND RECEIVER	UN NS 3 3 3					N0000	
JG	UNDERWATER SOUND RECEIVER	UN NS 3 3 3					N0000	
JH	UNDERWATER SOUND RECEIVER	UN NS 3 3 3					N0000	
JK	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-1	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-1A	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-2	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-2A	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-2B	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-3	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-4	REASSIGNED JKA-1	UN NS 3 3 3					N0000	
JK-5	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-5A	SOUND LISTENING EQUIPMENT WITH HYDRAULIC HOIST AND ELECTRIC TRAIN	UN NS 3 3 3					N0000	
JK-6	SOUND LISTENING EQUIPMENT	UN NS 3 3 3					N0000	
JK-7	REASSIGNED JKA-1	UN NS 3 3 3					N0000	
JK-8	SOUND LISTENING EQUIPMENT MANUAL TRAIN	UN NS 3 3 3					N0000	
JK-9	H.F. LISTENING EQUIPMENT WITH HAND HOIST AND HAND TRAIN	UN NS 3 3 3					N0000	
JKA	SOUND LISTENING EQUIPMENT WITH ELECTRICAL POWER TRAIN	UN NS 3 3 3					N0000	
JKA-1	SOUND LISTENING EQUIPMENT WITH ELECTRICAL POWER TRAIN	UN NS 3 3 3					N0000	
JKA-2	SOUND LISTENING EQUIPMENT WITH ELECTRICAL POWER TRAIN	UN NS 3 3 3					N0000	
JKA-3	SOUND LISTENING EQUIPMENT WITH ELECTRICAL POWER TRAIN	UN NS 3 3 3					N0000	
JKA-4	SOUND LISTENING EQUIPMENT WITH ELECTRICAL POWER TRAIN	UN NS 3 3 3					N0000	
JKA-5	SOUND LISTENING EQUIPMENT WITH HYDRAULIC HOIST AND ELECTRIC TRAIN	UN NS 3 3 3					N0000	
JL	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-1	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-2	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-3	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-4	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-5	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-6	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-7	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-8	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JL-9	SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JM	RADIO TRANSMITTING EQUIPMENT (RADIO ACOUSTIC RANGING)	UN NS 3 3 3					N0000	
JM-1	RADIO TRANSMITTING EQUIPMENT	UN NS 3 3 3					N0000	
JM-2	RADIO TRANSMITTING EQUIPMENT	UN NS 3 3 3					N0000	
JM-3	RADIO TRANSMITTING EQUIPMENT (SONO-BUOY)	UN NS 3 3 3					N0000	
JM-4	RADIO TRANSMITTING EQUIPMENT (SONO-BUOY)	UN NS 3 3 3					N0000	
JN	PORTABLE SOUND RECEIVING EQUIPMENT (OVERBOARD TYPE FOR ALERT ALARM)	UN NS 3 3 3					N0000	
JN-1	PORTABLE SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JO	SOUND RECEIVING EQUIPMENT (ALL-DIRECTIONAL)	UN NS 3 3 3					N0000	
JP-1	(DIRECTIONAL) SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JP-1A	SEMI-DIRECTIONAL SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JP-2	SEMI-DIRECTIONAL SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JP-2A	SEMI-DIRECTIONAL SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JP-3	SEMI-DIRECTIONAL SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JP-3A	SEMI-DIRECTIONAL SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	
JP2009/ASR-5	INTERCONNECTING BOX	UN NS 3 3 3				00/64	A0099	
JR	PORTABLE SOUND RECEIVING EQUIPMENT	UN NS 3 3 3					N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDS	PROC CDS	GROUP DATE	SOURCE DATA	NOTES
JR-1		SOUND RECEIVING EQUIPMENT	U	NS	NS		N0000	
JR-2		SOUND RECEIVING EQUIPMENT	U	NS	NS		N0000	
JT		SOUND RECEIVING EQUIPMENT	U	NS	NS		N0000	
KB		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KC		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KD		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KD-1		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KD-29A		CAMERA, STILL PICTURE, RECORDING	U	NS	NS		N0101	
KE		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KE-1		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KE-2		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KE-3		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KE-4		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KF		UNDERWATER SOUND TRANSMITTER AND RECEIVER	U	NS	NS		N0000	
KF		UNDERWATER SOUND TRANSMITTER	U	NS	NS		N0000	
KS-72A (FRAME)		CAMERA, STILL PICTURE	U	NS	NS		N0101	
KS-74A (DSR)		CAMERA SET, DATA RECORDING	U	NS	NS		N0101	
KY-1/CPN-3		CODER	U	NS	NS	04/43	0000A0076	
KY-1A/CPN-3		CODER	U	NS	NS	01/45	0000A0076	0017
KY-10/CPN-3		CODER	U	NS	NS	06/63	0024A0067	0017
KY-100 (I)/MPQ-11		CODER, RADAR (CANCELLED)	U	NS	NS	02/52	N0000	
KY-101 (I)/URM-3		CODER, INDICATOR	U	NS	NS		N0000	
KY-102/UG		KEYER	U	NS	NS	08/57	N0000	
KY-103/GKA-1		CODER, DIGITAL	U	NS	NS		N0000	
KY-104/FP		CODER, LORAN	U	NS	NS		N0000	
KY-105/U		KEYER	U	NS	NS		N0000	
KY-106/SRN		KEYER	U	NS	NS		N0000	
KY-107/APQ-13-T1A		CODER, BEACON	U	NS	NS	00/52	0000A0076	
KY-108/APQ-13-T1A		CODER, BEACON	U	NS	NS	00/52	0000A0076	
KY-109/UPX-5		CODER-DECODER, INTERROGATOR SET	U	NS	NS	02/45	N0000	
KY-11/UPA-5		AUDIO DECODER-RANGE UNIT	U	NS	NS		N0090	
KY-110/UPA-37		CODER, BEACON	U	NS	NS		N0000	
KY-111/ARW		CODER, AUDIO FREQUENCY	U	NS	NS		N0000	
KY-112/AGA-1		KEYER	U	NS	NS		N0000	
KY-113/MRN-9		KEYER-SOUND REPRODUCER	U	NS	NS		N0000	
KY-114/UPX-8		DECODER, TRANSPONDER SET	U	NS	NS		N0000	
KY-116/U		KEY, TELEGRAPH	U	NS	NS		0000L0063	
KY-117 (I)/DRW		AUDIO DECODER	U	NS	NS	03/53	N0000	0017
KY-118/GFY		DECODER, VIDEO	U	NS	NS	03/53	A0018	
KY-119/GPX		DECODER, VIDEO	U	NS	NS	03/53	A0018	
KY-12/UPX		AUDIO DECODER-RANGE UNIT	U	NS	NS	02/45	N0090	
KY-120/GPX		CODER, INTERROGATOR SET	U	NS	NS	03/53	A0018	
KY-121/GKA		CODER-MONITOR	U	NS	NS	03/53	A0018	
KY-122/URN		KEYER	U	NS	NS		N0000	
KY-122A/URN		KEYER	U	NS	NS		N0102	
KY-123/URN		KEYER	U	NS	NS		N0000	
KY-123A/URN		KEYER	U	NS	NS		N0000	
KY-123B/URN		KEYER	U	NS	NS		N0000	
KY-124/MSA-2		KEYER	U	NS	NS	02/63	0086N0087	
KY-125 (I)/SPM-2		VIDEO DECODER	U	NS	NS	05/53	A0018	0017
KY-126 (I)/SPM-3		VIDEO DECODER	U	NS	NS	05/53	N0000	0017
KY-127/GG		KEYER	U	NS	NS		0000L0063	
KY-128/U		KEY, TELEGRAPH (CANCELLED)	U	NS	NS		0000L0063	
KY-129/SAT-2		KEY, TELEGRAPH	U	NS	NS		N0000	
KY-13/UPX		VIDEO DECODER UNIT	U	NS	NS	02/45	N0090	
KY-130/SPQ-5		KEYER ASSEMBLY	U	NS	NS	4-03/65	N0101	
KY-131/SRC-7		KEYER	U	NS	NS		0000L0063	
KY-132/U		KEYER	U	NS	NS		N0000	
KY-133/ARW-66		CODER, AUDIO FREQUENCY	U	NS	NS		N0000	
KY-134/ARA-26		KEYER	U	NS	NS	00/53	0000A0076	
KY-135/FSA-9		DECODER, VIDEO	U	NS	NS	00/53	A0019	
KY-136/UPA-38		CODER, VIDEO	U	NS	NS		N0021	
KY-137/UPA-39		CODER-DECODER, VIDEO	U	NS	NS		N0021	
KY-137A/UPA-39		CODER-DECODER, VIDEO	U	NS	NS		N0021	
KY-138/M		RADAR CODER	U	NS	NS		N0021	
KY-139/ARW		DECODER, AUDIO	U	NS	NS	09/54	L0000	0017
KY-14/U		KEYING HEAD	U	NS	NS	01/54	0076A0128	
KY-141/DSM		CODER	U	NS	NS	02/55	0000L0063	0017
KY-142/GRD-6		DECODER-DISTRIBUTOR, TELETYPEWRITER	U	NS	NS		N0096	
KY-143/DSM-1		DECODER, COMMAND SIGNAL	U	NS	NS	02/56	A0005	
KY-144/MPS-19		CODER, BEACON	U	NS	NS	02/63	A0018	
KY-145/DPW		VIDEO CODER	U	NS	NS	04/54	N0000	0017
KY-146/SPQ-T1		KEYER	U	NS	NS	05/54	0076A0108	
KY-147/DPM-1		VIDEO CODER	U	NS	NS	05/54	N0000	0017
KY-148/APX		CODER-DECODER (CANCELLED)	U	NS	NS	01/63	A0076	
KY-149/AR		KEYER	U	NS	NS		0000L0063	
KY-149A/AR		KEYER	U	NS	NS	04/63	L0004	
KY-15 (I)/CPX-4		CODER	U	NS	NS		0000A0130	0017
KY-15/CPX-4		CODER	U	NS	NS	05/45	N0000	0017

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDS	PROC CDS	GROUP DATE	SOURCE DATA	NOTES
KY-150/MRQ-7		AUDIO FREQUENCY CODER	U	NS	NS	06/54	L0000	0017
KY-156 (I)/URW		DECODER, AUDIO	U	NS	NS		0000L0063	
KY-157/DS		CODER, VIDEO	U	NS	NS		N0000	0017
KY-158/DS		DECODER, VIDEO	U	NS	NS		N0000	0017
KY-159DS		CODER, VIDEO	U	NS	NS		N0000	0017
KY-16/APN-3		CODER	U	NS	NS	06/45	0076A0131	0017
KY-160/DS		DECODER, VIDEO	U	NS	NS		N0000	
KY-161/FPN		KEYER	U	NS	NS		N0000	
KY-162/APA-16		DECODER, VIDEO	U	NS	NS	08/60	A0076	
KY-163/GPA-29		DECODER, VIDEO	U	NS	NS		N0000	
KY-164/DS		CODER, VIDEO	U	NS	NS	09/54	0107A0109	0017
KY-165/DS		DECODER, VIDEO	U	NS	NS		N0000	0017
KY-166/GPX-8		CODER, BEACON	U	NS	NS	05/57	A0018	
KY-167/GRD-6		DECODER-SELECTOR-STORAGE ASSEMBLY	U	NS	NS		N0000	
KY-168/GRD-6		CODER, TELETYPEWRITER	U	NS	NS		0092A0096	
KY-169/GSA-1		CODER, TELETYPEWRITER	U	NS	NS		N0092	
KY-169/GSA-1		CODER, TELETYPEWRITER	U	NS	NS	3-06/64	N0096	
KY-17/CPN-2		DECODER	U	NS	NS	06/45	0000A0076	
KY-170/GSA-1		CODER, TELETYPEWRITER	U	NS	NS	3-06/64	N0096	
KY-171/URN		DECODER, AUDIO FREQUENCY	U	NS	NS		N0000	0017
KY-172/URN		DECODER, AUDIO	U	NS	NS		N0000	0017
KY-172A/URN		DECODER, AUDIO	U	NS	NS		N0000	
KY-172B/URN		DECODER, AUDIO	U	NS	NS		N0000	
KY-173 (I)/TRN		KEYER (CANCELLED)	U	NS	NS		N0000	
KY-174/TSQ		KEYER	U	NS	NS	02/55	0000L0063	
KY-175/FRN		KEYER	U	NS	NS		A0019	
KY-176/GSA-3		CODER, TRANSPONDER SET	U	NS	NS		0000L0063	
KY-176/GSA-3		CODER, TRANSPONDER SET (CANCELLED)	U	NS	NS		A0000	
KY-177 (I)/URW		CODER, AUDIO FREQUENCY	U	NS	NS	08/56	A0077	
KY-178/TPM-18		CODER, BEACON	U	NS	NS		0000L0063	
KY-179/SPG-49		KEYER	U	NS	NS	02/59	A0018	
KY-18/SPX		VIDEO DECODER	U	NS	NS		N0000	0017
KY-180/GPA-29		DECODER, VIDEO	U	NS	NS		N0000	
KY-181 (I)/ASA-18		DECODER, VIDEO	U	NS	NS	05/55	0107A0109	0017
KY-182 (I)/URW		CODER, AUDIO FREQUENCY	U	NS	NS	09/55	0000L0063	
KY-183 (I)/URW		DECODER, AUDIO FREQUENCY	U	NS	NS		0000L0063	
KY-184 (I)/URW		DECODER, AUDIO FREQUENCY	U	NS	NS		0000L0064	
KY-185/UPA-41		KEYER	U	NS	NS	09/55	A0019	
KY-186/GRA-26		KEYER	U	NS	NS	09/55	A0077	
KY-187/APX-31		CODER-DECODER	U	NS	NS	09/55	A0077	
KY-188/FSA-10		CODER, VIDEO	U	NS	NS	05/57	A0005	
KY-189/ASA-18		CODER, AUDIO FREQUENCY	U	NS	NS	05/57	A0019	
KY-19 (I)/TRA-15		KEYER	U	NS	NS	05/57	A0077	
KY-190 (I)/ARA-66		CODER, AUDIO FREQUENCY	U	NS	NS	03/63	L0001	
KY-191 (I)/TPX		CODER-DECODER, INTERROGATOR SET	U	NS	NS	04/63	N0000	
KY-192/FQ3-1		CODER-TIMER	U	NS	NS		L0002	
KY-193/GSN		CODER-TRANSMITTER	U	NS	NS		N0000	
KY-194/GKA-2		CODER-CONVERTER, SIGNAL DATA	U	NS	NS	01/57	A0077	
KY-195/FSA-11		KEYER	U	NS	NS	08/57	A0077	
KY-196/GPA-60		DECODER, VIDEO	U	NS	NS		N0000	
KY-197/URA-19		DECODER, AUDIO FREQUENCY	U	NS	NS		N0031	
KY-198/URA-19		DECODER, AUDIO FREQUENCY	U	NS	NS	05/56	A0077	
KY-199/DRW-10		DECODER, COMMAND SIGNALS	U	NS	NS	05/56	A0077	
KY-2/APN-T1		CODE SELECTOR	U	NS	NS	3-01/64	0096A0123	
KY-20/UPX		KEYER	U	NS	NS	07/43	0000A0076	
KY-200/UPX-12		DECODER, TRANSPONDER SET	U	NS	NS	02/47	N0090	
KY-200A/UPX-12		DECODER, TRANSPONDER SET	U	NS	NS		N0021	
KY-200B/UPX-12		DECODER, TRANSPONDER SET	U	NS	NS		N0021	
KY-201/UGT-1		KEYER	U	NS	NS		N0021	
KY-202/ARW-53		DECODER-MODULATOR (CANCELLED)	U	NS	NS	06/63	L0022	
KY-203/GPN		DECODER, COMMAND SIGNALS	U	NS	NS	00/56	A0077	
KY-204/APA-117		DECODER, TRANSPONDER SET	U	NS	NS	06/56	A0077	
KY-205/GPA-56		CODER-DECODER, INTERROGATOR SET	U	NS	NS	07/56	A0077	
KY-206/GPA-36		DECODER, VIDEO	U	NS	NS		N0000	
KY-207/DPW		VIDEO DECODER	U	NS	NS	08/56	A0077	
KY-208/GRM-9		DECODER, PULSE	U	NS	NS	03/65	N0101	
KY-209/GRM-9		KEYER-SYNCHRONIZER	U	NS	NS	09/56	A0077	
KY-21/GSA-1A		CODER	U	NS	NS	09/56	A0077	
KY-210/U		KEYER, FREQUENCY SHIFT	U	NS	NS		0000L0063	
KY-211/U		KEYER, FREQUENCY SHIFT	U	NS	NS	06/57	A0077	
KY-212/PSM		CODER, AUDIO FREQUENCY	U	NS	NS	06/57	A0077	
KY-213/PSM		KEYER	U	NS	NS	09/56	0077A0131	
KY-214/BRA-4		KEYER	U	NS	NS		N0089	
KY-215/ARA-36		KEYER-POWER SUPPLY	U	NS	NS	1-00/56	A0077	
KY-216/DRN-4		KEYER (CANCELLED)	U	NS	NS	06/56	A0127	
KY-216/DRN-4		KEYER	U	NS	NS	06/56	A0077	
KY-217/URC		CODER	U	NS	NS	00/56	A0077	
KY-218/F38		CODER	U	NS	NS	00/56	A0077	
KY-219/APX-34		CODER-DECODER	U	NS	NS	00/56	A0077	
KY-220/UR		KEYER	U	NS	NS	01/56	A0077	
KY-221 (I)/DSM-18		CODER-MODULATOR	U	NS	NS	03/57	0077A0131	0017

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDE	PRIC CDE	GROUP DATE	SOURCE DATA	NOTES
	KY-73 (1) /DPW	DECODER, VIDEO	U	NS	4		N0000	0017
	KY-74/DPW	DECODER, VIDEO	U	NS	4		N0000	0017
	KY-75/SRT	KEYER	U	NS	4		N0000	
	KY-76/URN	BEACON, CODER	U	NS	4		N0000	
	KY-76A/URN	BEACON, CODER	U	NS	4		N0000	
	KY-76B/URN	CODER, RADIO BEACON	U	NS	4		N0000	
	KY-76C/URN	CODER, RADIO BEACON	U	NS	4		N0000	
	KY-77/U	KEYER	U	NS	4		N0000	
	KY-78/MPQ-10	KEYER	U	NS	4		N0000	
	KY-79/UR	KEYER	U	NS	4		N0000	
	KY-80/UPX	KEYER	U	NS	4		N0000	
	KY-80A/UPA-24	DECODER, VIDEO	U	NS	4		N0000	
	KY-81/UPA-24	DECODER, VIDEO	U	NS	4		N0000	
	KY-81A/UPA-89	CODER, VIDEO	U	NS	4		N0000	
	KY-81B/UPA-89	CODER, VIDEO	U	NS	4		N0000	
	KY-81C/UPA-89	CODER, VIDEO	U	NS	4		N0000	
	KY-82/FRR	KEYER	U	NS	4		N0000	
	KY-83/S	KEYER	U	NS	4		N0000	
	KY-83A/S	KEYER	U	NS	4		N0000	
	KY-84/APX-7	CODER-SYNCHRONIZER	U	NS	4		N0000	
	KY-84A/APX-7	CODER-SYNCHRONIZER	U	NS	4		N0000	
	KY-84B/APX-7	CODER-SYNCHRONIZER	U	NS	4		N0000	
	KY-85/MPN	KEYER	U	NS	4		N0000	
	KY-86/APN	KEYER	U	NS	4		N0000	
	KY-87 (1) /ALQ	KEYER	U	NS	4		N0000	
	KY-88/UPX-5	DECODER	U	NS	4		N0000	
	KY-88A/UPA-5	DECODER	U	NS	4		N0000	
	KY-88B/UPX-5	DECODER	U	NS	4		N0000	
	KY-89/MPQ-10-T1	KEYER	U	NS	4		N0000	
	KY-9 (1) /TRA-16	KEYER (CANCELLED)	U	NS	4		N0000	
	KY-90 (1) /DPW	DECODER, VIDEO	U	NS	4		N0000	
	KY-91/GPX-21	DECODER, VIDEO (CANCELLED)	U	NS	4		N0000	
	KY-92/GPX-21	DECODER, VIDEO (CANCELLED)	U	NS	4		N0000	
	KY-94/GPI	CODER, BEACON	U	NS	4		N0000	
	KY-95/APX-25	CODER, TRANSDUCER SET	U	NS	4		N0000	
	KY-95A/APX-25	CODER, TRANSDUCER SET	U	NS	4		N0000	
	KY-96 (1) /APA-120	KEYER	U	NS	4		N0000	
	KY-97/TPX	CODER-CONTROL, INTERROGATOR SET	U	NS	4		N0000	
	KY-97A/TPX	CODER-CONTROL, INTERROGATOR SET	U	NS	4		N0000	
	KY-97B/TPX	CODER-CONTROL, INTERROGATOR SET	U	NS	4		N0000	
	KY-97C/TPX	CODER-CONTROL, INTERROGATOR SET	U	NS	4		N0000	
	KY-98/TPX	CODER-DECODER	U	NS	4		N0000	
	KY-98A/TPX	CODER-DECODER	U	NS	4		N0000	
	KY-99/TPX	CODER-CONTROL, INTERROGATOR SET	U	NS	4		N0000	
	LA	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LA-277A	BODY CAMERA, STILL PICTURE	U	NS	4		N0000	
	LA-278A	MAGAZINE, CAMERA, STILL PICTURE	U	NS	4		N0000	
	LA-283A	CASSETTE, CAMERA TAKE-UP AND/OR SUPPLY	U	NS	4		N0000	
	LA-285A	DETECTOR, PHOTOFLASH, CAMERA CONTROL	U	NS	4		N0000	
	LA-292A	CASSETTE, AERIAL PHOTOGRAPHIC FILM	U	NS	4		N0000	
	LA-293A	EJECTOR ASSEMBLY, AERIAL PHOTOGRAPHIC FILM	U	NS	4		N0000	
	LA-304A	CONTROL, EXPOSURE FREQUENCY	U	NS	4		N0000	
	LA-307A	EJECTOR, AERIAL PHOTOFLASH CARTRIDGE	U	NS	4		N0000	
	LA-308A	EJECTOR, AERIAL PHOTOFLASH CARTRIDGE	U	NS	4		N0000	
	LA-309A	DISTRIBUTION BOX	U	NS	4		N0000	
	LA-310A	MOUNT, AIRCRAFT CAMERA, PARAMETER	U	NS	4		N0000	
	LA-311A	CASSETTE-EJECTOR SET, AERIAL PHOTOGRAPHIC	U	NS	4		N0000	
	LA-33A	FREQUENCY MEASURING EQUIPMENT	U	NS	4		N0000	
	LAA	FREQUENCY MEASURING EQUIPMENT	U	NS	4		N0000	
	LAB	FREQUENCY MEASURING EQUIPMENT	U	NS	4		N0000	
	LAC	FREQUENCY MEASURING EQUIPMENT	U	NS	4		N0000	
	LAD	UHF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAF	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAE-1	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAE-2	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAE-3	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAE-4	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAF-1	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAF-2	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAF-3	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAC	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAC-1	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAM	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAI	AUDIO OSCILLATOR EQUIPMENT	U	NS	4		N0000	
	LAI-1	AUDIO OSCILLATOR EQUIPMENT	U	NS	4		N0000	
	LAI-2	AUDIO OSCILLATOR EQUIPMENT	U	NS	4		N0000	
	LAI-3	AUDIO OSCILLATOR EQUIPMENT	U	NS	4		N0000	
	LAI-4	AUDIO OSCILLATOR EQUIPMENT	U	NS	4		N0000	
	LAR	RF SIGNAL GENERATOR EQUIPMENT	U	NS	4		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDE	PRIC CDE	GROUP DATE	SOURCE DATA	NOTES
	LAL	RF GENERATOR EQUIPMENT	U	NS	4		N0000	
	LAM	FREQUENCY CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LB	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LC	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LC-A	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LC-201/GT	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LC-202/GT	SLEEVEING	U	NS	4		N0000	
	LC-203/GT	SLEEVEING	U	NS	4		N0000	
	LC-204/GT	SLEEVEING	U	NS	4		N0000	
	LC-205/GT	CABLE SPINNER	U	NS	4		N0000	
	LC-206/GT	SPLICING KIT	U	NS	4		N0000	
	LC-207/GT	VULCANIZER	U	NS	4		N0000	
	LC-208/T	GRIP	U	NS	4		N0000	
	LC-209/T	GRIP	U	NS	4		N0000	
	LC-209A/T	GRIP	U	NS	4		N0000	
	LC-210/T	GRIP	U	NS	4		N0000	
	LC-211/T	GRIP	U	NS	4		N0000	
	LC-212/T	GRIP	U	NS	4		N0000	
	LC-213/T	GRIP	U	NS	4		N0000	
	LC-214/T	GRIP	U	NS	4		N0000	
	LC-215/U	GLOVES	U	NS	4		N0000	
	LC-216/T	MANHOLE FORM	U	NS	4		N0000	
	LC-217/T	MANHOLE FORM	U	NS	4		N0000	
	LC-218/P	CLIMBERS	U	NS	4		N0000	
	LC-219/T	PULLEY	U	NS	4		N0000	
	LC-220 (1) /T	BRUSH	U	NS	4		N0000	
	LC-221 (1) /T	BRUSH	U	NS	4		N0000	
	LC-222/T	CABLE GUIDE	U	NS	4		N0000	
	LC-223/T	GRIP	U	NS	4		N0000	
	LC-225/FT	CABLE LASHING MACHINE	U	NS	4		N0000	
	LC-226 (1) /MT	FLOW	U	NS	4		N0000	
	LC-227/G	CLIMBERS KIT	U	NS	4		N0000	
	LC-228 (1) /GT	LASHER-DISPENSER	U	NS	4		N0000	
	LC-229 (1) /M	LINE CONSTRUCTION MACHINE	U	NS	4		N0000	
	LC-230 (1) /T	MANHOLE FORM	U	NS	4		N0000	
	LC-231/FT	CABLE LASHING MACHINE	U	NS	4		N0000	
	LC-232/U	EXTENSION LADDER	U	NS	4		N0000	
	LC-233/U	GLOVES	U	NS	4		N0000	
	LC-234/U	GLOVES	U	NS	4		N0000	
	LC-235/U	GLOVES	U	NS	4		N0000	
	LC-236/MT	CABLE LAYER UNDERGROUND	U	NS	4		N0000	
	LC-237/GT	PIKE POLE	U	NS	4		N0000	
	LC-238 (1) /GT	EARTHBOILER AND POLE SETTER	U	NS	4		N0000	
	LC-239 (1) /MTQ	EARTHBOILER AND POLE SETTER, TRUCK MOUNTED	U	NS	4		N0000	
	LC-240/U	CLIMBERS	U	NS	4		N0000	
	LC-241/U	CLIMBERS, POLE	U	NS	4		N0000	
	LC-242/U	BLOCK, TACKLE	U	NS	4		N0000	
	LC-243/G	CLIMBERS, POLE	U	NS	4		N0000	
	LC-244/G	CLIMBERS, TREE	U	NS	4		N0000	
	LC-245 (1) /M	AUGER, EARTH, TRUCK MOUNTED	U	NS	4		N0000	
	LC-246 (1) /G	GUIDE, CABLE PULLING	U	NS	4		N0000	
	LC-247/BRA-8	PULLEY	U	NS	4		N0000	
	LC-248/BRA-8	PULLEY	U	NS	4		N0000	
	LC-249/FLM-31	CUTTER-ELECTRICAL CABLE	U	NS	4		N0000	
	LC-250/BRA-8A	PULLEY	U	NS	4		N0000	
	LD-1	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LD-2	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LD-3	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LD-4	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LE	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LF	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LF-A	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LG	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LH	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LI	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LI-1	CALIBRATING EQUIPMENT	U	NS	4		N0000	
	LK-1	DRIFT FREQUENCY INDICATOR	U	NS	4		N0000	
	LM	DRIFT FREQUENCY INDICATOR	U	NS	4		N0000	
	LM-1	CRYSTAL CALIBRATED FREQUENCY INDICATING E	U	NS	4		N0000	
	LM-10	CRYSTAL CALIBRATED FREQUENCY INDICATING E	U	NS	4		N0000	
	LM-104 (1)	LEAD, ELECTRICAL	U	NS	4		N0000	
	LM-11	CRYSTAL CALIBRATED FREQUENCY INDICATING E	U	NS	4		N0000	
	LM-12	CRYSTAL CALIBRATED FREQUENCY INDICATING E	U	NS	4		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
	LM-13	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-15	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-15A	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-16	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-17	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-18	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-19	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-2	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-20	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-201/U	LAMP	U	UN	4 NE 4		N0000	
	LM-202/U	LAMP	U	UN	4 NE 4		N0000	
	LM-21	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-3	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-4	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-4A	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-5	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-6	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-7	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-8	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM-9	CRYSTAL CALIBRATED FREQUENCY INDICATING EQUIPMENT	E	UN	4 NE 4		N0000	
	LM	ALIGNMENT OSCILLATOR	U	NS	4 NE 4		N0000	
	LO-1	BEAT FREQUENCY OSCILLATOR EQUIPMENT	U	NS	4 NE 4		N0000	
	LO-2	BEAT FREQUENCY OSCILLATOR EQUIPMENT	U	NS	4 NE 4		N0000	
	LO-3	BEAT FREQUENCY OSCILLATOR EQUIPMENT	U	NS	4 NE 4		N0000	
	LO-4	BEAT FREQUENCY OSCILLATOR EQUIPMENT	U	NS	4 NE 4		N0000	
	LP	RF STANDARD SIGNAL GENERATOR EQUIPMENT	U	NS	1 NS 1		N0000	
	LP-1	RF STANDARD SIGNAL GENERATOR EQUIPMENT	U	NS	1 NS 1		N0000	
	LP-2	RF STANDARD SIGNAL GENERATOR EQUIPMENT	U	NS	1 NS 1		N0000	
	LP-3	RF STANDARD SIGNAL GENERATOR EQUIPMENT	U	NS	1 NS 1		N0000	
	LP-4	RF STANDARD SIGNAL GENERATOR EQUIPMENT	U	NS	1 NS 1		N0000	
	LP-5	RF STANDARD SIGNAL GENERATOR EQUIPMENT	U	NS	1 NS 1		N0000	
	LR	HETERODYNE FREQUENCY METER	U	NS	4 NE 4		N0000	
	LR-1	COMBINED HETERODYNE FREQUENCY METER AND CRYSTAL CONTROLLED CALIBRATION EQUIPMENT	C	UN	4 NE 4		N0000	
	LR-2	COMBINED HETERODYNE FREQUENCY METER AND CRYSTAL CONTROLLED CALIBRATION EQUIPMENT	C	UN	4 NE 4		N0000	
	LR-3	COMBINED HETERODYNE FREQUENCY METER AND CRYSTAL CONTROLLED CALIBRATION EQUIPMENT	C	UN	4 NE 4		N0000	
	LRN-1	LORAN	U	NS	1 NS 1		N0000	
	LRN-1A	LORAN	U	NS	1 NS 1		N0000	
	LRN-1AB	LORAN	U	NS	1 NS 1		N0000	
	LRN-1AM	LORAN	U	NS	1 NS 1		N0000	
	LRN-1B	LORAN	U	NS	1 NS 1		N0000	
	LRN-1M	LORAN	U	NS	1 NS 1		N0000	
	LS	SQUADRON SIGNAL GENERATOR EQUIPMENT	U	NS	1 NS 1		N0000	
	LS-1/GR	MULTIPLE-AUDIO-MONITOR	U	NS	2 NS 2		N0000	
	LS-101/GR	MULTIPLE-AUDIO-MONITOR	U	NS	1 NS 1		N0000	
	LS-102/GR	MULTIPLE-AUDIO-MONITOR	U	NS	1 NS 1		N0000	
	LS-103/TIQ-2	LOUDSPEAKER	U	LE	LE		0000L0064	
	LS-103A/TIQ-2	LOUDSPEAKER	U	LE	LE		0000L0064	
	LS-103B/TIQ-2	LOUDSPEAKER	U	LE	LE		0000L0064	
	LS-104/TIQ-3	LOUDSPEAKER	U	LE	LE		0000L0064	
	LS-104A/TIQ-3	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-105/MPN-1A	SPEAKER UNIT	U	NS	2 NS 2		N0000	
	LS-106/MPN-1A	SPEAKER UNIT	U	NS	2 NS 2		N0000	
	LS-107/GN0-2	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-108/TIC-1	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-109/GN0-2	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-110/PIQ-1	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-111/UIQ-1	LOUDSPEAKER	U	LE	LE		0000L0063	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
	LS-111A/UIQ-1	LOUDSPEAKER	U	LE	LE		L0000	
	LS-111B/UIQ-1	LOUDSPEAKER, PERMANENT MAGNET	U	LE	LE		L0025	
	LS-112/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-113/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-114/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-115/A1Q-1	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-116/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-117/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-118/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-119/U	LOUDSPEAKER	U	LE	LE		L0000	
	LS-120/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-121/U	LOUDSPEAKER ASSEMBLY	U	LE	LE		L0000	
	LS-122/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-123/U	LOUDSPEAKER	U	LE	LE		0000L0063	
	LS-124/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-124A/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-124B/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-124C/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-124D/F1	INTERCOMMUNICATING STATION	U	LE	LE		L0009	
	LS-125/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-125A/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-125B/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-125C/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-126/F1	INTERCOMMUNICATING STATION	U	LE	LE		L0018	
	LS-126A/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-126B/F1	INTERCOMMUNICATING STATION	U	LE	LE		L0004	
	LS-127/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-127A/F1	INTERCOMMUNICATING STATION	U	LE	LE		L0000	
	LS-127B/F1	INTERCOMMUNICATING STATION	U	LE	LE		L0000	
	LS-127C/F1	INTERCOMMUNICATING STATION	U	LE	LE		L0020	
	LS-128/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-128A/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-128B/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-129/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-129A/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-130/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-130A/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-130B/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-130C/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-131/A1C	LOUDSPEAKER	U	LE	LE		N0000	
	LS-132/A1C-7	LOUDSPEAKER	U	LE	LE		N0000	
	LS-133/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-134/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-135/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-136/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-137/F1	INTERCOMMUNICATING STATION	U	LE	LE		0000L0063	
	LS-138/U	INTERCOMMUNICATING STATION	U	LE	LE		L0000	
	LS-139/G	LOUDSPEAKER ASSEMBLY	U	NS	NS		N0000	
	LS-140/U	LOUDSPEAKER	U	NS	NS		06/47	0017
	LS-141/U	LOUDSPEAKER	U	NS	NS		04/48	0017
	LS-142/U	LOUDSPEAKER	U	NS	NS		05/48	0017
	LS-143/PPF	LOUDSPEAKER	U	NS	NS		06/48	0017
	LS-144/U	LOUDSPEAKER	U	NS	NS		06/48	0017
	LS-145/U	LOUDSPEAKER	U	NS	NS		06/48	0017
	LS-146/U	LOUDSPEAKER	U	NS	NS		03/49	0017
	LS-147/F1	INTERPHONE STATION	U	LE	LE		0000L0063	
	LS-147A/F1	INTERCOMMUNICATION STATION	U	LE	LE		L0009	
	LS-147B/F1	INTERCOMMUNICATION STATION	U	LE	LE		06/63	0017
	LS-147C/F1	INTERCOMMUNICATION STATION	U	LE	LE		06/63	L0014
	LS-147D/F1	INTERCOMMUNICATION STATION	U	LE	LE		06/63	L0015
	LS-148/U	LOUDSPEAKER ASSEMBLY	U	LE	LE		0000L0063	
	LS-149/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-150/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-151/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-152/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-153/TIP-2	LOUDSPEAKER ASSEMBLY	U	NS	NS		N0000	
	LS-154/U	SPEAKER ASSEMBLY	U	LE	LE		0000L0063	
	LS-154A/U	SPEAKER ASSEMBLY	U	LE	LE		0000L0063	
	LS-155/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-156/FRC	DYNAMIC LOUSPEAKER	U	LE	LE		0000L0063	
	LS-157/F1	TELEPHONE	U	LE	LE		0000A078	
	LS-158/U	LOUDSPEAKER, DYNAMIC	U	LE	LE		0000L0063	
	LS-159/U	DYNAMIC LOUSPEAKER	U	LE	LE		0000L0063	
	LS-160/U	DYNAMIC LOUSPEAKER	U	LE	LE		0000L0063	
	LS-161/PRC-1	ELECTRIC PHONE	U	NS	NS		N0000	
	LS-162/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-163/WRM-2	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-164/WRM-2	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-165/U	MAGNETIC LOUSPEAKER	U	NS	NS		N0000	
	LS-166/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	
	LS-167/U	DYNAMIC LOUSPEAKER	U	NS	NS		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
	LS-168/U	DYNAMIC SPEAKER	U	NS	1	NS	N0000	
	LS-169/U	PERMANENT MAGNET LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-170/PPF-1	DYNAMIC LOUDSPEAKER	U	NS	1	NS	0000L0063	09/61
	LS-170A/PPF-1	DYNAMIC LOUDSPEAKER	U	NS	1	NS	0000L0064	
	LS-171/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-172/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-173/CRC	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-173A/CRC	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-173A/GRC	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-174/U	SPEAKER ASSEMBLY	U	NS	1	NS	N0000	
	LS-175/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-176 () /FPN-10	AUDIO FREQUENCY MONITOR	U	NS	1	NS	N0000	
	LS-179/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-180/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-181/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-182/BGR-3A	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-183/PIF-1	LOUDSPEAKER-MICROPHONE	U	NS	1	NS	N0000	
	LS-183A/PIF-1	LOUDSPEAKER-MICROPHONE	U	NS	1	NS	N0000	
	LS-184/AIC-10	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-184A/ATC-10	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-185/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-185A/U	DYNAMIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-186/U	LOUDSPEAKER, MAGNETIC	U	NS	1	NS	N0000	
	LS-187/U	MAGNETIC LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-188/ATA-4A	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-189/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-190/TRQ-3	MONITOR, AUDIO FREQUENCY	U	NS	1	NS	N0000	
	LS-191/U	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-191A/U	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-192/SIC-1	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-193/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-194/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-195/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-196/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-197/ATP	LOUDSPEAKER-MICROPHONE	U	NS	1	NS	N0000	
	LS-198/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-199/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-200/F1	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-201/F1	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-202/F1	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-203/U	LOUDSPEAKER, PERMANENT MAGNET.	U	NS	1	NS	N0000	
	LS-204/U	LOUDSPEAKER, PERMANENT MAGNET.	U	NS	1	NS	N0000	
	LS-205/U	LOUDSPEAKER, MAGNETIC	U	NS	1	NS	N0000	
	LS-206 () /U	LOUDSPEAKER ASSEMBLY	U	NS	1	NS	N0000	
	LS-207/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-208/U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-209/GQ3-T	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-210/F95	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-211/ATC-13	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-212/G	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-213/G	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-214/M	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-215/U	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-216/MPQ-25	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-217/GTW-1	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-218/GTW-1	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-219 () /U	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-220/GP9-T1	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-221 () /GTH-1	LOUDSPEAKER, MICROPHONE	U	NS	1	NS	N0000	
	LS-222/MP5-19	LOUDSPEAKER, ELECTROMAGNETIC	U	NS	1	NS	N0000	
	LS-223/GPN-6	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-224/MSQ-1A	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-225/MRC-45	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-225A/MRC-45	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-226/GP3-3	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-227 () /ATC-12	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-228/U	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-229/MSQ-1A	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-230/G50	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-231/G50	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-231A/G50	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-232/G50	INTERCOMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-233/G50	INTERCOMMUNICATION-MONITOR STATION.	U	NS	1	NS	N0000	
	LS-234/U	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-235/U	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-236/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-237/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-238/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-239/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-240/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
	LS-241/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-242/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-243/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-244/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-245/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-246/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-247/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-248/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-249/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-250/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-251/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-252/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-253/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-253A/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-254/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-254A/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-255/U	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-256/U	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-257/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-258/FIC-T1	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-259/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-260/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-261/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-262/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-263/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-264/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-265/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-266/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-267/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-268/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-269/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-270/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-271/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-272/UNS-1	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-273/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-274/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-275/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-275A/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-276/FIC-T1	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-277/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-278/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-279/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-280/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-281/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-282/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-283/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-284/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-285/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-286/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-287/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-288/SIC	LOUDSPEAKER, MAGNETIC	U	NS	1	NS	N0000	
	LS-289/SIC	LOUDSPEAKER, MAGNETIC	U	NS	1	NS	N0000	
	LS-290/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-291/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-292/SIC	PERMANENT MAGNET LOUDSPEAKER	U	NS	1	NS	N0000	
	LS-293/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-294/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-295/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-296/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-297/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-298/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-299/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-300/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-301/SIC	LOUDSPEAKER, PERMANENT MAGNET	U	NS	1	NS	N0000	
	LS-302/SIC	INTER COMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-303/SIC	INTER COMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-304/SIC	INTER COMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-305/SIC	INTER COMMUNICATION STATION	U	NS	1	NS	N0000	
	LS-306/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-307/SIC	LOUDSPEAKER, DYNAMIC	U	NS	1	NS	N0000	
	LS-308/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-309/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-310/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-311/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-312/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-313/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-314/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	
	LS-315/SIC	LOUDSPEAKER, ASSEMBLY	U	NS	1	NS	N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
M-30A/U		MICROPHONE, DYNAMIC	U	AT	AT	06/63	L0023	
M-31/U		MICROPHONE, DYNAMIC	U	AT	AT		0000L0063	
M-32A/SIC		MICROPHONE, STATION	U	AT	AT		N0000	
M-32B/AIC		MICROPHONE, DYNAMIC	U	AT	AT	07/55	0107A0109	
M-32B/AIC		MICROPHONE, DYNAMIC	U	AT	AT	06/57	0107A0109	
M-33/AIC		MICROPHONE, DYNAMIC	U	AT	AT	02/55	0107A0109	
M-33A/AIC		MICROPHONE, DYNAMIC	U	AT	AT	02/58	0107A0109	
M-34/AIC		MICROPHONE, DYNAMIC	U	AT	AT	02/54	0107A0109	
M-35/U		MICROPHONE, ELEMENT	U	LE	LE		0000L0063	
M-36(U)/U		MICROPHONE, CERAMIC	U	NS	NS		N0000	
M-37/U		MICROPHONE, DYNAMIC	U	NS	NS		N0000	
M-38/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-39/U		MICROPHONE, DYNAMIC	U	NS	NS		N0000	
M-40/U		MICROPHONE, DYNAMIC	U	NS	NS		N0000	
M-41/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-42/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-43/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-44/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-44A/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-45/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-45A/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-46/U		MICROPHONE, MAGNETIC	U	NS	NS		0000L0063	
M-47/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-48/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-49/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-50/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-51/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-52/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-53/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-54/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-55/AIC		MICROPHONE, DYNAMIC	U	AT	AT	00/54	0107A0109	
M-56(U)/G		MICROPHONE, DYNAMIC	U	AT	AT		0000L0063	
M-57/U		MICROPHONE, MAGNETIC	U	NS	NS		N0000	
M-58/U		MICROPHONE, CARBON	U	NS	NS		N0000	
M-59(U)/GTH-1		MICROPHONE, MAGNETIC	U	NS	NS		N0000	
M-60/U		MICROPHONE, UNIT	U	AT	AT	08/48	0107A0109	
M-61/U		MICROPHONE, UNIT	U	AT	AT		A0000	
M-62/U		MICROPHONE, DYNAMIC	U	LE	LE		0000L0063	
M-63/U		MICROPHONE, DYNAMIC	U	LE	LE		0000L0063	
M-64/U		MICROPHONE, CARBON	U	NS	NS		0000L0063	
M-65/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-66/U		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-67A/U		MICROPHONE, ELEMENT	U	NS	NS		N0000	
M-68/U		MICROPHONE, DYNAMIC	U	NS	NS		N0000	
M-69(U)/U		MICROPHONE, DYNAMIC	U	NS	NS		N0000	
M-70(U)/A		MICROPHONE, DYNAMIC	U	NS	NS		N0000	
M-71(U)		MICROPHONE, MAGNETIC	U	NS	NS		N0000	
M-72(U)		MICROPHONE, MAGNETIC	U	NS	NS		N0000	
M-73(U)/NS-1		MICROPHONE, DYNAMIC	U	NS	NS		N0000	
M-74/SIC		MICROPHONE, STATION	U	NS	NS		N0000	
M-75/U		MICROPHONE, STATION	U	NS	NS		N0000	
M-76/AIC		MICROPHONE, MAGNETIC	U	AT	AT	02/56	0107A0109	
M-77/AIC		MICROPHONE, SHIELD	U	AT	AT	04/56	0107A0109	
M-77A/AIC		MICROPHONE, SHIELD	U	AT	AT	01/61	A0078	
M-77B/AIC		MICROPHONE, DYNAMIC	U	AT	AT	05/62	A0078	
M-77C/AIC		MICROPHONE, DYNAMIC	U	AT	AT	01/64	A0126	
M-78/AIC		MICROPHONE, SHIELD	U	AT	AT	04/56	0107A0109	
M-79/PQC-1		MICROPHONE, CARBON	U	NS	NS		N0000	
M-80(U)/G		MICROPHONE, DYNAMIC	U	NS	NS		0000L0063	
M-81(U)/G		MICROPHONE, DYNAMIC	U	NS	NS		L0003	
M-82(U)/U		MICROPHONE, ELEMENT	U	NS	NS		L0003	
M-83/U		MICROPHONE, DYNAMIC	U	NS	NS		L0003	
M-84/U		MICROPHONE, CARBON	U	NS	NS		L0003	
M-85/U		MICROPHONE, MAGNETIC	U	NS	NS		L0003	
M-86(U)/U		MICROPHONE, DYNAMIC	U	NS	NS		L0003	
M-87/AIC		MICROPHONE, DYNAMIC	U	NS	NS		L0003	
M-88/AIC		MICROPHONE, DYNAMIC	U	NS	NS		L0003	
M-89/GIC-10		MICROPHONE, SOUND POWERED	U	NS	NS		L0003	
M-90(U)/G		MICROPHONE, UNIT	U	NS	NS		L0003	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDB	PROC CDB	GROUP DATE	SOURCE DATA	NOTES
M-90A/U		MICROPHONE, DYNAMIC	U	AT	AT	06/46	0107A0109	
M-90/U		MICROPHONE, DYNAMIC	U	AT	AT		N0000	
M-91/AIC		MICROPHONE, DYNAMIC	U	AT	AT	04/59	0107A0109	
M-92/U		MICROPHONE, DYNAMIC	U	AT	AT		N0000	
M-92A/U		MICROPHONE, DYNAMIC	U	AT	AT	02/62	0069N0092	
M-93/AIC		MICROPHONE, DYNAMIC	U	AT	AT	05/58	0107A0109	
M-94/A		MICROPHONE, DYNAMIC, OXYGEN MASK	U	AT	AT		N0000	
M-94A/A		MICROPHONE, DYNAMIC	U	AT	AT		N0074	
M-95/U		MICROPHONE, ELEMENT, DYNAMIC	U	AT	AT		N0000	
M-95A/U		MICROPHONE, ELEMENT, DYNAMIC	U	AT	AT		N0066	
M-96/A		MICROPHONE, DYNAMIC	U	AT	AT		N0000	
M-96A/A		MICROPHONE, DYNAMIC	U	AT	AT		N0066	
M-97/U		MICROPHONE, DYNAMIC	U	AT	AT		N0004	
M-98/U		MICROPHONE, DYNAMIC	U	AT	AT		N0004	
M-99/U		MICROPHONE, ELEMENT, DYNAMIC	U	AT	AT		N0000	
MA		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	AT	AT		N0000	
MA-1/ALH-2		MAGAZINE, SOUND RECORDER	U	AT	AT	01/56	0108A0131	
MA-10/AA5-18		MAGAZINE, FILM	U	AT	AT	02/62	0003A0079	
MA-11/ASH-18		MAGAZINE, RADAR RECORDER	U	AT	AT	02/63	N0094	
MA-12/APQ-102		MAGAZINE, FILM	U	AT	AT	07/63	0036A0079	
MA-13/GR		MAGAZINE, SOUND RECORDER	U	AT	AT		L0042	
MA-14/APQ-102A		MAGAZINE, FILM	U	AT	AT	02/64	A0126	
MA-15/AA5-18A		MAGAZINE, FILM	U	AT	AT	04/65	009AA0115	
MA-16/APQ-7		MAGAZINE, RECORDING TAPE	U	AT	AT		L0042	
MA-17/0/GSH-6		MAGAZINE, SOUND RECORDER	U	AT	AT	08/65	N0104	
MA-19/UHM-12		MAGAZINE, SOUND RECORDER	U	AT	AT	01/55	A0079	
MA-2/ANH-5		MAGAZINE, TEST FILM STRIP	U	AT	AT		L0058	
MA-20/AAH-26		MAGAZINE, FILM	U	AT	AT		L0058	
MA-21/U		MAGAZINE, FILM	U	AT	AT		L0063	
MA-23/TAG-1A		MAGAZINE, FILM	U	AT	AT	03/62	A0000	
MA-2878A/TPT-7		MONITOR-RADIO FREQUENCY-TEMPERATURE	U	AT	AT	03/60	A0079	
MA-3/APQ-55		MAGAZINE, RADAR RECORDER	U	AT	AT	08/58	A0079	
MA-4/APQ-55		MAGAZINE, PROCESSOR-VIEWER	U	AT	AT	03/60	A0079	
MA-5/APQ-86		MAGAZINE, PROCESSOR-VIEWER	U	AT	AT	01/53	C0000	
MA-5001/GAH-501		SOUND RECORDER MAGAZINE	U	AT	AT		C0000	
MA-6/U		MAGAZINE, RECORDED INFRARED DATA	U	AT	AT	06/63	0022L0067	
MA-7(U)/AAD-2		MAGAZINE, RECORDED INFRARED DATA	U	AT	AT	06/63	L0023	
MA-8/AAH-7		MAGAZINE, TEST FILM STRIP	U	AT	AT		L0023	
MA-9/GRA-71		MAGAZINE, RECORDING TAPE	U	AT	AT		L0067	
MAA		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAB		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAB-1		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAC		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAE		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAE-1		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAF		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAG		PORTABLE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAH		VHF PORTABLE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAJ		PORTABLE IF TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAK		RADIO TELEPHONE TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAL		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAM		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAN		PORTABLE FM RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAO		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAQ		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAR		VHF RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MARK 1 MOD 0		IDENTIFICATION INDICATOR	U	NS	NS		N0000	
MARK 6 MOD 0		RADAR BEACON	U	NS	NS		N0000	
MAS		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAW		PORTABLE VHF RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	
MAW-1		PORTABLE VHF RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	NS		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
MAY		VING EQUIPMENT	U	NS	1		N0000	
MAY		VHF PORTABLE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MAY-1		PORTABLE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MAZ		PORTABLE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-A		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-B		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-1		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-2		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-3		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-A		MOBILE RADIO AND RADAR EQUIPMENTS	U	NS	1		N0000	
MB-A-1		MOBILE RADIO AND RADAR EQUIPMENTS	U	NS	1		N0000	
MB-A-2		MOBILE RADIO AND RADAR EQUIPMENTS	U	NS	1		N0000	
MB-A-3		MOBILE RADIO AND RADAR EQUIPMENTS	U	NS	1		N0000	
MB-B		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENTS	U	NS	1		N0000	
MB-B-1		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENTS	U	NS	1		N0000	
MB-B-2		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENTS	U	NS	1		N0000	
MB-B-3		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENTS	U	NS	1		N0000	
MB-C		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENTS	U	NS	1		N0000	
MB-D		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENTS	U	NS	1		N0000	
MB-E		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-F		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-G		TRANSPORTABLE PFI DATA TRANSMISSION EQUIPMENT	U	NS	1		N0000	
MB-H		REASSIGNED AN/MRD-6	U	NS	1		N0000	
MB-I		REASSIGNED AN/MRD-7	U	NS	1		N0000	
MB-J		REASSIGNED AN/MRD-8	U	NS	1		N0000	
MB-K		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-K-1		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-K-1A		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-L		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-L-1		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-L-1A		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-M		RADIO TRANSMITTING AND RECEIVING EQUIPMENT (PORTABLE)	U	NS	1		N0000	
MB-N		REASSIGNED AN/PRC-7	U	NS	1		N0000	
MB-O		REASSIGNED AN/GRC-13	U	NS	1		N0000	
MB-P		REASSIGNED AN/GRC-14	U	NS	1		N0000	
MB-Q		REASSIGNED AN/MRC-9	U	NS	1		N0000	
MB-R		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-S		MOBILE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MB-U		RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1	02/44	N0089	
MB-V		PORTABLE RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MC		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MC-696		MODIFICATION KIT	C	AR	AS	05/63	A0018	
MD		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	NS	1		N0000	
MD-1/FRC		MODULATOR	U	LE	LE		0000L0063	
MD-1A/FRC		MODULATOR	U	LE	LE		0000L0063	
MD-10/URA-T2		MODULATOR	U	NS	1		N0000	
MD-10A/URA-T2		MODULATOR	U	NS	1		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
	MD-100/GRC	RADIO MODULATOR	U	AR	AR	03/52	0000A0079	
	MD-101/GR	RADIO MODULATOR	U	AR	AR	02/49	0000A0079	
	MD-102/GPS	RADAR MODULATOR	U	AR	AR	09/49	0000A0079	
	MD-102A/GPS	RADAR MODULATOR	U	AR	AR	07/50	0000A0079	
	MD-103/APG-35	RADAR MODULATOR	U	AR	AR	01/55	N0000	0017
	MD-103A/APG-35	RADAR MODULATOR	U	AR	AR	01/55	N0000	
	MD-104/AMT-4	RADIOSONDE MODULATOR	U	LE	LE	01/55	0000L0063	
	MD-104A/AMT-4	RADIOSONDE MODULATOR	U	LE	LE		0000L0063	
	MD-104B/AMT-4	RADIOSONDE MODULATOR	U	LE	LE		0000L0063	
	MD-105()/CPS-10	RADAR MODULATOR	U	AR	AR		0000L0063	
	MD-106()/ASB-1	RADAR MODULATOR	U	AR	AR		N0000	0017
	MD-107/SLT-1	RADIO MODULATOR	U	AR	AR	02/48	N0000	
	MD-108/ULT-T1	RADAR MODULATOR	U	AR	AR	02/48	N0000	0017
	MD-109/FRN-6	RADIO MODULATOR	U	AR	AR	01/50	0000A0079	
	MD-11/MPN-1	MODULATOR	U	AR	AR	09/43	0000A0079	
	MD-11A/MPN-1	MODULATOR	U	AR	AR	00/44	0000A0079	
	MD-11B/MPN-1	MODULATOR	U	AR	AR	01/49	0000A0079	
	MD-11D/APT-16	RADAR MODULATOR	U	AR	AR	08/50	A0079	
	MD-111()/ASB-5	RADIO MODULATOR (CANCELLED)	C	AR	AR	01/50	N0000	0017
	MD-112/FRN-12	RADIO MODULATOR	U	AR	AR	01/49	0079A0108	
	MD-113/APG-32	RADAR MODULATOR	U	AR	AR	07/52	0000A0079	
	MD-113A/APG-32	RADAR MODULATOR	U	AR	AR	03/54	0000A0079	
	MD-114/GPS	RADAR MODULATOR	U	AR	AR	07/49	0000A0079	
	MD-115/FC	CARRIER TELEGRAPH DEMODULATOR	U	AR	AR		N0030	
	MD-116/FC	CARRIER TELEGRAPH MODULATOR	U	AR	AR		N0030	
	MD-117/FC	CARRIER TELEGRAPH MODULATOR	U	AR	AR		N0030	
	MD-118/GRC-15	RADIO MODULATOR	U	AR	AR		N0030	
	MD-119/GRC-15	RADIO DEMODULATOR	U	AR	AR		N0030	
	MD-12/APG-13	MODULATOR	U	AR	AR	00/43	A0079	
	MD-12/APW-13	MODULATOR	U	AR	AR		A0000	
	MD-12A/APG-13	MODULATOR (CANCELLED)	U	AR	AR	08/45	0000A0079	
	MD-120/TPQ-1	RADAR MODULATOR	U	AR	AR	08/50	A0079	
	MD-121/GPQ-2	RADAR MODULATOR	U	AR	AR	09/50	A0079	
	MD-122/SPS-8	RADAR MODULATOR	U	AR	AR		N0030	
	MD-124/APT-6	RADAR MODULATOR	U	AR	AR	00/52	A0079	
	MD-125()/APS-27	RADAR MODULATOR	U	AR	AR	00/50	0005A0123	
	MD-126/APG-33	RADAR MODULATOR	U	AR	AR	01/53	0000A0079	
	MD-127/OPN-18	RADAR MODULATOR	U	AR	AR	00/49	0000A0079	
	MD-128/FPS-3	RADAR MODULATOR	U	AR	AR	01/44	0079A0108	
	MD-128A/FPS-3	RADAR MODULATOR	U	AR	AR	02/55	0079A0108	
	MD-128B/FPS-3	RADAR MODULATOR	U	AR	AR	04/55	0079A0108	
	MD-129/GR	MODULATOR-POWER SUPPLY	U	AR	AR	02/50	0079A0108	
	MD-129A/GR	MODULATOR-POWER SUPPLY	U	AR	AR	02/54	0079A0108	
	MD-13/ARA-1	MODULATOR	U	AR	AR	09/43	0000L0063	
	MD-130()/TPQ-6	RADAR MODULATOR	U	AR	AR		N0030	
	MD-131/ARW	MODULATOR, RADIO TRANSMITTER (CANCELLED)	U	AR	AR	03/59	A0079	
	MD-131(V)/ARW	MODULATOR, RADIO TRANSMITTER	U	AR	AR	03/59	0079A0128	
	MD-132/SPS-4	RADAR MODULATOR	U	AR	AR		N0030	
	MD-133/SPS-5	MODULATOR, RADAR	U	AR	AR		N0030	
	MD-134()/APS-29	RADAR MODULATOR	U	AR	AR	06/50	N0000	0017
	MD-135/GR	MODULATOR, RADIO	U	AR	AR		0000L0063	
	MD-136/GR	MODULATOR, RADIO	U	AR	AR		0000L0063	
	MD-137/FRT-15	RADIO MODULATOR	U	AR	AR		N0030	
	MD-137A/FRT-15	RADIO MODULATOR	U	AR	AR		N0030	
	MD-138/U	RADIO MODULATOR	U	AR	AR		N0000	
	MD-139/APG-31	RADAR MODULATOR	U	AR	AR	08/50	0079A0123	
	MD-14/APS-T1	MODULATOR	U	AR	AR	00/43	A0079	
	MD-14/APS-T1	MODULATOR	U	AR	AR		N0000	
	MD-140/TPS-100	RADAR MODULATOR	U	AR	AR	00/55	0079A0108	
	MD-141/GR	MODULATOR-POWER SUPPLY	U	AR	AR	09/50	0079A0108	
	MD-141A/GR	MODULATOR-POWER SUPPLY	U	AR	AR	09/50	0079A0108	
	MD-141B/GR	MODULATOR-POWER SUPPLY	U	AR	AR	02/53	A0000	0017
	MD-141C/GR	MODULATOR-POWER SUPPLY	U	AR	AR	09/62	0079A0108	
	MD-142/MPQ-10	RADAR MODULATOR	U	AR	AR		0000L0063	
	MD-143/URT	RADIO MODULATOR	U	AR	AR		N0030	
	MD-143A/URT	RADAR MODULATOR	U	AR	AR		N0030	
	MD-144/TPS-10	MODULATOR, RADAR	U	AR	AR		N0030	
	MD-144A/TPS-10	MODULATOR, RADAR	U	AR	AR		N0030	
	MD-144B/TPS-10	MODULATOR, RADAR	U	AR	AR		N0030	
	MD-145/URC-7	MODULATOR-POWER SUPPLY	U	AR	AR	06/63	L0021	
	MD-145A/URC-7	MODULATOR-POWER SUPPLY	U	AR	AR		N0030	
	MD-146/FRT-20	RADIO MODULATOR	U	AR	AR		N0030	
	MD-147/AMT-4A	RADIOSONDE MODULATOR	U	AR	AR		0000L0063	
	MD-147A/AMT-4A	RADIOSONDE MODULATOR	U	AR	AR		0000L0063	
	MD-147B/AMT-4A	RADIOSONDE MODULATOR	U	AR	AR		0000L0063	
	MD-147C/AMT-4A	RADIOSONDE MODULATOR	U	AR	AR		0000L0063	
	MD-148/GRC-30	RADIO MODULATOR	U	AR	AR	02/54	0079A0108	
	MD-149/URT	RADIO MODULATOR	U	AR	AR		N0030	
	MD-15/ARB-9	MODULATOR	U	AR	AR	04/46	0000A0079	
	MD-150()/SRT	RADIO MODULATOR	U	AR	AR	02/51	N0000	0017
	MD-151/APG-42	RADAR MODULATOR	U	AR	AR	02/51	A0079	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CCG	PROC CCG	GROUP DATE	SOURCE DATA	NOTES
NO-421/SPS-23	MODULATOR, RADAR	U	LE	NS	2	06/63	L0022	
NO-422/SPS-8	MODULATOR, RADAR	U	LE	NS	2		N0065	
NO-423 (1) /WLR-1	DEMODULATOR, RADIO	U	NS	7	NS		N0063	
NO-424/FQA-4 (V)	MODULATOR, BAND SHIFT	U	NS	3	NS	4-06/61	N0060	
NO-425/FPS-35	MODULATOR, RADAR	U	AT	US	3	07/61	A0079	
NO-426/APS-104	MODULATOR, RADAR	U	AT	US	3	07/61	0079A0130	
NO-426A/APS-104	MODULATOR, RADAR	U	AT	US	3	04/66	A0124	
NO-427/ARN-72	MODULATOR, MODULE	U	AT	AS	AS	07/61	A0079	
NO-428/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0108	
NO-429/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-431 (1) /FRT	MODULATOR, SIGNAL DATA	U	LE	LE	LE		0000L0063	
NO-430/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-431/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-432/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-433/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-434/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-435/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-436/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	0080A0108	
NO-437/CPN-180	MODULATOR, RADAR	U	AT	US	3	08/61	A0080	
NO-438/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-439/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-440 (1) /FRT	MODULATOR	U	LE	LE	LE		0000L0063	
NO-441/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-441/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-442/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-443/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-444/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-445/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-446/FCC-17	TRANSLATOR, SIGNAL DATA	U	AR	AR	AR	07/61	A0080	
NO-447/SPG-55B	MODULATOR-OSCILLATOR	U	NS	2	NS	2	N0065	
NO-448/TAQ-1	DEMODULATOR, VIDEO AND SYNCHRONIZING SIGNALS	U	LE	LE	LE	06/63	L0019	
NO-449 (1) /AMT-15	MODULATOR, RADIOSONDE	U	LE	NS	2	06/63	L0019	
NO-450/SPG-55B	MODULATOR, RADAR	U	NS	2	NS	2	N0066	
NO-451/SPG-55B	MODULATOR, RADAR	U	NS	2	NS	2	N0066	
NO-452/FYQ-4	MODERN ASSEMBLY, DIGITAL DATA	U	AR	AB	AB	02/62	A0080	
NO-453/FYQ-4	MODERN DIGITAL DATA (CANCELLED)	U	AR	AB	AB	08/62	A0080	
NO-454/SK9-1	DISCRIMINATOR, ELECTRICAL FREQUENCY	U	NS	1	NS	1	N0067	
NO-455/FYQ-6	MODULATOR, RADIO TRANSMITTER	U	NS	1	NS	1	A0080	
NO-456/FCC-18 (V)	MODERN TELEPHONE GROUP UNITS	U	LE	LE	LE		L0049	
NO-457/FCC-18 (V)	MODERN TELEPHONE SUPERGROUP UNITS	U	LE	LE	LE		N0069	
NO-458/FCC-18 (V)	MODULATOR-FILTER UNIT	U	LE	LE	LE		L0049	
NO-459/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0047	
NO-460/FCC-18 (V)	TRANSMITTER MODULATOR ASSEMBLY	U	LE	LE	LE	03/63	L0001	
NO-461/FCC-18 (V)	DEMODULATOR, SUPERGROUP	U	LE	LE	LE		L0047	
NO-462/URC	MODERN CHANNEL	U	LE	LE	LE		L0047	
NO-463/URC	MODERN RADIO	U	AD	AS	AS	04/62	A0080	
NO-464/FPS-16 (V)	MODULATOR, RADAR	U	AD	AS	AS	04/62	A0080	
NO-465/TRC-80	MODULATOR, MULTIPLIER	U	NS	2	NS	2	N0069	
NO-467 (1) /WLR	MODULATOR, RADIO TRANSMITTER	U	LE	LE	LE	06/63	L0021	
NO-468/GRC-116	MODERN RADIO	U	LE	LE	LE	06/63	L0022	
NO-469/APS-157	MODULATOR, RADAR	U	AD	AS	AS	03/62	A0080	
NO-471 (1) /TSS-1	MODULATOR-RECORDER UNIT	U	LE	2	NS	2	N0103	
NO-470/FPS-35	MODULATOR-SIGNAL GENERATOR	U	LE	LE	LE	0000L0063		
NO-471/FA-40	MODULATOR-OSCILLATOR	U	AR	AL	AL	03/62	A0080	
NO-472/GRC-117 (V)	CHANNEL DEMODULATOR	U	AR	AL	AL	04/62	A0080	
NO-473/GRC-117 (V)	CHANNEL DEMODULATOR	U	AR	AL	AL	07/62	A0080	
NO-474/GRC-117 (V)	CHANNEL MODULATOR	U	AR	AL	AL	07/62	A0080	
NO-475/GRC-117 (V)	CHANNEL MODULATOR	U	AR	AL	AL	07/62	A0080	
NO-476/SPG-49A	MODULATOR, RADIO TRANSMITTER	U	NS	2	NS	2	N0072	
NO-477/SPG-49A	MODULATOR, RADIO TRANSMITTER	U	NS	2	NS	2	N0072	
NO-478/FPS-69	MODULATOR, RADAR	U	LE	LE	LE		L0046	
NO-479/FPS-61	MODULATOR, RADAR	U	LE	LE	LE	06/63	L0022	
NO-480/CPG-4	MODULATOR	U	AR	AR	AR	08/46	0000A0079	
NO-481/CPG-4	MODULATOR	U	AR	AR	AR	08/51	0000A0079	
NO-480/APS	MODULATOR, INTERMEDIATE FREQUENCY	U	AR	AT	AT	04/63	A0080	
NO-480A/APS	MODULATOR, INTERMEDIATE FREQUENCY	U	AR	AT	AT	07/63	A0112	
NO-483/GRC-117 (V)	MODULATOR, RADIO TRANSMITTER	U	AL	AL	AL	07/62	A0080	
NO-484/GRC-117 (V)	MODULATOR, RADIO TRANSMITTER	U	AL	AL	AL	07/62	A0080	
NO-485/UCC	MODULATOR, TELEPHONE CARRIER	U	AR	AT	U	05/62	A0080	
NO-486/UCC	MODULATOR, TELEPHONE CARRIER	U	AR	AT	U	05/62	A0080	
NO-487/UCC	MODULATOR, TELEPHONE CARRIER	U	AR	AT	U	05/62	A0080	
NO-488/UCC	DEMODULATOR, CARRIER FREQUENCY	U	AR	AT	U	05/62	A0080	
NO-489/UCC	DEMODULATOR, CARRIER FREQUENCY	U	AR	AT	U	05/62	A0080	
NO-490/CPN-10	MODULATOR	U	AD	AS	AS	00/44	A0079	
NO-491/CPN-10	MODULATOR	U	AD	AS	AS	00/44	A0079	
NO-490 (1) /DL9-1	MODULATOR, RADIO TRANSMITTER	U	CW	7	NS	7	N0103	
NO-491/FYQ-5	MODERN ASSEMBLY, DIGITAL DATA	U	AR	AB	AB	01/62	A0080	
NO-493/UCC	MODULATOR, TEST TONE	U	AR	AT	U	07/62	A0080	
NO-494/UCC	MODULATOR, PILOT FREQUENCY	U	AR	AT	U	07/62	A0080	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CCG	PROC CCG	GROUP DATE	SOURCE DATA	NOTES
NO-495/UCC	MODULATOR, PILOT FREQUENCY	U	AR	AT	U	07/62	A0080	
NO-496/UCC	DEMODULATOR, TELEPHONE CARRIER	U	AR	AT	U	07/62	A0080	
NO-497/FRC-75	MODULATOR, SIGNAL GENERATOR	U	AR	AT	U	07/62	A0080	
NO-498/FRC-75	MODULATOR, SIGNAL GENERATOR	U	AR	AT	U	07/62	A0080	
NO-499/FYQ-5	MODERN DIGITAL DATA	U	AR	AB	AB	01/62	A0080	
NO-500/APS-3	MODULATOR	U	NS	2	NS	2	N0000	
NO-501/APS-3	MODULATOR	U	NS	2	NS	2	N0000	
NO-502/APS-3	MODULATOR	U	NS	2	NS	2	N0000	
NO-503/APS-3	MODULATOR	U	NS	2	NS	2	N0000	
NO-504/APS-3	MODULATOR	U	NS	2	NS	2	N0000	
NO-505/APS-3	MODULATOR	U	NS	2	NS	2	N0000	
NO-506/APS-3	MODULATOR	U	NS	2	NS	2	N0000	
NO-507/GR	RADIO FREQUENCY-MODULATOR UNIT	U	AR	AR	AR	00/45	A0079	
NO-508/APS-23A	MODULATOR, RADAR	U	AR	AR	AR	06/63	L0029	
NO-509/FYQ-4	MODERN DIGITAL DATA	U	AR	AB	AB	02/62	A0080	
NO-510/TRA-16	RECEIVER, DEMODULATOR ASSEMBLY	U	LE	LE	LE	05/63	L0001	
NO-511/GRT-12	MODULATOR, RADIO TRANSMITTER	U	AR	AT	U	01/62	A0080	
NO-512/ALQ-64	TRANSMITTER MODULATOR	U	NS	7	NS	7	N0000	
NO-513/PS-35	MODULATOR, POWER SUPPLY	U	AR	AT	U	02/62	A0080	
NO-514/TRA-31	MODULATOR, DATA (CANCELLED)	U	AR	AT	U	02/62	A0080	
NO-515 (1) /GRC	PHASE SHIFTER	U	LE	LE	LE	06/63	L0001	
NO-516/GSC	MODERN DIGITAL DATA	U	AR	AB	AB	07/63	L0067	
NO-517/PS-35	MODULATOR, COORDINATE DATA	U	AR	AB	AB	02/63	A0014	
NO-518/PS-35	MODULATOR-OSCILLATOR	U	AR	AB	AB	02/63	A0014	
NO-519 (1) /P1/GRC-66	(V) DEMODULATOR	U	LE	LE	LE	07/63	L0025	
NO-520/CPG-5	MODULATOR ASSEMBLY	U	LE	LE	LE	08/46	0000A0079	
NO-521/CPG-5	MODULATOR ASSEMBLY	U	LE	LE	LE	08/46	0000A0079	
NO-522 (1) /P1/GRC-66	(V) DEMODULATOR	U	LE	LE	LE	07/63	L0025	
NO-523A/CPG-5	MODULATOR	U	LE	LE	LE		L0050	
NO-524/FPS-77 (V)	MODULATOR, RADAR	U	NS	2	NS	2	N0000	
NO-525/GRC	MODERN RADIO TELETYPEWRITER	U	LE	LE	LE	04/63	L0058	
NO-526A/GRC	MODERN RADIO TELETYPEWRITER	U	LE	LE	LE		L0060	
NO-527/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-528/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-529/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-530/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-531/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-532/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-533/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-534/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-535/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-536/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-537/FCC-18 (V)	MODERN TELEPHONE GROUP UNIT	U	LE	LE	LE		L0049	
NO-538/APS-20	MODULATOR	U	NS	2	NS	2	N0000	
NO-539/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-540/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-541/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-542/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-543/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-544/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-545/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-546/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-547/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-548/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-549/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-550/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-551/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-552/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	
NO-553/FCC-18 (V)	MODULATOR, SUPERGROUP	U	LE	LE	LE		L0049	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
	MD-554/FCC-18 (V)	MODEM, CHANNEL	U	AR	LE		L0049	
	MD-555/FCC-18 (V)	MODEM, CHANNEL	U	AR	LE		L0049	
	MD-556/SRC-17	MODULATOR, RADIO TRANSMITTER	U	AR	AB		L0086	
	MD-557/FPS-24A	MODULATOR, RADAR	U	AR	AB		A0028	
	MD-558 (I) TRT	MODULATOR, RADAR	U	AR	AB		L0026	
	MD-559/APS-95	MODULATOR, RADAR	U	AR	AB		A0028	
	MD-560/ART-13	MODULATOR, RADIO	U	AR	AB		N0000	
	MD-560/ARC-106 (V)	MODULATOR, RADIO	U	AR	AB		D0037A0064	
	MD-561/ARC-106 (V)	MODULATOR, RADIO	U	AR	AB		A0037	
	MD-562/SPG-558	MODULATOR, RADIO TRANSMITTER	U	AR	AB		N0094	
	MD-563/GLR-1	DEMULATOR, SIGNAL DATA	U	AR	AB		A0036	
	MD-564/APQ-105	MODULATOR, OSCILLATOR	U	AR	AB		A0036	
	MD-565/ALQ-70	MODULATOR, TRANSMITTER	U	AR	AB		A0115	
	MD-566/URA-51	MODULATOR, RADIO TRANSMITTER	U	AR	AB		N0089	
	MD-567/URA-51	MODULATOR, RADIO TRANSMITTER	U	AR	AB		N0089	
	MD-568/CPN-44	MODULATOR, OSCILLATOR	U	AR	AB		L0038	
	MD-569 (I) U	MODEM, DIGITAL DATA	U	AR	AB		A0079	
	MD-57/APS-22	MODULATOR	U	AR	AB			
	MD-570/FYQ-33	MODEM ASSEMBLY	U	AR	AB		A0031	
	MD-571/ALQ-64	MODULATOR	U	AR	AB		N0092	
	MD-571/FYQ-34	MODEM ASSEMBLY	U	AR	AB		A0031	
	MD-572/FPS	MODULATOR, RADAR	U	AR	AB		A0037	
	MD-573/FPS	MODULATOR, RADAR (CANCELLED)	U	AR	AB		O057A0079	
	MD-574/TPQ-24	MODULATOR-OSCILLATOR	U	AR	AB		A0031	
	MD-575/URC	MODEM, RADIO	U	AR	AB		A0123	
	MD-575A/URC	MODEM, RADIO	U	AR	AB		A0063	
	MD-575B/URC	MODEM, RADIO	U	AR	AB		A0114	
	MD-576/MSQ-54	MODULATOR, RANGE	U	AR	AB		A0063	
	MD-577 (I) /FCC-18 (V)	MODEM, TELEPHONE GROUP UNIT	U	AR	AB		L0048	
	MD-578 (I) /FCC-18 (V)	MODULATOR, SUPERGROUP	U	AR	AB		L0047	
	MD-579 (I) /FCC-18 (V)	DEMULATOR, SUPERGROUP	U	AR	AB		L0047	
	MD-580/FLR-9 (V)	MODULATOR	U	AR	AB		A0079	
	MD-581/GRC-137 (V)	DEMULATOR ASSEMBLY	U	AR	AB		A0063	
	MD-582/GRC-137 (V)	DEMULATOR, QUANTIZED FREQUENCY MODULATION	U	AR	AB		A0080	
	MD-583/GRC-137 (V)	MODEM, TELEPHONE	U	AR	AB		O065A0080	
	MD-584/SPG-55A	MODULATOR-COMPENSATOR, RADIO FREQUENCY	U	AR	AB		O065A0080	
	MD-585/SPG-55A	MODULATOR, RADIO FREQUENCY	U	AR	AB		N0094	
	MD-586/TSC-42	MODEM, TELEGRAPH	U	AR	AB		N0084	
	MD-587/FRC	MODULATOR, RADIO TRANSMITTER	U	AR	AB		A0080	
	MD-588/DJO-1	MODULATOR, PULSE CODE	U	AR	AB		A0078	
	MD-59/ART-10	MODULATOR	U	AR	AB		A0079	
	MD-590/GSQ	MODULATOR-DEMULATOR, FREQUENCY SHIFT	U	AR	AB		O078	
	MD-591/U	MODULATOR-SYNTHESIZER	U	AR	AB		N0097	
	MD-592/MSQ-44	DEMULATOR, RADAR	U	AR	AB		N0096	
	MD-593/MSQ-44	MODULATOR, RADAR	U	AR	AB		N0096	
	MD-594/FPS-71	MODULATOR, RADAR	U	AR	AB		L0031	
	MD-595/FLR-9 (V) 2	MODULATOR, SIGNAL GENERATOR	U	AR	AB		A0080	
	MD-596/SPG-55B	MODULATOR-OSCILLATOR	U	AR	AB		N0096	
	MD-597/SPS-48 (V)	MODULATOR, RADAR	U	AR	AB		N0094	
	MD-598/SPS-48 (V)	MODULATOR, RADAR	U	AR	AB		N0094	
	MD-599/SPS-48 (V)	MODULATOR, RADAR	U	AR	AB		N0094	
	MD-6/CRN-7	MODULATOR-UNIT (CANCELLED)	U	AR	AB		O000A0079	
	MD-60/APS-31	MODULATOR	U	AR	AB		N0000	
	MD-60A/APS-31	MODULATOR	U	AR	AB		N0000	
	MD-60B/APS-31	MODULATOR	U	AR	AB		N0000	
	MD-60C/APS-31	MODULATOR	U	AR	AB		N0030	
	MD-60D/GCC	MODEM, TELEPHONE	U	AR	AB		N0096	
	MD-601/GCC	MODEM, TELEPHONE	U	AR	AB		N0096	
	MD-602/GCC	MODEM, TELEPHONE	U	AR	AB		N0096	
	MD-603/GCC	MODEM, TELEPHONE	U	AR	AB		N0096	
	MD-604/FRC-101 (V)	MODULATOR, RADIO FREQUENCY	U	AR	AB		A0081	
	MD-605/TRC-97	MODULATOR, RADIO TRANSMITTER	U	AR	AB		N0096	
	MD-605A/TRC-97	MODULATOR, RADIO TRANSMITTER	U	AR	AB		N0096	
	MD-606/FPS-94	MODULATOR, RADAR	U	AR	AB		L0036	
	MD-607/APS-113	MODULATOR-RECEIVER-TRANSMITTER	U	AR	AB		A0124	
	MD-608/APS-113	MODULATOR-RECEIVER-TRANSMITTER	U	AR	AB		A0124	
	MD-609/FRC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-61/ARA-17	MODULATOR	U	AR	AB		O000A0079	
	MD-610/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-611/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-612/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-613/FCC-32 (V)	CHANNEL DEMULATOR	U	AR	AB		A0093	
	MD-614/FCC-32 (V)	CHANNEL DEMULATOR	U	AR	AB		A0093	
	MD-615/FCC-32 (V)	CHANNEL DEMULATOR	U	AR	AB		A0093	
	MD-616/FCC-32 (V)	CHANNEL DEMULATOR	U	AR	AB		A0093	
	MD-617/FCC-32 (V)	CHANNEL DEMULATOR	U	AR	AB		A0093	
	MD-618/FCC-32 (V)	CHANNEL DEMULATOR	U	AR	AB		A0093	
	MD-619/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-62/TPQ-2	MODULATOR	U	AR	LE		D000L0063	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
	MD-620/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-621/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-622/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-623/FCC-32 (V)	MODEM, TELEPHONE	U	AR	AB		A0093	
	MD-624/FCC-32 (V)	TRANSLATOR, SIGNAL DATA	U	AR	AB		A0093	
	MD-625/FCC-32 (V)	TRANSLATOR, SIGNAL	U	AR	AB		A0093	
	MD-626/FMT-1	MODULATOR, SIGNAL GENERATOR	U	AR	AB		O02/63	
	MD-627/FLR-9 (V)	MODULATOR, SIGNAL GENERATOR	U	AR	AB		A0097	
	MD-628/APN-168	MODULATOR, RADAR	U	AR	LE		L0040	
	MD-629/GT	MODEM, TELEPHONE (CANCELLED)	U	AR	LE		L0046	
	MD-63/ARQ-12	MODULATOR	U	AR	NS		N0030	
	MD-630/GT	MODEM, TELEPHONE	U	AR	NS		L0039	
	MD-631/GT	MODEM, TELEPHONE	U	AR	NS		L0039	
	MD-632/GT	MODEM, TELEPHONE	U	AR	NS		L0039	
	MD-633/GT	MODEM, TELEPHONE (CANCELLED)	U	AR	NS		L0039	
	MD-634/GT	MODEM, TELEPHONE	U	AR	NS		L0039	
	MD-635/GT	MODEM, TELEPHONE	U	AR	NS		L0039	
	MD-636/GT	MODEM, TELEPHONE (CANCELLED)	U	AR	NS		L0046	
	MD-638/TPX-41	MODULATOR, PULSE	U	AR	LE		L0045	
	MD-639/ARC	MODULATOR, SONAR	U	AR	LE		N0103	
	MD-64/CRS-64	MODULATOR, UNIT	U	AR	NS		O000A0079	
	MD-641/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-642/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-643/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-644/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-645/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-646/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-647/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-648/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-649/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-65 (I) /TRA-8	REMOTE CONTROL MODULATOR	U	AR	LE		O000L0063	
	MD-650/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-651/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-652/FCC	MODEM, CHANNEL	U	AR	LE		L0043	
	MD-653/FCC	MODULATOR, SUPER GROUP	U	AR	LE		L0043	
	MD-654/FCC	MODULATOR, SUPER GROUP	U	AR	LE		L0043	
	MD-655/FCC	DEMULATOR, SUPER GROUP	U	AR	LE		L0043	
	MD-656/FCC	DEMULATOR, SUPER GROUP	U	AR	LE		L0043	
	MD-657/AA-28	MODULATOR, MEASURES TEST SET	U	AR	AS		A0114	
	MD-658/FPS-69	MODULATOR, RADAR	U	AR	AB		A0086	
	MD-659/GRC	DEMULATOR MODULE	U	AR	LE		O000L0063	
	MD-66 (I) /TRA-8	REMOTE CONTROL DEMULATOR	U	AR	LE		L0045	
	MD-660/GRC	DEMULATOR, MODUL	U	AR	LE		L0051	
	MD-661/GRC	MODULATOR, RADIO TRANSMITTER	U	AR	AB		A0126	
	MD-662/GRC-117 (V)	MODULATOR, RADIO TRANSMITTER	U	AR	AB		A0126	
	MD-663/GRC-117 (V)	MODULATOR, RADIO TRANSMITTER	U	AR	AB		N0102	
	MD-664/SQS-264X	MODULATOR-SCANNER, SONAR	U	AR	NS		A0116	
	MD-665/GRC	MODEM, CARRIER CHANNEL, ORDER WIRE	U	AR	NS		L0050	
	MD-666/APS-165	MODULATOR, RADAR	U	AR	AB		L0051	
	MD-667 (I) /ARC	MODEM, DIGITAL DATA	U	AR	LE		L0051	
	MD-668 (I) /GRC	MODEM, DIGITAL DATA	U	AR	LE		L0051	
	MD-669/ASK-224	MODULATOR-OSCILLATOR	U	AR	AB		O000A0079	
	MD-67/FRN-5	MODULATOR	U	AR	AB		A0126	
	MD-670/MSM-42	MODULATOR-POWER SUPPLY	U	AR	AB		A0126	
	MD-672/GRC-117 (V)	CHANNEL, MODULATOR	U	AR	NS		A0126	
	MD-673/FRT-75	MODULATOR-FREQUENCY SYNTHESIZER	U	AR	NS		N0104	
	MD-674 (P) /G	MODEM, LOW SPEED WIRE LINE	U	AR	NS		L0057	
	MD-676/FRC-117	MODULATOR, DATA CONVERTER	U	AR	AB		O02/65	
	MD-677/FRC	DEMULATOR, DATA CONVERTER	U	AR	AB		A0126	
	MD-679/TAQ-1A	DEMULATOR, VIDEO SYNCHRONIZING SIGNALS	U	AR	AB		L0058	
	MD-68/TPQ-2	MODULATOR, RADIO TRANSMITTER	U	AR	AB		O000L0063	
	MD-680/ALQ-84	MODULATOR, RADAR	U	AR	AB		A0114	
	MD-680/TPS-34C	MODULATOR, RADAR	U	AR	AB		N0104	
	MD-681/F50-63	DEMULATOR-SWITCH ASSEMBLY	U	AR	AB		A0119	
	MD-682 (V) 1/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 2/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 3/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 4/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 5/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 6/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 7/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 8/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-682 (V) 9/MSQ-74 (V)	MODEM, TELETYPEWRITER	U	AR	LE		L0058	
	MD-683/TRC	AMPLIFIER-MODULATOR	U	AR	AB		L0058	
	MD-684/ARC-96	MODULATOR, RADIO TRANSMITTER	U	AR	AB		A0126	
	MD-685/G	MODEM, HIGH SPEED WIRE LINE	U	AR	LE		L0058	
	MD-686/G	MODEM, HIGH SPEED WIRE LINE	U	AR	LE		L0058	
	MD-687/G	MODEM, HIGH SPEED WIRE LINE	U	AR	LE		L0058	
	MD-688/G	MODEM, HIGH SPEED WIRE LINE	U	AR	LE		L0058	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDS	PROC CDS	GROUP DATE	SOURCE DATA	NOTES
	NE-292/AGS-13	METER, HEIGHT	U	N	3		N0096	
	NE-293/FRC-39A (V)	METER ASSEMBLY, ELECTRICAL	U	N	3	04/64	D075A0107	
	NE-294/U	MULTIMETER	U	N	3		L0036	
	NE-295/U	MULTIMETER	U	N	3		L0043	
	NE-296/FRC-75	METER ASSEMBLY, ELECTRICAL	U	N	3	05/64	D076A0107	
	NE-297 (I) /U	MULTIMETER	U	N	3		L0035	
	NE-298/G	METER ASSEMBLY, ELECTRICAL	U	N	3		L0038	
	NE-299/G	METER ASSEMBLY, ELECTRICAL	U	N	3		N0000	
	NE-3/U	AMMETER	U	N	3		N0000	
	NE-30/U	VOLTMETER METER	U	N	3		N0000	
	NE-30A/U	VOLTMETER METER	U	N	3		N0000	
	NE-30B/U	VOLTMETER, ELECTRONIC	U	N	3	04/63	D004L0010	0017
	NE-30C/U	VOLTMETER, ELECTRONIC	U	N	3	04/63	L0012	
	NE-30D/U	ELECTRONIC VOLTMETER	U	N	3	01/61	L0000	
	NE-30E/U	VOLTMETER, ELECTRONIC	U	N	3	06/63	L0022	
	NE-300 (I) /POM-2	METER, AUDIO LEVEL	U	N	3	01/64	N0098	
	NE-301/U	VOLTMETER	U	N	3		L0039	
	NE-302/FGM-10	METER ASSEMBLY, ELECTRICAL	U	N	3	01/64	A0095	
	NE-303/U	MULTIMETER	U	N	3		L0042	
	NE-304/ASM-161	METER, POWER	U	N	3	01/65	A0096	
	NE-305/FLM-41	VOLTMETER, ELECTRONIC	U	N	3	02/65	A0105	
	NE-306/ASH-219	METER ASSEMBLY, ELECTRICAL	U	N	3	03/65	A0116	
	NE-307/FRA	AMMETER, RECORDING	U	N	3	01/66	A0121	
	NE-308/FRA-103	METER ASSEMBLY, ELECTRICAL	U	N	3	01/66	L0046	
	NE-309 (I) /U	VOLTMETER, ELECTRONIC	U	N	3		N0000	
	NE-31/U	AMMETER	U	N	3	05/65	A0116	
	NE-310/USM-216	MULTIMETER, DIGITAL	U	N	3		A0126	
	NE-311/ASM-233	METER ASSEMBLY, ELECTRICAL	U	N	3	06/65	A0109	
	NE-312/APM-241	METER ASSEMBLY, ELECTRICAL	U	N	3	06/65	N0104	
	NE-313/U	VOLTMETER, ELECTRONIC	U	N	3		N0104	
	NE-314/U	VOLTMETER, ELECTRONIC	U	N	3		N0104	
	NE-315/U	VOLTMETER, DIFFERENTIAL	U	N	3	05/65	A0112	
	NE-316/FRM-16 (V)	VOLTMETER, ELECTRICAL	U	N	3	07/65	L0000	0017
	NE-318 (I) /U	ELECTRONIC VOLTMETER	U	N	3	08/65	A0112	
	NE-319/FLR-12	VOLTMETER, DIGITAL	U	N	3		N0000	
	NE-32/U	RF AMMETER	U	N	3		L0062	
	NE-323/MS-46	RADIO FREQUENCY POWER METER-TIME RECORDER	U	N	3	01/66	A0122	
	NE-324/FLR-12-T1	VOLTMETER, DIGITAL	U	N	3	02/66	A0123	
	NE-325/MS-54	METER ASSEMBLY, ELECTRICAL	U	N	3		L0058	
	NE-326/GAM-7	METER, SIMULATED WIND VELOCITY	U	N	3	06/66	A0126	
	NE-327/U	MULTIMETER	U	N	3		L0060	
	NE-328/USM-238	VOLTMETER, ELECTRONIC	U	N	3		N0000	
	NE-33/U	AMMETER	U	N	3	09/66	N0109	
	NE-330/PDR-59	ARBITRARY SCALE METER	U	N	3		L0066	
	NE-331/G	METER ASSEMBLY, ELECTRICAL	U	N	3		L0065	
	NE-333/U	MULTIMETER	U	N	3		L0065	
	NE-334/U	VOLTMETER, ELECTRONIC	U	N	3		L0065	
	NE-335/U	VOLTMETER, ELECTRONIC	U	N	3		L0065	
	NE-337/U	MULTIMETER	U	N	3		L0065	
	NE-338/U	MULTIMETER	U	N	3		L0065	
	NE-339/U	METER, STANDING WAVE RATIO	U	N	3		N0000	
	NE-34/POM-1	SONAR SOUND LEVEL METER	U	N	3		L0065	
	NE-340/U	VOLTMETER, ELECTRONIC	U	N	3		N0000	
	NE-35/PRM-1	RADIO INTERFERENCE-FIELD INTENSITY METER	U	N	3		N0000	
	NE-36/URM-12	VOLTMETER	U	N	3	01/51	D080A0108	
	NE-37/ARC	VOLTMETER (CANCELLED)	U	N	3	07/54	A0080	
	NE-38/U	WATTMETER	U	N	3	07/49	A0080	
	NE-39/U	WATTMETER	U	N	3	07/49	A0080	
	NE-4/U	MILLIAMMETER	U	N	3		N0000	
	NE-40/U	WATTMETER	U	N	3	07/49	D080A0108	
	NE-41/U	WATTMETER	U	N	3	07/49	A0080	
	NE-42/U	WATTMETER	U	N	3	08/49	A0080	
	NE-43/U	WATTMETER	U	N	3	08/49	A0080	
	NE-44/U	WATTMETER	U	N	3	08/49	A0080	
	NE-45/U	WATTMETER	U	N	3	08/49	A0080	
	NE-46/G	METER ASSEMBLY	U	N	3	01/55	D080A0108	
	NE-47 (I) /U	MULTIMETER (CANCELLED)	U	N	3		N0000	
	NE-48/U	MULTIMETER	U	N	3		N0000	
	NE-48A/U	MULTIMETER	U	N	3		N0000	
	NE-48B/U	MULTIMETER	U	N	3		N0000	
	NE-48C/U	MULTIMETER	U	N	3		N0030	
	NE-48D/U	MULTIMETER	U	N	3		N0087	
	NE-49/U	AUDIO LEVEL METER	U	N	3		N0000	
	NE-5/OPN-1	MULTIMETER	U	N	3		N0000	
	NE-51/UP	FREQUENCY-POWER METER	U	N	3		L0000	
	NE-52/TSM-6	MODULATION METER	U	N	3		N0000	
	NE-52/TSM-6	MODULATION METER	U	N	3		N0000	
	NE-53/U	AMPERE-HOUR METER	U	N	3		D000L0064	
	NE-54/MPN-5	GALVANOMETER	U	N	3		N0000	
	NE-55/SSA	ELECTRONIC VOLTMETER	U	N	3		N0000	
	NE-56/TSM	VOLTMETER, ELECTRONIC	U	N	3		D000L0063	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG CDS	PROC CDS	GROUP DATE	SOURCE DATA	NOTES
	NE-57/U	METER, MODULATION	U	N	3	06/63	L0018	
	NE-576/MPN	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	N	3	02/60	A0080	
	NE-58 (I) /U	METER, MODULATION	U	N	3		D000L0063	
	NE-59/PSM-3	VOLTMETER	U	N	3	07/55	D000A0080	
	NE-6/U	ELECTRONIC MULTIMETER	U	N	3		N0000	
	NE-6A/U	ELECTRONIC MULTIMETER	U	N	3		N0000	
	NE-6B/U	ELECTRONIC MULTIMETER	U	N	3		N0000	
	NE-6C/U	ELECTRONIC MULTIMETER	U	N	3		N0000	
	NE-6D/U	ELECTRONIC MULTIMETER	U	N	3		N0000	
	NE-6E/U	VOLTMETER, ELECTRONIC	U	N	3	06/63	L0016	
	NE-6F/U	WATTMETER	U	N	3		N0000	
	NE-6G/U	WATTMETER	U	N	3	09/51	A0080	
	NE-6H/U	MONITOR, PHASE	U	N	3	06/53	D000A0080	
	NE-6I/U	MONITOR, PHASE	U	N	3		D000L0063	
	NE-6J (I) /U	VOLTMETER	U	N	3	06/63	L0016	
	NE-6K/U	AMMETER	U	N	3	07/63	D015L0025	
	NE-6L/U	AMMETER	U	N	3	01/52	D000A0080	
	NE-6M/URM-46	WATTMETER	U	N	3	02/53	D000A0080	
	NE-6N/USM-36	MULTIMETER	U	N	3		L0000	
	NE-6O/PRC-14	AMMETER	U	N	3	02/52	D000A0080	
	NE-6P (I) /U	WATTMETER	U	N	3		N0000	
	NE-7/U	AUDIO LEVEL METER	U	N	3		D000A0080	
	NE-7A/PSM-6	MULTIMETER	U	N	3	07/52	D000A0080	
	NE-7B/PSM-6	MULTIMETER	U	N	3	01/58	A0080	
	NE-7C/PSM-6	MULTIMETER	U	N	3	01/62	A0080	
	NE-7D/PSM-6	MULTIMETER	U	N	3		D000L0063	
	NE-7E/FCC	METER, AUDIO LEVEL	U	N	3		D000L0063	
	NE-7F/FCC	METER, AUDIO LEVEL	U	N	3		L0009	
	NE-7G/FCC	METER, AUDIO LEVEL	U	N	3	04/63	L0051	
	NE-7H/PSM-1A	METER, SONAR SOUND LEVEL	U	N	3		N0000	
	NE-7I/PSM-65	METER ASSEMBLY, ELECTRICAL	U	N	3		N0000	
	NE-7J/U	VOLTMETER, ELECTRONIC	U	N	3	09/52	D080A0108	
	NE-7K/ARC-21	MULTIMETER	U	N	3		N0000	
	NE-7L/U	AMMETER	U	N	3	08/66	N0109	
	NE-7M/U	AMMETER	U	N	3	04/63	L0009	
	NE-7N/U	MULTIMETER	U	N	3		L0041	
	NE-7O/U	MULTIMETER	U	N	3		L0058	
	NE-7P/URM	MULTIMETER	U	N	3	07/52	D000A0080	
	NE-7Q/USM-33	MULTIMETER	U	N	3	01/53	A0080	
	NE-7R/USM-33	MULTIMETER	U	N	3	02/61	A0080	
	NE-8/U	MULTIMETER	U	N	3		D000L0063	
	NE-8A/URM-50	AMMETER	U	N	3		N0000	
	NE-8B/USM-34	MULTIMETER	U	N	3		N0000	
	NE-8C/USM-34	MULTIMETER	U	N	3		N0000	
	NE-8D/USM-34	MULTIMETER	U	N	3		N0043	
	NE-8E/USM-34	MULTIMETER	U	N	3		D000L0063	
	NE-8F (I) /U	METER, AUDIO LEVEL	U	N	3		D000L0063	
	NE-8G/PPN-30	AMMETER, RECORDING	U	N	3		N0000	
	NE-8H (I) /URM-40	G-METER	U	N	3		L0000	
	NE-8I (I) /U	METER, FOOT CANDLE, PHOTOGRAPHIC	U	N	3		D000L0063	
	NE-8J/U	MULTIMETER	U	N	3		D000L0063	
	NE-8K/U	VOLTMETER	U	N	3		N0000	
	NE-8L/U	VOLTMETER	U	N	3		N0000	
	NE-8M/USM	AMMETER, RECORDING	U	N	3		N0000	
	NE-8N/U	MULTIMETER	U	N	3	02/47	D000A0080	
	NE-8O/U	MULTIMETER	U	N	3	05/50	D000A0080	
	NE-8P/U	MULTIMETER	U	N	3	05/52	D000A0080	
	NE-8Q/U	MULTIMETER	U	N	3	05/52	D000A0080	
	NE-8R/U	MULTIMETER	U	N	3	06/52	D000A0080	
	NE-8S/U	MULTIMETER (CANCELLED)	U	N	3	03/54	D000A0080	
	NE-8T/U	MULTIMETER	U	N	3		A0000	
	NE-9H/U	MULTIMETER	U	N	3	06/63	L0023	
	NE-9I/URM-73	WATTMETER	U	N	3	06/53	A0080	
	NE-9J/U	WATTMETER (CANCELLED)	U	N	3	09/54	D000A0080	
	NE-9K/U	METER, AUDIO LEVEL	U	N	3		N0000	
	NE-9L/URM-38A	METER, AUDIO LEVEL	U	N	3		N0088	
	NE-9M/URM-38A	METER, AUDIO LEVEL	U	N	3		N0096	
	NE-9N/U	ELECTRONIC MULTIMETER	U	N	3	02/53	L0000	0017
	NE-9O/U	ELECTRONIC VOLTMETER	U	N	3	02/53	L0000	0017
	NE-9P/USM	VOLTMETER, ELECTRONIC	U	N	3		N0000	
	NE-9Q/U	MULTIMETER (CANCELLED)	U	N	3	08/55	L0000	0017
	NE-9R/U	VOLTMETER	U	N	3		N0000	
	NE-9S (I) /U	METER, AUDIO LEVEL	U	N	3		D000L0063	
	NE-9T	AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	N	3		N0000	
	NE-1	AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U	N	3		N0000	
	NE-1/TSM	MAGNETIC ERASER	U	N	3	01/58	A0000	0017
	NE-10/FLR-12	ERASER, MAGNETIC	U	N	3	03/66	A0124	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG C06	PROC C06	GROUP DATE	SOURCE DATA	NOTES
MF-2		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U NS 1	NS 1			N0000	
MF-2/U		DEMAGNETIZER	U LE	LE			L0000	
MF-3/ALM-11		MAGNETIC ERASER	U LE	LE		02/50	L0000	0017
MF-4/U		ERASER, MAGNETIC	U LE	LE		04/60	A0000	0017
MF-7/U		ERASER, MAGNETIC	U LE	LE			N0075	
MF-8/APN-158		DEMAGNETIZER	U LE	LE			L0088	
MF-9/GSC-14		ERASER, MAGNETIC	U LE	LE		00/65	A0117	
MS		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U NS 1	NS 1			N0000	
MI		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U NS 1	NS 1			N0000	
MI-X		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U NS 1	NS 1			N0000	
MJ		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U NS 1	NS 1			N0000	
MK		AIRCRAFT RADIO TRANSMITTING AND RECEIVING EQUIPMENT	U NS 1	NS 1			N0000	
MK-1/MRM		GENERAL REPAIR KIT (CANCELLED)	U LE	LE			0000L0063	
MK-10/GSM		MOISTURE AND FUNGUS PROOFING KIT	U LE	LE			0000L0063	
MK-100/U		ACCESSORY KIT	U LE	LE			0000L0063	
MK-1000/GSM-153		ADAPTER KIT, TEST	U AL	AL		06/66	A0126	
MK-1002/ARC-133(V)		MODIFICATION KIT, ELECTRONIC EQUIPMENT (CANCELLED)	U AR	AR		09/66	A0129	
MK-1003/ARC-133(V)		MODIFICATION KIT, ELECTRONIC EQUIPMENT (CANCELLED)	U AR	AR		09/66	A0129	
MK-1004/ARC		MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U LE	LE			L0063	
MK-1009(I)/GRC-103(V)		EXTENSION KIT, MAST	U LE	LE			L0060	
MK-101/U		GUY KIT	U LE	LE			0000L0063	
MK-1010/ARM		MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U AD	AS D		08/66	A0131	
MK-1014/MIC-24(V)		ELECTRONIC EQUIPMENT MODIFICATION KIT	U NS 1	NS 1		08/66	N0109	
MK-1015/TPX-288		ELECTRONIC EQUIPMENT MODIFICATION KIT	U NS 2	NS 2		08/66	N0109	
MK-1016/AAS-14A		SERVICE KIT, REFRIGERANT	U NS 1	NS 1			L0063	
MK-1017/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1018/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1019/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-102/APX		MODIFICATION KIT	U AD	AS D		09/55	0000A0080	
MK-1020/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1021/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1022/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1023/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1024/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1025/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1026/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1027/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1028/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1029/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-103(I)/U		CRECTION KIT	U LE	LE			0000L0063	
MK-1030/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1031/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1032/G		FREQUENCY DETERMINING KIT	U LE	LE			L0063	
MK-1033/G		PLANNING KIT, COUNTERMEASURES	U AR	AR		09/66	A0129	
MK-1035(I)/ARC-131		MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U NS 1	NS 1		00/66	L0063	
MK-1038/UG		MODIFICATION KIT, ELECTRONIC EQUIPMENT	U NS 1	NS 1			N0110	
MK-104/DPN-19		TEST FACILITIES KIT, RADIO BEACON	U LE	LE			0000L0063	
MK-1040/ASN		ADAPTER KIT, MAGNETIC COMPASS CALIBRATOR SET	U LE	LE			L0063	
MK-1045/U		MEASUREMENT KIT, VOLTAGE STANDING WAVE RATIO	U LE	LE			L0066	
MK-1046/TAQ-1A		MAINTENANCE KIT, OPTICAL	U LE	LE			L0066	
MK-105/UG-T1		MODIFICATION KIT	U NS 3	NS 3			N0000	
MK-106/APN-13-T1A		ADAPTER KIT, ELECTRICAL	U AD	AS D		04/52	A0000	
MK-106/APQ-13-T1A		ADAPTER KIT, ELECTRICAL	U AD	AS D			A0080	
MK-107/U		CABLE SPLICING KIT	U NS 4	NS 4			N0000	
MK-108/U		SPLITTING TOOL KIT	U NS 4	NS 4			N0000	
MK-109/FRC-25		MODIFICATION KIT	U AR	AR		05/52	0000A0080	
MK-111/TRA-1		SPARE PARTS KIT	U LE	LE			0000L0063	
MK-112/TRA-1		SPARE PARTS KIT	U LE	LE			0000L0063	
MK-113/TRA-1		SPARE PARTS KIT	U LE	LE			0000L0063	
MK-114/TRA-1		SPARE PARTS KIT	U LE	LE			0000L0063	
MK-115/U		ACCESSORY KIT	U NS 7	NS 7		3-02/50	N0000	
MK-111/BLR-1		INSTALLATION KIT	U NS 7	NS 7			N0087	
MK-112/U		HEADSET KIT	U NS 1	NS 1			N0000	
MK-113/GSQ-T1		TRAINER KIT, ELECTRONIC CIRCUIT	U NS 1	NS 1			N0000	
MK-114/UR		INSTALLATION KIT	U NS 1	NS 1			N0000	
MK-115/GM-9		MODIFICATION KIT	U AR	AR		07/52	A0080	
MK-116/APG-T1A		RADAR SET ADAPTER KIT	U AS	AS U		08/52	0000A0128	
MK-117/U		MODIFICATION KIT	U LE	LE			0000L0063	
MK-118(I)/DPN-14		BEACON TEST FACILITIES KIT	U LE	LE			0000L0063	
MK-118(I)/DPN-14		BEACON TEST FACILITIES KIT	U LE	LE			0000L0063	
MK-119/TPX		CABLE ASSEMBLY KIT	U NS 2	NS 2			N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG C06	PROC C06	GROUP DATE	SOURCE DATA	NOTES
MK-119A/TPX		CABLE ASSEMBLY KIT	U NS 2	NS 2			N0000	
MK-12/AP		PRESSURE KIT	U NS 2	NS 2			N0000	
MK-120/TPX-18		CABLE ASSEMBLY KIT	U NS 2	NS 2			N0000	
MK-121/UPM-45		ACCESSORY KIT	U NS 2	NS 2			N0000	
MK-122/TRC		POWER ACCESSORIES KIT	U NS 2	NS 2			0000L0063	
MK-123/TRC		FILTER KIT	U NS 2	NS 2			0000L0063	
MK-124/TRC		FILTER KIT	U NS 2	NS 2			0000L0063	
MK-125/APA-83A		ADAPTER KIT, ELECTRICAL	U NS 2	NS 2		06/54	A0080	
MK-126/G		RETRANSMISSION CABLE KIT	U NS 2	NS 2			0000L0063	
MK-127/FRC		MODIFICATION KIT	U AR	AR		06/54	0000A0080	
MK-128/ARC-27		TEST BENCH CABLE KIT	U NS 1	NS 1			N0000	
MK-128A/ARC-27		TEST BENCH CABLE KIT	U NS 1	NS 1			N0000	
MK-129/AR		MODIFICATION KIT	U NS 1	NS 1			N0000	
MK-13/CRC-2		PARTS KIT	U NS 1	NS 1			A0000	
MK-130/APQ-13-T1A		MODIFICATION KIT	U AD	AS D		00/52	0000A0080	
MK-131/GPM		MODIFICATION KIT	U AD	AS D		05/53	0000A0080	
MK-132/FIP-1A		MAINTENANCE PARTS KIT	U NS 1	NS 1			N0000	
MK-133/TRC		ACCESSORY KIT	U LE	LE			0000L0063	
MK-134/U		INSTALLATION KIT	U NS 2	NS 2			N0000	
MK-135(I)/DPN-23		TEST FACILITIES KIT, RADIO BEACON	U NS 2	NS 2			0000L0063	
MK-136/ARC-21		TEST SET, RADIO	U NS 2	NS 2		08/53	0000L0063	
MK-137/GPM		DRAWING KIT	U NS 2	NS 2		02/53	0000A0080	
MK-138(I)/APG-47		TEST BENCH CABLE KIT	U NS 2	NS 2		02/53	N0000	0017
MK-139(I)/AFS-59		TEST BENCH CABLE KIT	U NS 2	NS 2		02/53	N0000	0017
MK-14/GPM		MAINTENANCE EQUIPMENT	U NS 2	NS 2			0000L0064	
MK-140/URT		MODIFICATION KIT	U NS 2	NS 2			N0000	
MK-141/APX-6		MODIFICATION KIT	U NS 2	NS 2			N0000	
MK-142/APA-108		MODIFICATION KIT	U NS 2	NS 2		03/53	N0000	0017
MK-143/APA-108		MODIFICATION KIT	U NS 2	NS 2		03/53	N0000	0017
MK-144/GPM		MODIFICATION KIT	U NS 2	NS 2		06/53	0000A0080	
MK-145/MRC		INSTALLATION KIT	U NS 1	NS 1			N0000	
MK-145A/MRC		INSTALLATION KIT	U NS 1	NS 1			N0000	
MK-146(I)/U		ANTILOGGING KIT	U NS 1	NS 1			N0000	
MK-147(I)/APM-73		BORISIGHTING ACCESSORY KIT	U NS 2	NS 2			0000L0063	
MK-148(I)/MP-9-10		MODIFICATION KIT	U NS 2	NS 2			N0000	
MK-149/GSQ-T1		TRAINER KIT, ELECTRONIC CIRCUIT	U NS 1	NS 1			0000L0063	
MK-15/MRQ-2		REPAIR KIT	U LE	LE			0000L0063	
MK-150/GSQ-T1		TRAINER KIT, ELECTRONIC CIRCUIT	U LE	LE			N0000	
MK-151/U		SEALING IRON KIT (CANCELLED)	U NS 1	NS 1		00/56	0000A0080	
MK-152/MRQ-20		MOUNTING KIT, RADIO SET	U AS X	AS X		06/53	0000A0108	
MK-153/GSQ-T1		TEST FACILITIES KIT, RADIO	U NS 1	NS 1			0000L0063	
MK-154(I)/FR		GUY KIT (CANCELLED)	U NS 1	NS 1			0000L0063	
MK-155/TCC		TEST FACILITIES KIT, TELEPHONE CARRIER SYSTEM	U NS 1	NS 1		04/63	0004L0067	
MK-156/FRT-19		ANTENNA COUPLER KIT	U NS 1	NS 1			N0000	
MK-157/GPM		MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U NS 1	NS 1		04/63	L0003	
MK-158/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-159/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-160/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-161/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-162/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-163/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-164/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-165/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-166/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-167/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-168/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-169/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-170/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-171/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-172/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-173/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-174/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-175/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-176/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-177/GP		GEOGRAPHIC REFERENCE GRID OVERLAY KIT	U LE	LE			0000L0063	
MK-178/TP		ADAPTER KIT	U NS 1	NS 1			0000L0063	
MK-179/FRC		BAND PASS FILTER KIT	U NS 2	NS 2			N0000	
MK-180/ARN-30		MAINTENANCE BENCH KIT	U NS 1	NS 1			N0000	
MK-181/GSQ-T2		TRAINING KIT, ELECTRONIC CIRCUIT	U AD	AS D		09/53	0000A0080	
MK-182/CRT-3A		MODIFICATION KIT	U AD	AS D			A0000	
MK-183/UPS-T		MODIFICATION KIT	U AD	AS D		07/56	A0080	
MK-183/UPS-T4A		MODIFICATION KIT	U AD	AS D		09/53	0000A0080	
MK-184/U		BATTERY TEST ADAPTER KIT	U LE	LE			0000L0063	
MK-185(I)/G		MODIFICATION KIT	U LE	LE			0000L0063	
MK-186(I)/G		MODIFICATION KIT	U LE	LE			0000L0063	
MK-187/AP5-20A		MODIFICATION KIT	U LE	LE			0000L0063	
MK-188/AP5-20A		MODIFICATION KIT	U LE	LE			N0000	
MK-189/MP5-4		MODIFICATION KIT	U NS 2	NS 2			N0000	
MK-190/UNH-2		REEL KIT	U AD	AS D			A0000	
MK-190/UNH-2		REEL KIT	U NS 1	NS 1			N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
NR-326/FST-2	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AS	X	X	01/57	0001A0108	
NR-327/MRC-35A	INSTALLATION KIT, RADIO SET	U	NS	X	X		N0000	
NR-328/UIT-5	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-329/UIT-5	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1	08/44	0000A0000	
NR-33/CP5-1	MAINTENANCE EQUIPMENT	U	AR	AR			N0000	
NR-330/UIT	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-331/UIT	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-332/UIT	ACCESSORIES KIT, ANNOUNCING EQUIPMENT	U	NS	1	NS 1		N0000	
NR-333/UIT	ACCESSORIES KIT, ANNOUNCING EQUIPMENT	U	NS	1	NS 1		N0000	
NR-334/UIT	ACCESSORIES KIT, ANNOUNCING EQUIPMENT	U	NS	1	NS 1		N0000	
NR-335/GPX-9	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AS	X	X	05/56	0001A0108	
NR-336/GPN	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AT	U	U	05/56	0001A0108	
NR-337/U	REPAIR KIT, ELECTRICAL CABLE	U	U	U	U		N0058	
NR-338/U	SPLICING KIT, RADIO FREQUENCY CABLE	U	AR	AR		06/56	A0081	
NR-339/AP2-92	VIDEO PROCESSOR	U	NS	2	NS 2		N0105	
NR-34/GP	MAINTENANCE EQUIPMENT (CANCELLED)	U	LE	LE			0000L0063	
NR-341/GRD	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		08/56	A0081	
NR-342/TR	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		07/56	A0081	
NR-343/U	HARDWARE KIT, MAINTENANCE, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-344/U	HARDWARE KIT, MAINTENANCE, ELECTRONIC EQUIPMENT	U	NS	4	NS 4		N0000	
NR-345/GR	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0010	
NR-346(U)/G	MAINTENANCE KIT, CABLE SPLICING (CANCELLED)	U	LE	LE		04/63	0003L0067	
NR-347/G	MAINTENANCE KIT, CABLE SPLICING	U	LE	LE		04/63	L0010	
NR-348/APS-20G	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AD	AS D		00/56	A0081	
NR-349/DSM-27	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AD	AS D		08/56	A0081	
NR-35/FMS-1	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	4	NS 4		N0000	
NR-350/DSM-11A	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	4	NS 4		N0000	
NR-351/UPA-25	PLOTTING ACCESSORY KIT	U	NS	2	NS 2		N0000	
NR-352/FRR-40	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0003	
NR-353/FRR-38	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0003	
NR-354/FRR-41	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0003	
NR-355(U)/GRC-10	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	LE	LE		01/58	L0000	0017
NR-356/G	TELEPHONE CABLE SPLICING KIT	U	AT	U	U		A0108	
NR-357/FPS-8	RADIO FREQUENCY TRANSMISSION LINE KIT	U	NS	1	NS 1		N0000	
NR-358(U)/U	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1	01/56	N0000	
NR-359/APS-20E	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-36/GR	MOISTURE-FUNGUS PROOFING KIT	U	NS	1	NS 1		N0000	
NR-360/RD-4	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-361/APS-76	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AD	AS D		06/59	A0081	
NR-362/APS-77	MODIFICATION KIT, ELECTRICAL EQUIPMENT (CANCELLED)	U	AD	AS D		06/59	A0081	
NR-363(U)/G	SHELTER HEATER KIT	U	LE	LE		02/56	L0000	0017
NR-364(U)/G	SHELTER HEATER KIT	U	LE	LE		03/57	L0000	0017
NR-365/GRC-9	INSTALLATION KIT, POWER SUPPLY	U	NS	1	NS 1		N0000	
NR-366/MRC-55	INSTALLATION KIT, GENERATOR	U	NS	1	NS 1		N0000	
NR-367/DP	RADAR TARGET KIT	U	NS	2	NS 2		N0000	
NR-368/FSA-10	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AT	U	U	01/57	0001A0108	0017
NR-369/G/K-1(V)	STATION ALERTING RINGING UNIT	U	AT	U	U	07/63	A0000	
NR-369/FSA-10	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AT	U	U	01/57	0001A0108	
NR-37/U	MAINTENANCE KIT	U	NS	2	NS 2		N0000	
NR-370/APS-83	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AD	AS D		06/59	A0081	
NR-371/MRC-55	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-372/UR	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AS	X	X	04/57	0001A0108	
NR-373/GRA-24	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		04/57	A0081	
NR-374/G	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		03/57	A0081	
NR-375/FPS-7	MODIFICATION KIT, ELECTRONIC EQUIPMENT (CA)	U	A	A		02/65	0108A0121	
NR-376/FPS-7	MODIFICATION KIT, ELECTRONIC EQUIPMENT (CA)	U	A	A		01/66	0108A0121	
NR-377/GRC-14	ACCESSORY KIT	U	NS	1	NS 1		N0000	
NR-378/U	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0004	
NR-379/U	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0004	
NR-38/GR	TROPICALIZATION SUPPLY KIT	U	NS	1	NS 1		N0000	
NR-380/ARM	MAINTENANCE KIT (CANCELLED)	U	NS	4	NS 4		N0000	
NR-381/GPO-T1A	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AD	AS D		01/57	A0081	
NR-382/BP2-2	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	NS	2	NS 2	01/58	N0090	
NR-383(U)/TRD	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	2	NS 2	04/63	L0009	
NR-384/TFS-ID	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0004	
NR-384/TFS-ID	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		00/57	A0081	
NR-385/FRC-60	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		09/65	A0129	
NR-386/GPA-37	MODIFICATION KIT, ELECTRONIC EQUIPMENT (CANCELLED)	U	AR	AR				
NR-387/MPM-49	TEST FACILITIES KIT	U	LE	LE		06/65	L0015	
NR-388/AXP-6	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		02/57	A0081	
NR-389/FSA-ID	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AT	U	U	01/57	0001A0108	
NR-39/CP5-6	MAINTENANCE KIT	U	NS	X	X	02/45	0000A0080	
NR-390/FSA	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AS	X	X	01/57	0001A0108	
NR-391/FG	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		02/57	A0081	
NR-392/FG	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		02/57	A0081	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
NR-393/GGC	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		02/57	A0081	
NR-394(U)/PD	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	0009L0067	
NR-395/FRR-39	MENT (CANCELLED)	U	NS	1	NS 1	02/57	N0000	0017
NR-396/CPN-18	ELECTRICAL EQUIPMENT INSTALLATION KIT	U	NS	1	NS 1	01/58	A0081	
NR-397/MPS-16A	MODIFICATION KIT, ELECTRONIC EQUIPMENT (CANCELLED)	U	AT	U	U	01/58	0001A0108	
NR-398(U)/DPN-32	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0010	
NR-399(U)/MPQ-4A	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	LE	LE			L0067	
NR-4/TRC-1	MENT	U	LE	LE				
NR-44/TRC-1	MAINTENANCE EQUIPMENT	U	LE	LE			0000L0063	
NR-48/TRC-1	MAINTENANCE EQUIPMENT	U	LE	LE			0000L0063	
NR-40/TRC-1	MAINTENANCE EQUIPMENT	U	LE	LE			0000L0063	
NR-4E/TRC-1	MAINTENANCE EQUIPMENT	U	LE	LE			0000L0063	
NR-4F/TRC-1	MAINTENANCE EQUIPMENT	U	LE	LE			0000L0063	
NR-4G/TRC-1	MAINTENANCE EQUIPMENT	U	LE	LE			0000L0063	
NR-40/FSA-3	MAINTENANCE KIT	U	LE	LE			0000L0063	
NR-400/G	HEADSET-MICROPHONE KIT	U	LE	LE		04/63	L0011	
NR-4002/GJ3-17-T	ELECTRONIC CIRCUIT MALFUNCTION PROGRAMMER	U	A	A		01/62	A0000	0017
NR-401/G	HEADSET-MICROPHONE KIT	U	LE	LE		04/63	L0011	
NR-402(U)/ARC	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1	04/63	L0011	
NR-403(U)/ARC	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	0010L0067	
NR-404(U)/DPN	MENT (CANCELLED)	U	LE	LE		04/63	L0010	
NR-405/FPS-26	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	A	AR		01/65	0001A0120	
NR-406/FPS-26	MODIFICATION KIT, ELECTRONIC EQUIPMENT (CA)	U	A	AR		02/65	0001A0121	
NR-407/FPS-27	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	A	AR		01/65	0001A0120	
NR-408/FPS-27	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	A	AR		03/58	A0081	
NR-409/FPS-28	MODIFICATION KIT, ELECTRONIC EQUIPMENT (CAN)	U	A	AR		06/65	0001A0112	
NR-41/U	HARDWARE KIT	U	LE	LE		06/65	0000L0063	
NR-410/FPS-35	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	A	AR		01/65	0001A0120	
NR-411/FPS-35	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	A	AR		01/65	A0126	
NR-412/FPS-6	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		06/59	A0126	
NR-413/FPS-6	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AR	AR		03/58	A0081	
NR-415/MPS-20	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		03/58	A0081	
NR-416(U)/GRC	ELECTRONIC EQUIPMENT MAINTENANCE KIT	U	LE	LE		04/58	L0000	0017
NR-417/GS1-12A	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AD	AS D		05/58	A0081	
NR-418/BOR-2B	ELECTRONIC EQUIPMENT MODIFICATION KIT	U	NS	3	NS 3	02/65	0006A0096	
NR-419(U)/FSG-1	MAINTENANCE KIT, DEFENSE SYSTEM, ANTI-IRACRAFT	U	LE	LE		04/63	L0010	
NR-42/U	HOOKUP WIRE KIT	U	NS	NS			N0000	
NR-42A/U	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	NS			N0000	
NR-420(U)/URR	MAINTENANCE KIT, RECEIVER, RADIO	U	LE	LE		04/63	0010L0067	
NR-421(U)/GRC-19	MAINTENANCE KIT, TRANSMITTER, RADIO	U	LE	LE		04/63	0010L0067	
NR-422(U)/GLQ-3	CABLE ASSEMBLY SET, ELECTRICAL	U	LE	LE		04/63	L0010	
NR-423/U	SPLICING KIT, HARBOR DEFENSE CABLE	U	NS	4	NS 4		N0000	
NR-424/U	SPLICING KIT, HARBOR DEFENSE CABLE	U	NS	4	NS 4		N0000	
NR-425(U)/DPN-42	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0010	
NR-426(U)/ARN	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0010	
NR-427/ARC	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	LE	LE		06/63	L0016	
NR-428(U)/AR	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0010	
NR-429(U)/ARC	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0010	
NR-43/U	HARDWARE KIT	U	LE	LE			0000L0063	
NR-430(U)/ART	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	LE	LE		04/63	L0010	
NR-431/U	SPLICING KIT, RADIO FREQUENCY CABLE	U	NS	4	NS 4		N0000	
NR-432/SG	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	3	NS 3		N0000	
NR-432A/SG	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	3	NS 3		N0042	
NR-433/SG	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	NS	3	NS 3		N0000	
NR-434(U)/MPQ-4	HEATER KIT, SHELTER	U	LE	LE		04/63	L0010	
NR-435/G	DISSIPATION LINE KIT	U	LE	LE		09/58	L0000	0017
NR-436/G	TRANSMISSION LINE KIT	U	LE	LE		09/58	L0000	0017
NR-437/G	TRANSMITTING ANTENNA KIT	U	LE	LE		09/58	L0000	0017
NR-438/G	RECEIVING ANTENNA KIT	U	LE	LE		09/58	L0000	0017
NR-439/G	TRANSMITTING ANTENNA KIT	U	LE	LE		09/58	L0000	0017
NR-44/U	HARDWARE KIT	U	LE	LE			0000L0063	
NR-440/BPA-6	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	NS	2	NS 2		N0000	
NR-441(U)/FRT-22	ELECTRONIC EQUIPMENT INSTALLATION KIT	U	NS	7	NS 7	00/58	L0010	0017
NR-442/MLR-1	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	7	NS 7	04/61	N0087	
NR-442A/MLR-1	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	7	NS 7	08/63	N0088	
NR-442B/MLR-1	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	7	NS 7		0089N0090	
NR-443(U)/G	ELECTRONIC EQUIPMENT MODIFICATION KIT	U	LE	LE		02/59	N0033	0017
NR-444/FPS-20	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	AT	U	U	01/58	0001A0131	
NR-445(U)/MPQ-4	ELECTRONIC EQUIPMENT MODIFICATION KIT (CAN)	U	LE	LE		05/59	L0000	0017
NR-446/URC-32	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-447/URC-32	MAINTENANCE KIT, ELECTRONIC EQUIPMENT	U	NS	1	NS 1		N0000	
NR-448/FPS-20	MODIFICATION KIT, ELECTRONIC EQUIPMENT	U	A	A		09/65	0001A0117	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG C06	PROC C06	GROUP DATE	SOURCE DATA	NOTES
HK-984/U		MAINTENANCE KIT,ELECTRONIC EQUIPMENT	U	NM	4	02/66	N0106	
HK-985/G		ANTENNA POSITIONING KIT	U	NM	4		L0099	
HK-986(I)/ASN-72		MAINTENANCE KIT,ELECTRONIC EQUIPMENT	U	NM	4		L0058	
HK-987(I)/ASN-72		MAINTENANCE KIT,ELECTRONIC EQUIPMENT	U	NM	4		L0058	
HK-988(I)/ASN-72		TEST FACILITIES KIT	U	NM	4		L0058	
HK-989/AAAS-14A		MAINTENANCE KIT,ELECTRONIC EQUIPMENT	U	NM	4		L0058	
HK-99/U		GUY KIT	U	NM	4		0000L0063	
HK-990/ART-16		TEST FACILITIES KIT	U	NM	4		L0058	
HK-991/URM		PROD KIT,TEST	U	NS	4		N0107	
HK-992/VRC-12		TEST KIT,RADIO	U	NM	1		N0107	
HK-993/PRC-25		TEST KIT,RADIO	U	NM	1		N0107	
HK-994(I)/AR		MAINTENANCE KIT,ELECTRONIC EQUIPMENT	U	NM	1		L0059	
HK-996/ARC-133(V)		MODIFICATION KIT,ELECTRONIC EQUIPMENT	U	AD	1	08/66	A0127	
HK-998/GRM-85		ACCESSORY KIT,TEST CONSOLE,RADIO	U	LE	1		L0059	
HK-999/FCM-9		ACCESSORY KIT,TEST CONSOLE,MULTIPLEXER	U	LE	1		L0059	
ML-1		RADIO RECEIVING AND TRANSMITTING EQUIPMENT	U	NS	1		N0000	
ML-2		RADIO RECEIVING AND TRANSMITTING EQUIPMENT	U	NS	1		N0000	
ML-3		RADIO RECEIVING AND TRANSMITTING EQUIPMENT	U	NS	1		N0000	
ML-300/TM		CEILING INDICATOR (CANCELLED)	U	LE	1		0000L0063	
ML-301/TM		SCALE	U	LE	1		0000L0063	
ML-302/TM		SCALE (CANCELLED)	U	LE	1		0000L0063	
ML-303/TM		HYDROGEN GENERATOR	U	LE	1		L0000	
ML-304/TM		CALCIUM HYDRIDE CHARGE	U	LE	1		0000L0063	
ML-304A/TM		CALCIUM HYDRIDE CHARGE	U	LE	1		0000L0063	
ML-305/TM		CALCIUM HYDRIDE CHARGE	U	LE	1		0000L0063	
ML-305A/TM		CALCIUM HYDRIDE CHARGE	U	LE	1		0000L0063	
ML-306/AP		PILOT BALLOON TARGET	U	LE	2		N0000	
ML-307/AP		PILOT BALLOON TARGET	U	LE	2		0000L0063	
ML-307B/AP		PILOT BALLOON TARGET	U	LE	2		0000L0063	
ML-307C/AP		PILOT BALLOON TARGET	U	LE	2		0000L0063	
ML-308/GM		ALTITUDE COMPUTER	U	LE	1		0000L0063	
ML-309/AP		PILOT BALLOON TARGET	U	AD	2	01/43	A0083	
ML-309/AP		PILOT BALLOON TARGET	U	AD	2		N0000	
ML-310B/AMT-1		RADIOSONDE MODULATOR (CANCELLED)	U	LE	2		0000L0063	
ML-310C/AMT-1		RADIOSONDE MODULATOR	U	LE	2		0000L0063	
ML-310D/AMT-1		RADIOSONDE MODULATOR	U	LE	2		0000L0063	
ML-310E/AMT-1		RADIOSONDE MODULATOR	U	LE	2		0000L0063	
ML-310F/AMT-1		RADIOSONDE MODULATOR	U	LE	2		0000L0063	
ML-310G/AMT-1		RADIOSONDE MODULATOR	U	LE	2		0000L0063	
ML-310H/AMT-1		RADIOSONDE MODULATOR	U	LE	2		0000L0063	
ML-310I/AMT-1		RADIOSONDE MODULATOR	U	LE	2		0000L0063	
ML-311/TM		SCALE	U	LE	1		0000L0063	
ML-312/TM		GRAPHING BOARD	U	LE	1		0000L0063	
ML-312A/TM		GRAPHING BOARD	U	LE	1		0000L0063	
ML-312B/TM		GRAPHING BOARD	U	LE	1		0000L0063	
ML-312B/TM		GRAPHING BOARD	U	LE	1		0000L0063	
ML-313/AM		PSYCHROMETER EQUIPMENT.	U	LE	1		0000L0063	
ML-313A/AM		PSYCHROMETER EQUIPMENT.	U	LE	1		L0000	
ML-314/TM		HYDROGEN GENERATOR	U	LE	1		0000L0063	
ML-315/GM		PRESSURE HEIGHT SLIDE RULE	U	LE	1		0000L0063	
ML-316/TM		BAROMETER	U	LE	1		0000L0063	
ML-317/AMQ-2		TEMPERATURE-HUMIDITY TRANSMITTER	U	LE	1		0000L0063	
ML-318/TM-2		CEILING LIGHT PROJECTOR	U	LE	1		0000L0063	
ML-319/AMQ-2		PRESSURE-AIR SPEED TRANSMITTER	U	LE	1		0000L0063	
ML-320/AMQ-2		AEROGRAPH RECORDER	U	LE	1		0000L0063	
ML-320A/AMQ-2		AEROGRAPH RECORDER	U	LE	1		0000L0063	
ML-321/AMQ-2		SCALE	U	LE	1		0000L0063	
ML-322/UM		PSYCHROMETRIC CALCULATOR	U	LE	1		0000L0063	
ML-322A/UM		PSYCHROMETRIC CALCULATOR	U	LE	1		0000L0063	
ML-323/UM		PRESSURE CALCULATOR	U	LE	1		0000L0063	
ML-324/UM		AIR SPEED CALCULATOR	U	LE	1		0000L0063	
ML-325/AMQ-2		CHART ROLL	U	LE	1		0000L0063	
ML-326/UM		MIXING RATIO CALCULATOR	U	LE	1		0000L0063	
ML-327/AMQ-3		AEROGRAPH	U	LE	1		0000L0063	
ML-327A/AMQ-3		AEROGRAPH	U	LE	1		0000L0063	
ML-328/AMQ-3		CHART ROLL	U	LE	1		0000L0063	
ML-329/AMQ-3		SCALE	U	LE	1		0000L0063	
ML-330/FM		BAROMETER	U	LE	1		0000L0063	
ML-330A/FM		BAROMETER, MERCURIAL	U	LE	1	04/63	L0004	
ML-331/TM		BAROMETER	U	LE	1		0000L0063	
ML-332/TM		BAROMETER	U	LE	1		0000L0063	
ML-333/TM		BAROMETER	U	LE	1		0000L0063	
ML-334/UM		BAROMETER REDUCTION CALCULATOR	U	LE	1		0000L0063	
ML-335/GM-2		CEILOMETER PROJECTOR	U	LE	1		0000L0063	
ML-335A/GM-2		CEILOMETER PROJECTOR	U	LE	1		0000L0063	
ML-336/GM-2		CEILOMETER RECORDER	U	LE	1		0000L0063	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG C06	PROC C06	GROUP DATE	SOURCE DATA	NOTES
ML-336A/GM-2		CEILOMETER RECORDER	U	LE	1		0000L0063	
ML-337/GM-2		CEILOMETER DETECTOR	U	LE	1		0000L0063	
ML-337A/GM-2		CEILOMETER DETECTOR	U	LE	1		0000L0063	
ML-338/AM		LIGHTING UNIT	U	LE	1		0000L0063	
ML-339/GM		POLAR CO-ORDINATE CHART	U	LE	1		0000L0063	
ML-340(I)/AM		PRESSURE UNIT	U	LE	1		0000L0063	
ML-341(I)/TM-6		PSYCHROMETER	U	LE	1		0000L0063	
ML-342(I)/GM		DEW POINT HYGROMETER	U	LE	1		0000L0063	
ML-343/GM		ALTITUDE SETTING INDICATOR	U	LE	1		0000L0063	
ML-344/TM-3		MANIFOLD	U	LE	1		0000L0063	
ML-345/TM-3		CASE (CANCELLED)	U	LE	1		0000L0063	
ML-346/TM		BAROSWITCH EVALUATION CHART	U	LE	1		0000L0063	
ML-347/GM-3		PLOTTING SURFACE	U	LE	1		0000L0063	
ML-347A/GM-3		PLOTTING SURFACE	U	LE	1		0000L0063	
ML-348/GM-3		RULE	U	LE	1		0000L0063	
ML-349/GM-3		SCALE	U	LE	1		0000L0063	
ML-349A/GM-3		SCALE	U	LE	1		0000L0063	
ML-350/AP		PILOT BALLOON TARGET	U	LE	1		0000L0063	
ML-351/AM		VENTILATION DUCT	U	LE	1		0000L0063	
ML-352/UM		THERMOMETER	U	LE	1		0000L0063	
ML-353/AM		STRUT THERMOMETER	U	LE	1		0000L0063	
ML-354/AM		CONVERSION KIT	U	LE	1		0000L0063	
ML-355/AMT		TEMPERATURE SCALE	U	LE	1		0000L0063	
ML-356/GM-3		SCALE	U	LE	1		0000L0063	
ML-356A/GM-3		SCALE	U	LE	1		0000L0063	
ML-357/GM		STRAIGHT-EDGE	U	LE	1		0000L0063	
ML-358/GM		STRAIGHT-EDGE	U	LE	1		0000L0063	
ML-359/AM		HUMIDITY ELEMENT	U	LE	1		L0000	
ML-360/AM		TEMPERATURE ELEMENT	U	LE	1		0000L0063	
ML-361/THA-1		PLOTTING BOARD	U	LE	1		0000L0063	
ML-362/THA-1		PLOTTING BOARD	U	LE	1		0000L0063	
ML-363/THA-1		RULE	U	LE	1		0000L0063	
ML-364/UM		ELECTROLYTE TRAY	U	LE	1		0000L0063	
ML-365/UM		ELECTROLYTE TRAY	U	LE	1		0000L0063	
ML-366/UM		SCALE	U	LE	1		0000L0063	
ML-367/AM		LAUNCHING REEL	U	LE	1		L0000	
ML-368/GM		CHART	U	LE	1		0000L0063	
ML-369/UM-3		WIRESONDE	U	NS	3		N0000	
ML-370/UM-3		TEMPERATURE-HUMIDITY BRIDGE	U	NS	3		N0000	
ML-371(I)/AMT-3		RADIOSONDE MODULATOR (CANCELLED)	U	LE	2		0000L0063	
ML-372/UM		CHART	U	LE	1		0000L0063	
ML-372A/UM		CHART	U	LE	1		0000L0063	
ML-373/GM		BALLOON NOZZLE	U	LE	1		0000L0063	
ML-374/AMT-3		PARACHUTE (CANCELLED)	U	LE	1		0000L0063	
ML-375/UM		CHART ENVELOPE SET	U	LE	1		0000L0063	
ML-376/AM		TEMPERATURE ELEMENT	U	LE	1		0000L0063	
ML-377/AM		TEMPERATURE ELEMENT	U	LE	1		0000L0063	
ML-378/AM		TEMPERATURE ELEMENT	U	LE	1		0000L0063	
ML-379/AM		HUMIDITY ELEMENT	U	LE	1		0000L0063	
ML-380/AM		HUMIDITY ELEMENT	U	LE	1		0000L0063	
ML-381/AM		HUMIDITY ELEMENT	U	LE	1		0000L0063	
ML-382/UM		TEMPERATURE SCALE	U	LE	1		0000L0063	
ML-383/UM		TEMPERATURE SCALE	U	LE	1		0000L0063	
ML-384/UM		TEMPERATURE SCALE	U	LE	1		0000L0063	
ML-385(I)/UM		HELIONEPHOSCOPE	U	LE	1		0000L0063	
ML-386/UM		CHART	U	LE	1		0000L0063	
ML-387(I)/GM		CALIBRATION CHAMBER (CANCELLED)	U	LE	1		0000L0063	
ML-388/UM		CAUSTIC SODA CHARGE	U	LE	1	04/45	0083A0063	
ML-389/UM		CAUSTIC SODA CHARGE	U	LE	1		L0000	
ML-389/UM		ALUMINUM CHARGE	U	LE	1	04/45	0083A0063	
ML-389/UM		ALUMINUM CHARGE	U	LE	1		L0000	
ML-390/U		TIME SIGNAL SET	U	LE	1		0000L0063	
ML-391/AM		BALLOON	U	LE	1		0000L0063	
ML-391A/AM		BALLOON	U	LE	1		0000L0063	
ML-391B/AM		BALLOON	U	LE	1		0000L0063	
ML-391C/AM		BALLOON	U	LE	1		0000L0063	
ML-392/AP		PILOT BALLOON TARGET	U	LE	2		N0000	
ML-393(I)/TM-6		THERMOMETER	U	LE	1		0000L0063	
ML-394(I)/TM-6		PSYCHROMETER HOUSING	U	LE	1		0000L0063	
ML-395/FM-2		TEMPERATURE EVALUATOR	U	LE	1		0000L0063	
ML-396/FM-2		TEMPERATURE EVALUATOR	U	LE	1		0000L0063	
ML-397/FM-2		TEMPERATURE EVALUATOR	U	LE	1		0000L0063	
ML-398/U		CALCULATOR SCALE	U	NM	8		N0000	
ML-399/AM		BALLOON, METEOROLOGICAL	U	NS	1		0000L0063	
ML-4		RADIO RECEIVING AND TRANSMITTING EQUIPMENT	U	NS	1		N0000	
ML-400A/UM-5		WIND DIRECTION-VELOCITY TRANSMITTER	U	NM	8		N0000	
ML-400B/UM-5		DETECTOR WIND DIRECTION AND SPEED	U	NM	8	02/63	N0094	
ML-400C/UM-5		TRANSMITTER, WIND DIRECTION AND SPEED	U	NM	8		N0000	
ML-401/U		BAROMETER	U	NM	8		N0000	
ML-402/AM		TEMPERATURE ELEMENT	U	LE	1		0000L0063	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
ML-403/UM	TEMPERATURE SCALE	U	AB	AB			0000L0063	
ML-404/U	BAROGRAPH	U	AB	AB			0000L0063	
ML-405/AM	TEMPERATURE ELEMENT	U	AB	AB			0000L0063	
ML-405A/AM	TEMPERATURE ELEMENT	U	AB	AB			0000L0063	
ML-406/AM	TEMPERATURE ELEMENT	U	AB	AB			0000L0063	
ML-407/UM	TEMPERATURE SCALE	U	AB	AB			0000L0063	
ML-408/AM	BALLOON	U	AB	AB			0000L0063	
ML-409/UMQ-3	HUMIDITY CHAMBER	U	AB	AB			0000L0063	
ML-410/U	CALCULATOR	U	AB	AB			0000L0063	
ML-412/AMQ-2A	SCALE	U	AB	AB			0000L0063	
ML-413/AM	BALLOON	U	AB	AB			0000L0063	
ML-413A/AM	BALLOON	U	AB	AB			0000L0063	
ML-414/U	BALLOON SHROUD	U	AB	AB			0000L0063	
ML-415/U	CHART	U	AB	AB			0000L0063	
ML-416(1)/TMQ-3	TEMPERATURE INDICATOR	U	AB	AB			0000L0063	
ML-417(1)/TMQ-3	TEMPERATURE ELEMENT	U	AB	AB			0000L0063	
ML-418/AMT-4	HUMIDITY ELEMENT	U	AB	AB			0000L0063	
ML-419/AMT-4	TEMPERATURE ELEMENT	U	AB	AB			0000L0063	
ML-420/AMT-4	TEMPERATURE-HUMIDITY EVALUATOR	U	AB	AB			0000L0063	
ML-420A/AMT-4	TEMPERATURE-HUMIDITY EVALUATOR	U	AB	AB			0000L0063	
ML-420B/AMT-4	COMPUTER, HUMIDITY-TEMPERATURE	U	AB	AB			0000L0063	
ML-422/U	CHART	U	AB	AB			0000L0063	
ML-423/AM	BALLOON	U	AB	AB			0000L0063	
ML-423A/AM	BALLOON	U	AB	AB			0000L0063	
ML-424/U	SHROUD, BALLOON	U	AB	AB			0000L0063	
ML-425/UM	CHART	U	AB	AB			0000L0063	
ML-426/UM	CHART	U	AB	AB			0000L0063	
ML-427/UM	CHART	U	AB	AB			0000L0063	
ML-428/UM	HUMIDITY CHAMBER	U	AB	AB			0000L0063	
ML-429/UM	PSYCHROMETRIC CALCULATOR	U	AB	AB			0000L0063	
ML-430/U	PARACHUTE, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-431/UM	CONVERSION SCALE	U	AB	AB			0000L0063	
ML-432/TMQ-5	PAPER, GRAPH	U	AB	AB			0000L0063	
ML-433/PM	PAPER, GRAPH	U	AB	AB			0000L0063	
ML-433A/PM	ANEMOMETER	U	AB	AB			0000L0063	
ML-434/PM	ANEMOMETER	U	AB	AB			0000L0063	
ML-434A/PM	ANEMOMETER	U	AB	AB			0000L0063	
ML-434B/PM	ANEMOMETER	U	AB	AB			0000L0063	
ML-435(1)/PMQ-1	GAGE, PRECIPITATION	U	AB	AB			0000L0063	
ML-436/PMQ-1	PSYCHROMETER	U	AB	AB			0000L0063	
ML-437/PMQ-1	PSYCHROMETER, SELF-INDICATING, LIQUID IN GLASS	U	AB	AB			0000L0063	
ML-438/PMQ-1	THERMOMETER, SELF-INDICATING, LIQUID IN GLASS	U	AB	AB			0000L0063	
ML-439/PMQ-1	THERMOMETER, SELF-INDICATING, LIQUID IN GLASS	U	AB	AB			0000L0063	
ML-440/PMQ-1	THERMOMETER, SELF-INDICATING, LIQUID IN GLASS	U	AB	AB			0000L0063	
ML-441/UMQ-4	WIRESONDE	U	AB	AB			0000L0063	
ML-442/UMQ-4	BRIDGE, SUMMATION	U	AB	AB			0000L0063	
ML-442A/UMQ-4	BRIDGE, SUMMATION	U	AB	AB			0000L0063	
ML-443/UM	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-443A/UM	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-444/FPS-3	WIND SPEED TRANSMITTER	U	AB	AB			0000A0083	
ML-445/A	TEMPERATURE ELEMENT	U	AB	AB			0000L0063	
ML-446/PMQ-3	ANEMOMETER-WIND VANE	U	AB	AB			0000L0063	
ML-446A/PMQ-3	ANEMOMETER-WIND VANE	U	AB	AB			0000L0063	
ML-446A/UMC-32	INSTALLATION KIT, ELECTRONIC EQUIPMENT	U	AB	AB			0000L0063	
ML-446B/PMQ-3	ANEMOMETER-WIND VANE	U	AB	AB			0000L0063	
ML-446C/PMQ-3	ANEMOMETER-WIND VANE	U	AB	AB			0000L0063	
ML-447/PMQ-3	WIND VANE	U	AB	AB			0000L0063	
ML-447A/PMQ-3	WIND VANE	U	AB	AB			0000L0063	
ML-447B/PMQ-3	WIND VANE	U	AB	AB			0000L0063	
ML-447C/PMQ-3	WIND VANE	U	AB	AB			0000L0063	
ML-448/UM	BAROMETER, ANEROID	U	AB	AB			0000L0063	
ML-449/U	NOZZLE, METEOROLOGICAL INFLATING	U	AB	AB			0000L0063	
ML-450/UM	PSYCHROMETER	U	AB	AB			0000L0063	
ML-450A/UM	PSYCHROMETER	U	AB	AB			0000L0063	
ML-450B/UM	PSYCHROMETER	U	AB	AB			0000L0063	
ML-451/AM	HYGROMETER	U	AB	AB			0000L0063	
ML-452/U	HUMIDITY ELEMENT, RESISTANCE	U	AB	AB			0000L0063	
ML-453(1)/SM	BAROGRAPH	U	AB	AB			0000L0063	
ML-454/AMQ-7	PROBE, HUMIDITY-TEMPERATURE	U	AB	AB			0000L0063	
ML-455/UM	SCALE, METEOROLOGICAL CONVERSION	U	AB	AB			0000L0063	
ML-456/UM	BAROMETER, ANEROID	U	AB	AB			0000L0063	
ML-457/UM	BAROMETER, ANEROID	U	AB	AB			0000L0063	
ML-458/UM	CHART	U	AB	AB			0000L0063	
ML-459/PMQ-1	BAROMETER, ANEROID	U	AB	AB			0000L0063	
ML-460/PMQ-1	ANEMOMETER	U	AB	AB			0000L0063	
ML-461/GMQ-10	PROJECTOR, TRANSMISSOMETER	U	AB	AB			0000A0083	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
ML-461A/GMQ-10	PROJECTOR, TRANSMISSOMETER	U	AB	AB		02/56	A0083	
ML-462/UM	NOZZLE, METEOROLOGICAL BALLOON INFLATING	U	AB	AB			0000L0063	
ML-463/UM	PROTRACTOR, SEMICIRCULAR	U	AB	AB			0000L0063	
ML-464/GPN-6	BAROMETER, ANEROID	U	AB	AB			0000L0063	
ML-465/GPN-6	BAROMETER, ANEROID	U	AB	AB			0000L0063	
ML-466/AMT-9A	TEMPERATURE-HUMIDITY EVALUATOR	U	AB	AB			0000L0063	
ML-467/UMQ-4	CHAMBER, BASELINE CHECK, WIRESONDE	U	AB	AB			0000L0063	
ML-468(1)/U	SCALE, PLOTTING	U	AB	AB			0000L0063	
ML-469(1)/U	SHROUD, BALLOON	U	AB	AB			0000L0063	
ML-470/AMQ-8	PROBE, TEMPERATURE	U	AB	AB			0000L0063	
ML-471/AMQ-8	THERMOMETER, INDICATING, RESISTANCE	U	AB	AB			0000L0063	
ML-472/AMQ-8	SLIDE RULE	U	AB	AB			0000L0063	
ML-473/GM	SCALE, CONVERSION BALLISTIC TEMPERATURE	U	AB	AB			0000L0063	
ML-474/GM	THERMOMETER, DOUBLE-CENTER	U	AB	AB			0000L0063	
ML-474A/GM	THERMOMETER, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-475/GM	THERMOMETER, INDICATING, CAPILLARY TUBE AND BULB	U	AB	AB			0000L0063	
ML-476/AMT	HUMIDITY ELEMENT, RESISTANCE	U	AB	AB			0000L0063	
ML-477/TM	CHART	U	AB	AB			0000L0063	
ML-478/AM	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-479/AM	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-480(1)/GM	ASPIRATOR, PSYCHROMETER	U	AB	AB			0000L0063	
ML-481/SHD-1	PAPER, RECORDING, ELECTROSENSITIVE	U	AB	AB			0000L0063	
ML-482/SHD-1	PAPER, RECORDING, ELECTROSENSITIVE	U	AB	AB			0000L0063	
ML-483/UM	BALLOON, KITS	U	AB	AB			0000L0063	
ML-484/UMQ-4	TEMPERATURE ELEMENT, RESISTANCE, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-485/UMQ-4	CHART	U	AB	AB			0000L0063	
ML-486/UM	GENERATOR, HYDROGEN	U	AB	AB			0000L0063	
ML-487(1)/U	HUMIDITY ELEMENT, RESISTANCE	U	AB	AB			0000L0063	
ML-488/PM	THERMOMETER, SELF INDICATING, LIQUID IN GLASS	U	AB	AB			0000L0063	
ML-489/UMH	PAPER, RECORDING, ELECTRO SENSITIVE	U	AB	AB			0000L0063	
ML-490/GM	GENERATOR, HYDROGEN	U	AB	AB			0000L0063	
ML-491(1)/UM	ALUMINUM CHIPS	U	AB	AB			0000L0063	
ML-492(1)/UM	SODIUM HYDROXIDE, TECHNICAL	U	AB	AB			0000L0063	
ML-493(1)/AM	HYGROMETER, DEW-POINT	U	AB	AB			0000L0063	
ML-494/AMQ-8	PROBE, HUMIDITY-TEMPERATURE	U	AB	AB			0000L0063	
ML-495/AMQ-8	HUMIDITY ELEMENT, RESISTANCE	U	AB	AB			0000L0063	
ML-496(1)/A	BALLOON, METEOROLOGICAL (CANCELLED)	U	AB	AB			0000L0063	
ML-497/PM	ANEMOMETER	U	AB	AB			0000L0063	
ML-498/UM	PLOTTING BOARD WINDS ALOFT	U	AB	AB			0000L0063	
ML-499/G	HYGROTHERMOGRAPH	U	AB	AB			0000L0063	
ML-500/DMQ	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-501/DMQ	LIGHT TEST, METEOROLOGICAL BALLOON	U	AB	AB			0000L0063	
ML-502/UM	SCALE, PLOTTING	U	AB	AB			0000L0063	
ML-503/DMQ	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-503/DMQ-3	BALLOON, METEOROLOGICAL (CANCELLED)	U	AB	AB			0000L0063	
ML-504/GM	STRAIGHTEDGE	U	AB	AB			0000L0063	
ML-505/AMQ-11	WIRESONDE	U	AB	AB			0000L0063	
ML-506/GMQ-13	PROJECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-506A/GMQ-13	PROJECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-506B/GMQ-13	PROJECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-506C/GMQ-13	PROJECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-506D/GMQ-13	PROJECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-507/GMQ-13	DETECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-507A/GMQ-13	DETECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-507B/GMQ-13	DETECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-507C/GMQ-13	DETECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-507D/GMQ-13	DETECTOR	U	AB	AB			0000L0063	
ML-508/AMT-6	PARACHUTE, METEOROLOGICAL EQUIPMENT	U	AB	AB			0000L0063	
ML-509(1)/PMQ-3	PROJECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-510(1)/PMQ-3	DETECTOR, CLOUD HEIGHT	U	AB	AB			0000L0063	
ML-511(1)/GM	SCALE, PLOTTING	U	AB	AB			0000L0063	
ML-512/GM	BAROMETER, MERCURIAL	U	AB	AB			0000L0063	
ML-512A/GM	BAROMETER, MERCURIAL	U	AB	AB			0000L0063	
ML-513(1)/GM	CONDITIONER, BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-514/TM	PLOTTING BOARD, WINDS ALOFT	U	AB	AB			0000L0063	
ML-515/UM	SCALE, PLOTTING	U	AB	AB			0000L0063	
ML-516/UM	SCALE, PLOTTING	U	AB	AB			0000L0063	
ML-517/AMQ-11	HUMIDITY ELEMENT, RESISTANCE	U	AB	AB			0000L0063	
ML-518/AM	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-519/UM	BALLOON, METEOROLOGICAL	U	AB	AB			0000L0063	
ML-520/AMQ-13	PROBE, HUMIDITY-TEMPERATURE, VORTEX	U	AB	AB			0000L0063	
ML-521/U	SHROUD, BALLOON	U	AB	AB			0000L0063	
ML-522/AMQ-14	HYGROMETER, INFRARED, ABSORTION	U	AB	AB			0000L0063	
ML-523/U	SHROUD, BALLOON	U	AB	AB			0000L0063	
ML-524/DMQ	PARACHUTE, METEOROLOGICAL (CANCELLED)	U	AB	AB			0000L0063	
ML-526/GMQ-13AX	PROJECTOR, CLOUD HEIGHT (CANCELLED)	U	AB	AB			0000L0063	
ML-527/UM	SCALE, PLOTTING	U	AB	AB			0000L0063	
ML-528/GM	REGULATOR, PRESSURE, COMPRESSED GAS	U	AB	AB			0000L0063	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG C06	PROC C06	GROUP DATE	SOURCE DATA	NOTES
	MT-1004/GR	ELECTRICAL EQUIPMENT RACK (CANCELLED)	U	AR	AR	00/54	0000A0083	
	MT-1005/ARA-69A	MOUNTING	U	AR	AR		N0000	
	MT-1006/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1007/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1008/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1008A/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1009/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1009A/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-101/ARC-4	MOUNTING BASE	U	AR	AR		N0000	
	MT-1010/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1010A/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1011/AP	MOUNTING	U	AR	AR		N0000	
	MT-1012/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1012/ASN-7A	MOUNTING	U	AR	AR		N0000	
	MT-1012A/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1013/TPS-100	MOUNTING	U	AR	AR		N0000	
	MT-1014()/APA-56.	MOUNTING	U	AR	AR		N0000	
	MT-1015()/APA-56.	MOUNTING	U	AR	AR		N0000	
	MT-1016/ASB-3	ELECTRICAL EQUIPMENT RACK (CANCELLED)	U	AR	AR		N0000	
	MT-1017/APQ-36	MOUNTING	U	AR	AR		N0000	
	MT-1018/APQ-36	MOUNTING	U	AR	AR		N0000	
	MT-1019/ARW	MOUNTING	U	AR	AR		N0000	
	MT-102/APS-6	MOUNTING BASE	U	AR	AR		N0000	
	MT-1020/ARW	MOUNTING	U	AR	AR		N0000	
	MT-1021/ARW-26AY	MOUNTING	U	AR	AR		N0000	
	MT-1021/ARW-26AY.	MOUNTING	U	AR	AR		N0000	
	MT-1022/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1023/ARA-91	MOUNTING	U	AR	AR		N0000	
	MT-1024/FPS-5	TRIPOD (CANCELLED)	U	AR	AR		N0000	
	MT-1025/ARA-33	MOUNTING	U	AR	AR		N0000	
	MT-1026/ARR-26	MOUNTING	U	AR	AR		N0000	
	MT-1027/ARA-33	MOUNTING	U	AR	AR		N0000	
	MT-1028/ARR-26	MOUNTING	U	AR	AR		N0000	
	MT-1029/VRC	MOUNTING	U	AR	AR		N0000	
	MT-103/APS-6	MOUNTING BASE	U	AR	AR		N0000	
	MT-1030/FPS-3	MOUNTING (CANCELLED)	U	AR	AR		N0000	
	MT-1031/FPS-5	MOUNTING	U	AR	AR		N0000	
	MT-1032/GR	HOLDER, ANTENNA COUPLER.	U	AR	AR		N0000	
	MT-1033/FPS-5	MOUNTING	U	AR	AR		N0000	
	MT-1034/U	MOUNTING	U	AR	AR		N0000	
	MT-1035/FRC-7A	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1036/FRC-17A	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1037/U	TRIPOD (CANCELLED)	U	AR	AR		N0000	
	MT-1038/FPN-16	REFLECTOR, ANTENNA	U	AR	AR		N0000	
	MT-1038/U	TRIPOD (CANCELLED)	U	AR	AR		N0000	
	MT-1039/U	TRIPOD (CANCELLED)	U	AR	AR		N0000	
	MT-104/APS-6	MOUNTING BASE	U	AR	AR		N0000	
	MT-1040()/TTQ	RACK, ELECTRICAL EQUIPMENT (CANCELLED)	U	AR	AR		N0000	
	MT-1041/GR	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1042/ARA-25	MOUNTING	U	AR	AR		N0000	
	MT-1043/ARA-25	MOUNTING	U	AR	AR		N0000	
	MT-1044/ARA-30	MOUNTING	U	AR	AR		N0000	
	MT-1045/ARM-30	MOUNTING	U	AR	AR		N0000	
	MT-1046/ARM-30	MOUNTING	U	AR	AR		N0000	
	MT-1047/ARM-30	MOUNTING	U	AR	AR		N0000	
	MT-1048()/APQ-42.	MOUNTING	U	AR	AR		N0000	
	MT-1049()/APQ-42.	MOUNTING	U	AR	AR		N0000	
	MT-105/APS-6	MOUNTING BASE	U	AR	AR		N0000	
	MT-105A/APS-6	MOUNTING BASE	U	AR	AR		N0000	
	MT-1050()/APQ-42.	MOUNTING	U	AR	AR		N0000	
	MT-1051()/APQ-42.	MOUNTING	U	AR	AR		N0000	
	MT-1052()/APQ-42.	MOUNTING	U	AR	AR		N0000	
	MT-1053()/APQ-42.	MOUNTING	U	AR	AR		N0000	
	MT-1054()/APQ-42.	MOUNTING	U	AR	AR		N0000	
	MT-1055()/URC	MOUNTING	U	AR	AR		N0000	
	MT-1056()/URC	MOUNTING	U	AR	AR		N0000	
	MT-1058/AR	MOUNTING	U	AR	AR		N0000	
	MT-1059/U	MOUNTING	U	AR	AR		N0000	
	MT-1060/U	MOUNTING	U	AR	AR		N0000	
	MT-1061/TPS-100	LEG. ANTENNA PEDESTAL	U	AR	AR		N0000	
	MT-1062/U	HOLDER, MICROPHONE (CANCELLED)	U	AR	AR		N0000	
	MT-1063/ARA-89	MOUNTING	U	AR	AR		N0000	
	MT-1064/APC-42	MOUNTING	U	AR	AR		N0000	
	MT-1065/TGC-4	STAND, TEST	U	AR	AR		N0000	
	MT-1066/TGC-4	STAND, TEST	U	AR	AR		N0000	
	MT-1067()/APQ-42	MOUNTING	U	AR	AR		N0000	
	MT-1068()/APQ-42	MOUNTING	U	AR	AR		N0000	
	MT-1069()/APQ-42	MOUNTING	U	AR	AR		N0000	
	MT-107/AR	MOUNTING PLATE	U	AR	AR		N0000	
	MT-1070/GTA-4	MOUNTING	U	AR	AR		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG C06	PROC C06	GROUP DATE	SOURCE DATA	NOTES
	MT-1071/GTA-4	MOUNTING	U	AR	AR		N0000	
	MT-1072()/AIC-9	MOUNTING	U	AR	AR		N0000	
	MT-1073()/GR	MOUNTING (CANCELLED)	U	AR	AR		N0000	
	MT-1074/AIA-4A	MOUNTING	U	AR	AR		N0000	
	MT-1075/ARC-27	MOUNTING	U	AR	AR		N0000	
	MT-1076/CRN-18A	RACK, ELECTRICAL EQUIPMENT	U	AR	AR		N0000	
	MT-1077/CPN-18A	RACK, ELECTRICAL EQUIPMENT	U	AR	AR		N0000	
	MT-1078/APX-7	MOUNTING	U	AR	AR		N0000	
	MT-1079/FR	MOUNTING	U	AR	AR		N0000	
	MT-108/AFX-1	MOUNTING BASE	U	AR	AR		N0000	
	MT-1080/GRD	RACK, ELECTRICAL EQUIPMENT	U	AR	AR		N0000	
	MT-1081/ANM-2	MOUNTING	U	AR	AR		N0000	
	MT-1082/GRC-33	MOUNTING	U	AR	AR		N0000	
	MT-1083/GRC-33	MOUNTING	U	AR	AR		N0000	
	MT-1084/FR	MOUNTING	U	AR	AR		N0000	
	MT-1085/APS-4A	MOUNTING	U	AR	AR		N0000	
	MT-1086/APS-44A	MOUNTING	U	AR	AR		N0000	
	MT-1087()/APA-98	MOUNTING	U	AR	AR		N0000	
	MT-1088()/APA-98	MOUNTING	U	AR	AR		N0000	
	MT-1089()/APA-98	MOUNTING	U	AR	AR		N0000	
	MT-109/AFX-1	SECURING PLATE	U	AR	AR		N0000	
	MT-1090()/APA-98	MOUNTING	U	AR	AR		N0000	
	MT-1091/APS-14	LEG. ANTENNA PEDESTAL	U	AR	AR		N0000	
	MT-1092/APS-14	LEG. ANTENNA PEDESTAL	U	AR	AR		N0000	
	MT-1093/ARN-19	MOUNTING	U	AR	AR		N0000	
	MT-1094/U	MOUNTING	U	AR	AR		N0000	
	MT-1095/PPS-11	MOUNTING	U	AR	AR		N0000	
	MT-1096/PPS-11	MOUNTING	U	AR	AR		N0000	
	MT-1097/PPS-11	MOUNTING	U	AR	AR		N0000	
	MT-1098/ARA-57B	MOUNTING	U	AR	AR		N0000	
	MT-1099/U	MOUNTING	U	AR	AR		N0000	
	MT-109A/U	MOUNTING	U	AR	AR		N0000	
	MT-11/ARR-3	MOUNTING	U	AR	AR		N0000	
	MT-110/APX-1	MOUNTING BRACKET	U	AR	AR		N0000	
	MT-1100/U	MOUNTING	U	AR	AR		N0000	
	MT-1101/U	MOUNTING	U	AR	AR		N0000	
	MT-1102/U	MOUNTING	U	AR	AR		N0000	
	MT-1103/U	MOUNTING	U	AR	AR		N0000	
	MT-1104/FRN	RACK, ELECTRICAL EQUIPMENT	U	AR	AR		N0000	
	MT-1105/ARR-5	MOUNTING	U	AR	AR		N0000	
	MT-1106/UKR-5	MOUNTING	U	AR	AR		N0000	
	MT-1107()/ARA-30.	MOUNTING	U	AR	AR		N0000	
	MT-1108()/APX-17.	MOUNTING	U	AR	AR		N0000	
	MT-1109()/APX-17.	MOUNTING	U	AR	AR		N0000	
	MT-111/APN-7	MOUNTING BASE	U	AR	AR		N0000	
	MT-1110()/APX-17.	MOUNTING	U	AR	AR		N0000	
	MT-1111/APS-198	MOUNTING	U	AR	AR		N0000	
	MT-1112/ARR-27	MOUNTING	U	AR	AR		N0000	
	MT-1113/ARR-27	MOUNTING	U	AR	AR		N0000	
	MT-1114/ARR-27	MOUNTING	U	AR	AR		N0000	
	MT-1115/MPQ-10-T1	MOUNTING, RADAR TRAINER.	U	AR	AR		N0000	
	MT-1116/MPQ-10-T1	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1117/GPA-15	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1118()/DPA-2	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1119/PPF	STAND, PROJECTOR	U	AR	AR		N0000	
	MT-112/APN	MOUNTING BASE	U	AR	AR		N0000	
	MT-1120/GPX-21	RACK, ELECTRICAL EQUIPMENT (CANCELLED)	U	AR	AR		N0000	
	MT-1121/GT	BRACKET, SHELF	U	AR	AR		N0000	
	MT-1122/GT	BRACKET, SHELF	U	AR	AR		N0000	
	MT-1123/GT	PLATE, ADAPTER	U	AR	AR		N0000	
	MT-1124/GT	PLATE, ADAPTER	U	AR	AR		N0000	
	MT-1125/GT	PLATE, ADAPTER	U	AR	AR		N0000	
	MT-1126/U	MOUNTING	U	AR	AR		N0000	
	MT-1127()/APS-25	MOUNTING	U	AR	AR		N0000	
	MT-1128()/APS-25.	MOUNTING	U	AR	AR		N0000	
	MT-1129()/APS-25.	MOUNTING	U	AR	AR		N0000	
	MT-113/APS-4	MOUNTING BASE	U	AR	AR		N0000	
	MT-1130()/APS-25.	MOUNTING	U	AR	AR		N0000	
	MT-1131()/APS-25.	MOUNTING	U	AR	AR		N0000	
	MT-1132/TT	BASE, STAND	U	AR	AR		N0000	
	MT-1133/USM-19	MOUNTING	U	AR	AR		N0000	
	MT-1134/APS-20B	MOUNTING	U	AR	AR		N0000	
	MT-1135/APS-20B	MOUNTING	U	AR	AR		N0000	
	MT-1136/APS-20B	MOUNTING	U	AR	AR		N0000	
	MT-1137/APS-20B	MOUNTING	U	AR	AR		N0000	
	MT-1138/APN-66	STAND, TEST, AMPLIFIER	U	AR	AR		N0000	
	MT-1139/APN-66	STAND, TEST, INDICATOR	U	AR	AR		N0000	
	MT-114/APT-1	MOUNTING BASE	U	AR	AR		N0000	
	MT-1140/AR	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1141/ARC	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	
	MT-1142/ARC	RACK, ELECTRICAL EQUIPMENT.	U	AR	AR		N0000	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
	MT-1279 (1) /APG-47	MOUNTING	U	N	2		N0000	
	MT-1280 /TIG-2	LOUDSPEAKER STAND	U	N	2		0000L0064	
	MT-1280 /TIG-2	LOUDSPEAKER STAND	U	N	2		0000L0064	
	MT-1280 (1) /APG-47	MOUNTING	U	N	2		N0000	
	MT-1281 (1) /APS-59	MOUNTING	U	N	2		N0000	
	MT-1282 /SBR-6	SUPPORT, DIRECTION FINDER SET.	U	N	2		N0000	
	MT-1283 /RTO-1	RACK, ELECTRICAL EQUIPMENT.	U	N	2		0000L0064	
	MT-1284 (1) /TTC	RACK, ELECTRICAL EQUIPMENT.	U	N	2		0000L0064	
	MT-1285/G	FRAME, SHAFT HANGER	U	AT	U	06/53	0084A0108	
	MT-1286/APA-74	MOUNTING	U	AD	AS		N0000	
	MT-1287/U	MOUNTING	U	AD	AS		0000A0084	
	MT-1288/U	MOUNTING	U	AD	AS	03/53	0000A0084	
	MT-1289/U	MOUNTING	U	AD	AS	03/53	0000A0084	
	MT-129/APN-9	MOUNTING PLATE	U	AD	AS		N0000	
	MT-1290/U	MOUNTING	U	AD	AS	03/53	0000A0084	
	MT-1291/U	MOUNTING	U	AD	AS	03/53	0000A0084	
	MT-1292/USM-25B	MOUNTING	U	AD	AS		N0000	
	MT-1293/ARM-9	MOUNTING	U	AD	AS		N0000	
	MT-1294/ARM-9	MOUNTING	U	AD	AS		N0000	
	MT-1295/ARM-9	MOUNTING	U	AD	AS		N0000	
	MT-1296/ARM-9	MOUNTING	U	AD	AS		N0000	
	MT-1297 (1) /ARC-46	MOUNTING	U	AD	AS		N0000	
	MT-1298/A	MOUNTING	U	AD	AS	03/53	0000A0084	
	MT-1299/AMH-8	MOUNTING	U	AD	AS		N0000	
	MT-13/ARR-3	MOUNTING	U	AD	AS		N0000	
	MT-130/ASQ-1	MOUNTING, BASE	U	AD	AS		N0000	
	MT-1300/APS-8	MOUNTING	U	AD	AS		N0000	
	MT-1301/U	BRACKET, CAMERA	U	AT	U	03/53	0084A0108	
	MT-1302/GR	MOUNTING	U	AD	AS		N0000	
	MT-1303/APN-3A	MOUNTING	U	AD	AS	05/53	0000A0084	
	MT-1304/APA-101	MOUNTING	U	AD	AS	03/53	0000A0084	
	MT-1305/APN-84	MOUNTING	U	AD	AS	03/53	0000A0084	
	MT-1306/TPX-22	RACK, ELECTRICAL EQUIPMENT.	U	AD	AS		0000L0064	
	MT-1307/APS-8	CRADLE, ANTENNA REFLECTOR	U	AT	U	03/53	0084A0108	
	MT-1308/MPS-8	CRADLE, ANTENNA REFLECTOR	U	AT	U	03/53	0084A0108	
	MT-1309/GH	TRIPOD, SURVEYING	U	LE	NS		0000L0064	
	MT-131/APA-15	MOUNTING, BASE	U	AD	AS	03/53	0084A0108	
	MT-1310/MPS-8	MOUNTING, MOTOR-GENERATOR	U	AD	AS		N0000	
	MT-1311/APA-56	MOUNTING	U	AD	AS		N0000	
	MT-1312/APA-56	MOUNTING	U	AD	AS		N0000	
	MT-1313/U	STAND, TEST, ELECTRONIC EQUIPMENT	U	AD	AS		N0000	
	MT-1314/GPN-6	MOUNTING	U	AD	AS		N0000	
	MT-1315/GPN-6	MOUNTING	U	AD	AS		N0000	
	MT-1316/GPN-6	MOUNTING	U	AD	AS		N0000	
	MT-1317/ASM-6	MOUNTING	U	AD	AS		AD000	
	MT-1317/ASN-6	MOUNTING	U	AD	AS	04/53	AD084	
	MT-1318/ASN-6	MOUNTING	U	AD	AS	04/53	0000A0084	
	MT-1319/ASN-7	MOUNTING	U	AD	AS	04/53	0000A0084	
	MT-132/APS-2	MOUNTING BASE	U	AD	AS		N0000	
	MT-1320/TRD-9	MOUNTING	U	AD	AS		AD000	
	MT-1321/ASM-3	STAND, TEST, DETECTING HEAD	U	AD	AS		N0000	
	MT-1322/ASM-3	MOUNTING	U	AD	AS		N0000	
	MT-1323/ASM-3	MOUNTING	U	AD	AS		N0000	
	MT-1324/ASM-3	MOUNTING	U	AD	AS		N0000	
	MT-1325/MRN-8	TRIPOD, MONITOR	U	AT	G	04/53	0000A0130	
	MT-1326/MRN-8	TRIPOD, MONITOR	U	AT	G	04/53	0000A0130	
	MT-1327/MRN-8	CRADLE, ANTENNA MAST	U	AT	G	04/53	0000A0130	
	MT-1328/MRN-7	CRADLE, ANTENNA MAST	U	AT	G	04/53	0000A0130	
	MT-1329/MRN-7	CRADLE, ANTENNA MAST	U	AT	G	04/53	0000A0130	
	MT-1329/MRN-7	CRADLE, TUNER, TRANSMISSION LINE (CANCELLED)	U	AD	AS	01/54	0000A0084	
	MT-133/ASA-1	MOUNTING BRACKET	U	AD	AS		AD000	
	MT-1330/MRN-7	HOLDER, TUNER, TRANSMISSION LINE (CANCELLED)	U	AD	AS	01/54	0000A0084	
	MT-1331/APN-74	STAND, TEST, ELECTRONIC EQUIPMENT	U	AD	AS		N0000	
	MT-1333/ARC-74	STAND, TEST, CALIBRATION EQUIPMENT	U	AD	AS		N0000	
	MT-1334/MRC-20	RACK, ELECTRICAL EQUIPMENT	U	AD	AS		N0000	
	MT-1335/MRC-20	MOUNTING	U	AD	AS	02/54	0084A0108	
	MT-1336/MRC-20	MOUNTING	U	AD	AS	02/54	0084A0108	
	MT-1337/MRC-20	BASE, DYNAMOTOR	U	AD	AS	02/54	0084A0108	
	MT-1338/MRC-20	BASE, MOTOR-GENERATOR	U	AD	AS	02/54	0084A0108	
	MT-1339/MRC-20	MOUNTING	U	AD	AS	02/54	0084A0108	
	MT-134/ASA-1A	MOUNTING BRACKET	U	AD	AS		AD000	
	MT-1340/G	MOUNTING	U	AD	AS		AD000	
	MT-1341/APN-84	MOUNTING	U	AD	AS	02/54	0084A0108	
	MT-1342/G	FRAME, SHAFT HANGER	U	AT	U	05/53	0000A0084	
	MT-1343/G	FRAME, SHAFT HANGER	U	AT	U	05/53	0084A0108	
	MT-1344/G	FRAME, SHAFT HANGER	U	AT	U	02/54	0084A0108	

SUPPLEMENT	TYPE NUMBER	ITEM NAME	SEC CLASS	ENG COG	PROC COG	GROUP DATE	SOURCE DATA	NOTES
	MT-1345/MRC-20	MOUNTING	U	AD	AS		N0000	
	MT-1346/MRC-20	MOUNTING (CANCELLED)	U	AD	AS		N0000	
	MT-1347/MRC-20	MOUNTING (CANCELLED)	U	AD	AS		N0000	
	MT-1348/MRC-20	MOUNTING	U	AD	AS		N0000	
	MT-1349/MRC-20	MOUNTING	U	AD	AS		N0000	
	MT-135/GSM-1	MOUNTING	U	AD	AS		N0000	
	MT-135A/GSM-1	MOUNTING	U	AD	AS		N0000	
	MT-1350 (1) /APS-37	MOUNTING	U	AD	AS		N0000	
	MT-1351 (1) /APS-37	MOUNTING	U	AD	AS		N0000	
	MT-1352/A	MOUNTING	U	AD	AS		N0000	
	MT-1353/APS-8	MOUNTING	U	AD	AS		N0000	
	MT-1354 (1) /ARM-71	RACK, ELECTRICAL EQUIPMENT.	U	AD	AS		N0000	
	MT-1355/TMG-5	SUPPORT, RADIOSONDE RECORDER.	U	AD	AS		N0000	
	MT-1356/G	FRAME, SHAFT HANGER	U	AT	U		N0000	
	MT-1357/G	FRAME, SHAFT HANGER	U	AT	U		N0000	
	MT-1358/G	FRAME, SHAFT HANGER	U	AT	U		N0000	
	MT-1359/G	FRAME, SHAFT HANGER	U	AT	U		N0000	
	MT-136/APQ-13	MOUNTING	U	AD	AS		N0000	
	MT-1360/G	FRAME, SHAFT HANGER	U	AT	U		N0000	
	MT-1361/MRC-20	MOUNTING	U	AD	AS		N0000	
	MT-1362/APS-38	MOUNTING	U	AD	AS		N0000	
	MT-1363/APS-38	MOUNTING	U	AD	AS		N0000	
	MT-1364/A	PLATE, MOUNTING ANTENNA COVER	U	AD	AS		N0000	
	MT-1365/A	PLATE, MOUNTING ANTENNA COVER	U	AD	AS		N0000	
	MT-1366/A	MOUNTING	U	AD	AS		N0000	
	MT-1367/A	MOUNTING	U	AD	AS		N0000	
	MT-1367/APA-44A	MOUNTING	U	AD	AS		N0000	
	MT-1368/APS-2	TRIPOD, INFRARED DETECTING SET.	U	LE	NS		0000L0064	
	MT-1369/FGC-36	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-137/APQ-13	MOUNTING	U	AD	AS		N0000	
	MT-1370/FGC-38X	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-1371/FGC-39	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-1371A/FGC-39	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-1372/FGC-38	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-1373/FGC-38X	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-1374/FGC-39	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-1374A/FGC-39	BASE, DISTRIBUTOR-TRANSMITTER	U	AD	AS		N0000	
	MT-1375 (1) /GRC-13	RACK, ELECTRICAL EQUIPMENT	U	AD	AS		N0000	
	MT-1376 (1) /GRC-15	RACK, ELECTRICAL EQUIPMENT	U	AD	AS		N0000	
	MT-1377/U	HOLDER, METER	U	AD	AS		N0000	
	MT-1378/AVM	STAND, TEST, SEARCHLIGHT	U	AD	AS		N0000	
	MT-1379/A	MOUNTING (CANCELLED)	U	AD	AS		N0000	
	MT-138/APQ-13	MOUNTING	U	AD	AS		N0000	
	MT-1380/A	MOUNTING (CANCELLED)	U	AD	AS		N0000	
	MT-1381/ARC-48	MOUNTING	U	AD	AS		N0000	
	MT-1382/ARC-48	MOUNTING	U	AD	AS		N0000	
	MT-1383/ARM-89	MOUNTING	U	AD	AS		N0000	
	MT-1384/ARC-27A	MOUNTING	U	AD	AS		N0000	
	MT-1385/A	MOUNTING	U	AD	AS		N0000	
	MT-1386 (1) /G	RACK, ELECTRICAL EQUIPMENT.	U	AD	AS		N0000	
	MT-1387 (1) /ARM-12	STAND, TEST, ELECTRONIC EQUIPMENT	U	AD	AS		N0000	
	MT-1388/MRN-11	RACK, ELECTRICAL EQUIPMENT	U	AD	AS		N0000	
	MT-1389/MRN-11	RACK, ELECTRICAL EQUIPMENT	U	AD	AS		N0000	
	MT-139/APQ-13	MOUNTING	U	AD	AS		N0000	
	MT-1390/U	STAND, MICROPHONE	U	AD	AS		N0000	
	MT-1391/U	STAND, MICROPHONE	U	AD	AS		N0000	
	MT-1392 (1) /ARC-27	MOUNTING	U	AD	AS		N0000	
	MT-1393/APA-109	MOUNTING	U	AD	AS		N0000	
	MT-1394/APA-109	MOUNTING	U	AD	AS		N0000	
	MT-1395/APA-109	MOUNTING	U	AD	AS		N0000	
	MT-1396/APA-109	MOUNTING	U	AD	AS		N0000	
	MT-1397/APA-109	MOUNTING	U	AD	AS		N0000	
	MT-1399/APA-112	MOUNTING	U	AD	AS		N0000	
	MT-14/ARM-1	MOUNTING BASE	U	AD	AS		N0000	
	MT-14A/ARM-1	MOUNTING BASE	U	AD	AS		N0000	
	MT-140/APS-3	MOUNTING BASE	U	AD	AS		N0000	
	MT-1400/APA-103	MOUNTING	U	AD	AS		N0000	
	MT-1401/APA-103	MOUNTING	U	AD	AS		N0000	
	MT-1402/APA-103	MOUNTING	U	AD	AS		N0000	
	MT-1403/APN-81	MOUNTING	U	AD	AS		N0000	
	MT-1404/APN-81	MOUNTING	U	AD	AS		N0000	
	MT-1405/APN-81	MOUNTING	U	AD	AS		N0000	
	MT-1406/U	BASE, DYNAMOTOR (CANCELLED)	U	AD	AS		N0000	
	MT-1407/APQ-45	MOUNTING	U	AD	AS		N0000	
	MT-1408/ARM	MOUNTING	U	AD	AS		N0000	
	MT-1409 (1) /ARR-37	MOUNTING	U	AD	AS		N0000	
	MT-141/APR-1	MOUNTING BASE	U	AD	AS		N0000	

