

2. Survival kit inspection every 120 days

Aircraft Emergency Equipment :

1. Fire extinguisher (inspected every 6 months)
2. First aid kit (inspected when least-time item in kit requires it)
3. Survival kit (inspected every 120 days ?)
4. Emergency locator transmitter (ELT)

Aircraft Weight & Balance Records :

Must be checked by the pilot every flight, checked by the W & B technician every 90 days and must be recomputed by the W & B technician annually. W & B must also be recomputed anytime there are items added to or removed to the aircraft that would make a significant change. A significant change for the is defined as .3 inches or .3% of weight. (For the OH-58A+ this is about 9 pounds.)

AROK VanRaden
5:30 (SAT)

ROT Lucke
HOT TUB

(7)

Silver/MS Furs.