

FOLDOUT ILLUSTRATIONS**TABLE OF CONTENTS**

	Page
FO-1	GENERAL ARRANGEMENT AND DIMENSION DIAGRAMFO-1
FO-2	INTERIOR ARRANGEMENT DIAGRAM.....FO-2
FO-3	OVERHEAD SWITCH AND LIGHTING PANELFO-3
FO-4	INSTRUMENT PANEL (TYPICAL)FO-4
FO-5	FUEL SYSTEM SCHEMATIC DIAGRAM.....FO-5
FO-6	AC ELECTRICAL SYSTEM SCHEMATIC DIAGRAM.....FO-6
FO-7	DC ELECTRICAL SYSTEM SCHEMATIC DIAGRAM.....FO-7
FO-8	CIRCUIT BREAKER PANELS (TYPICAL)FO-8
FO-9	LOWER COCKPIT CONTROL PANELSFO-9
FO-10	EMERGENCY EXITS, ENTRANCES AND EQUIPMENT.....FO-10
FO-11	ANTENNAS, AVIONICS AND AFCS EQUIPMENTFO-11
FO-12	SENSOR SELECTION FLOW CHARTFO-12
FO-13	IN-FLIGHT FLOW CHARTFO-13

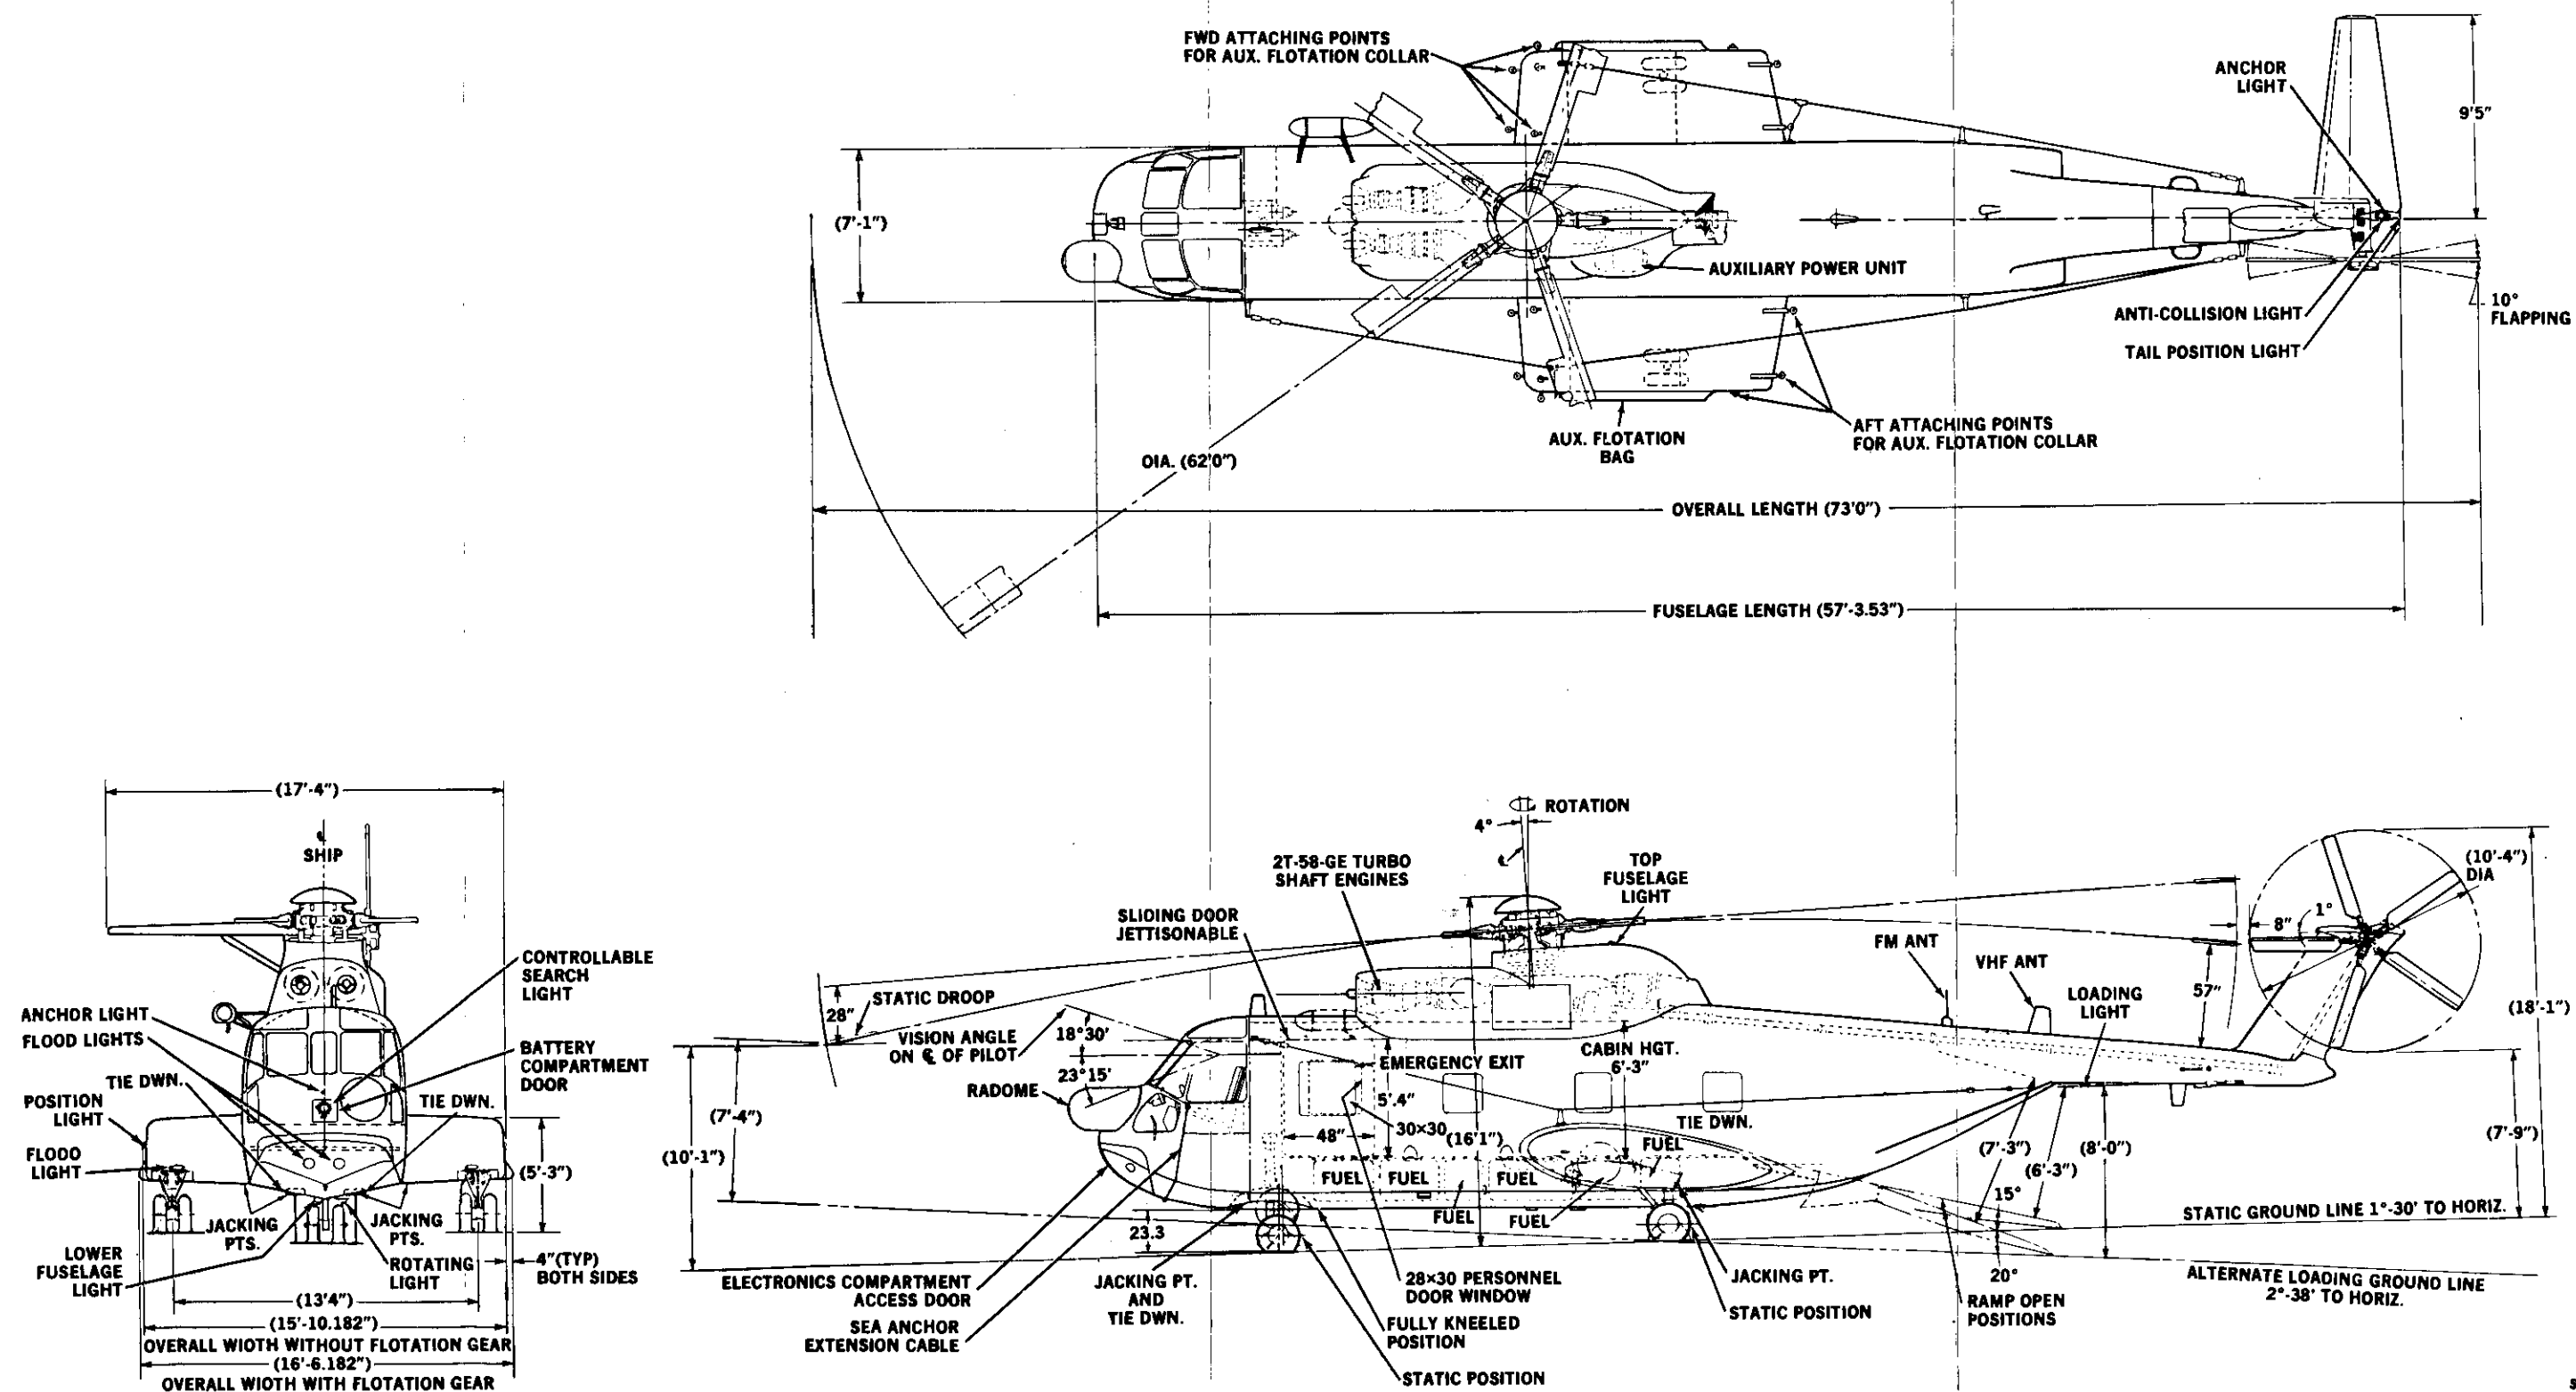


Figure FO-1. General Arrangement and Dimension Diagram




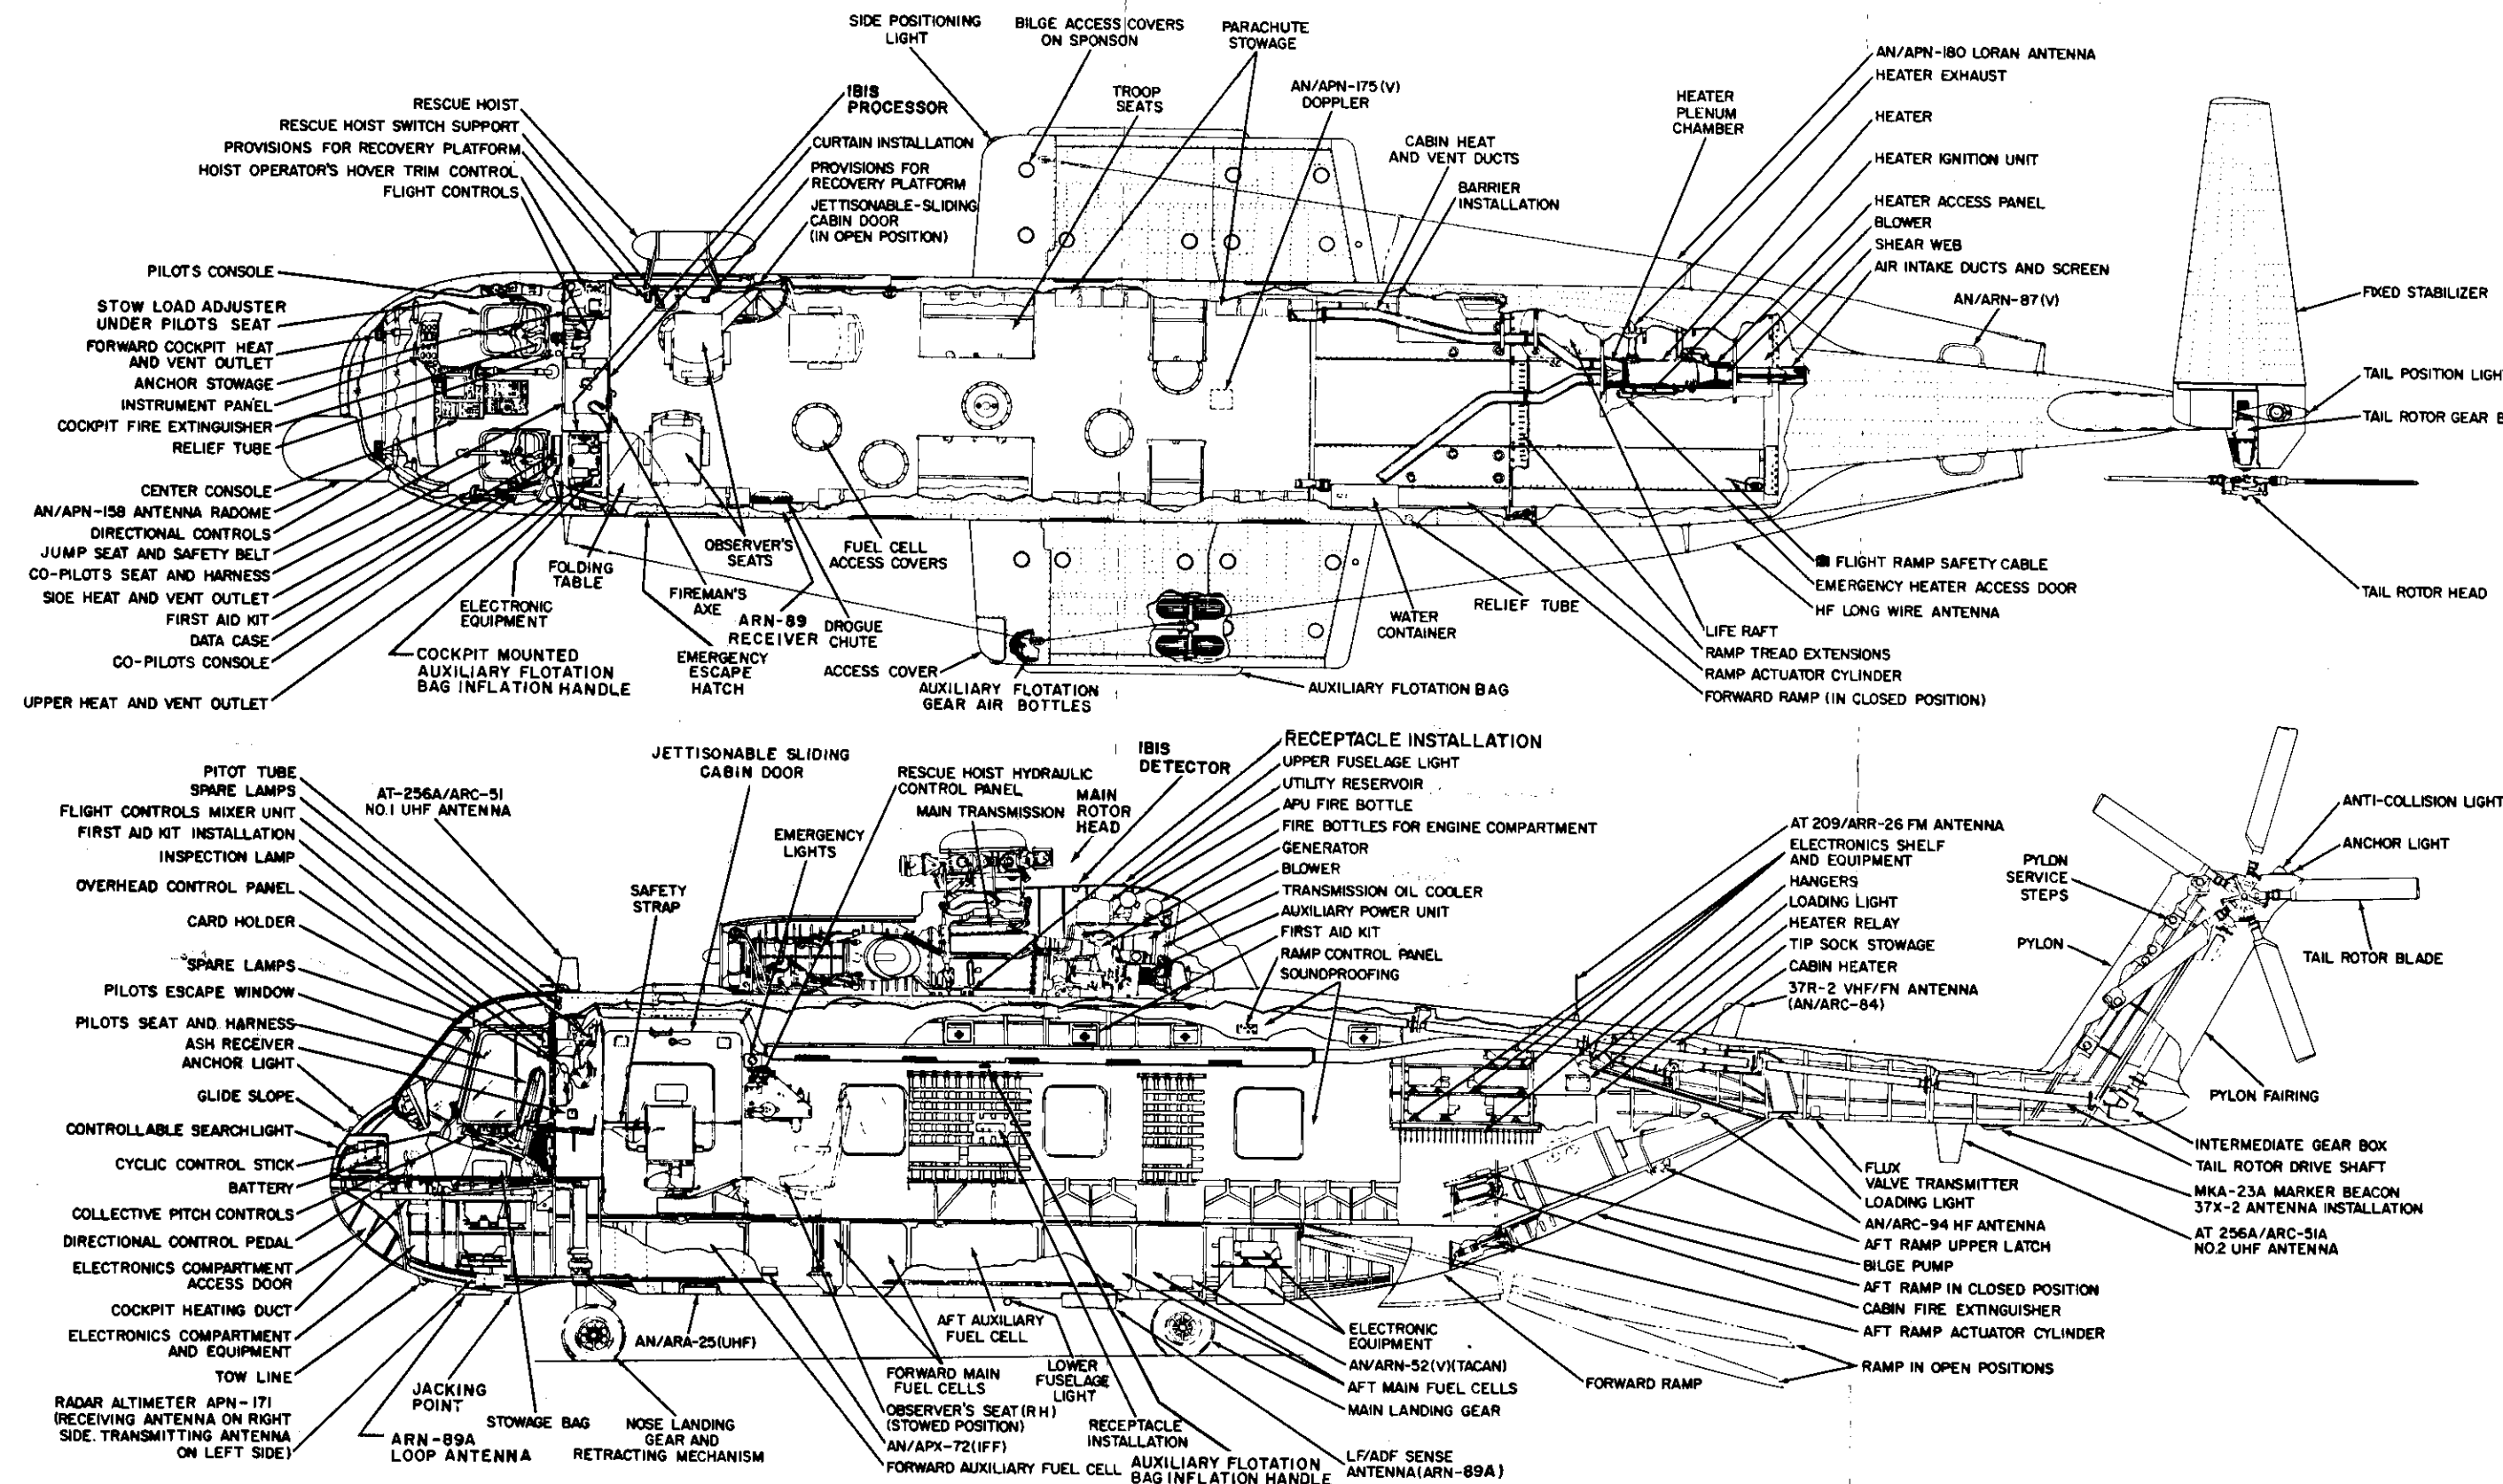


Figure FO-2. Interior Arrangement Diagram

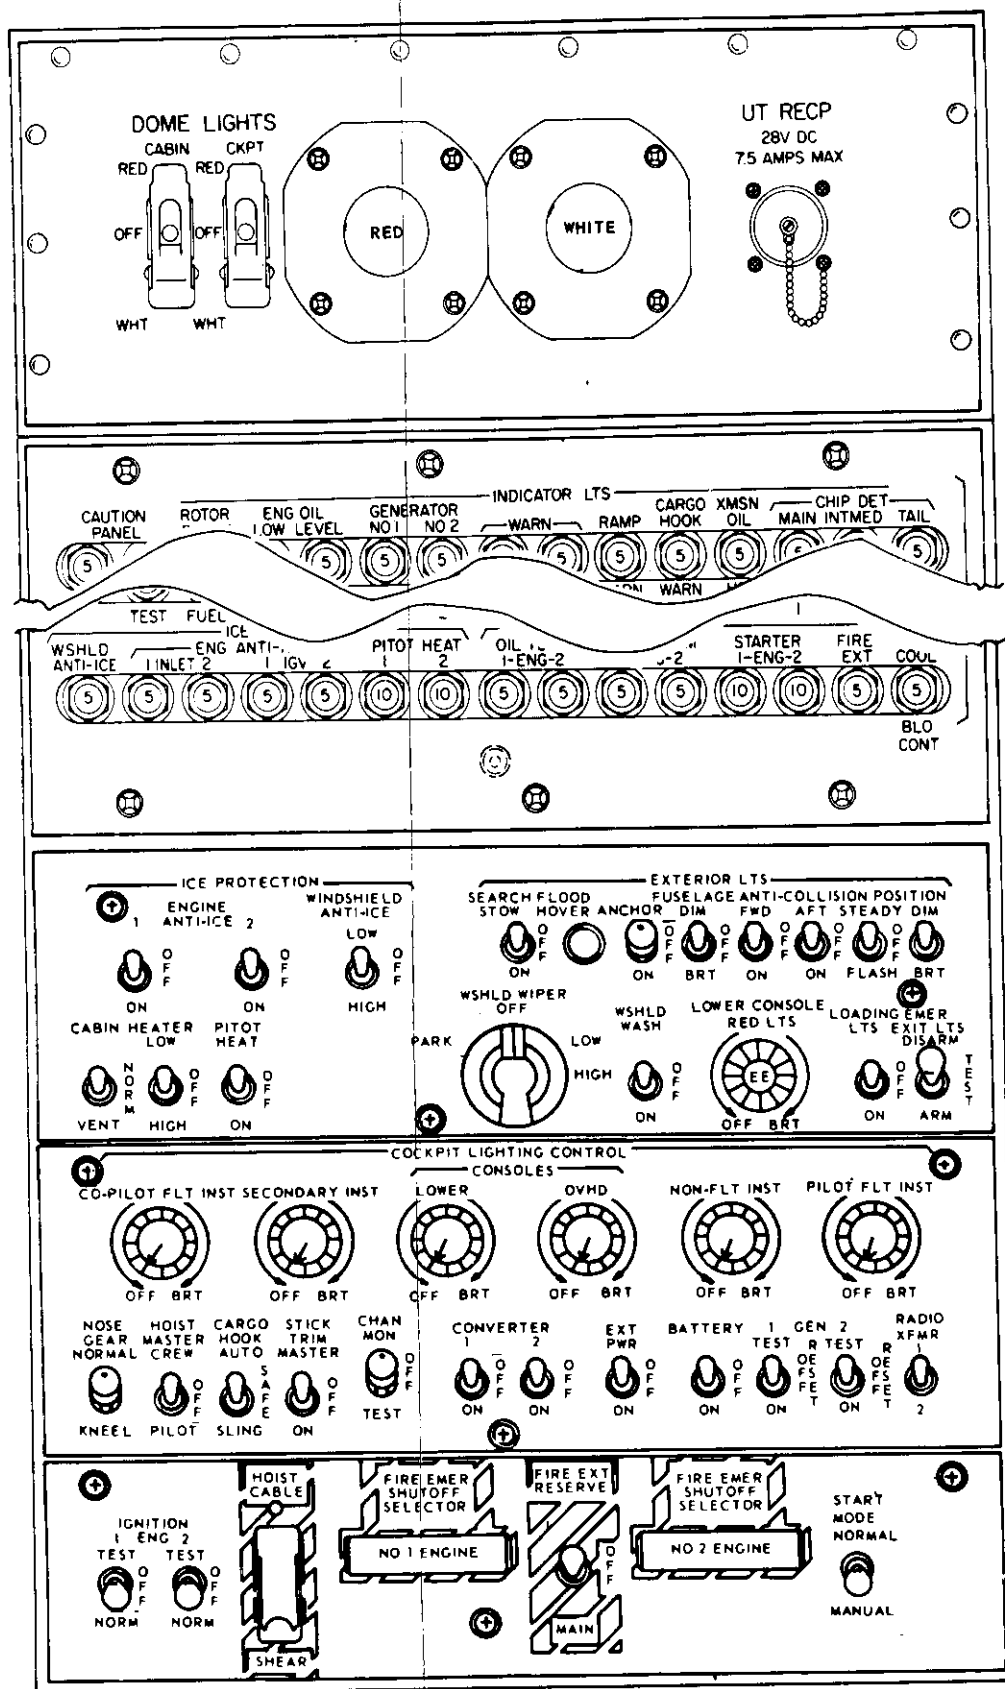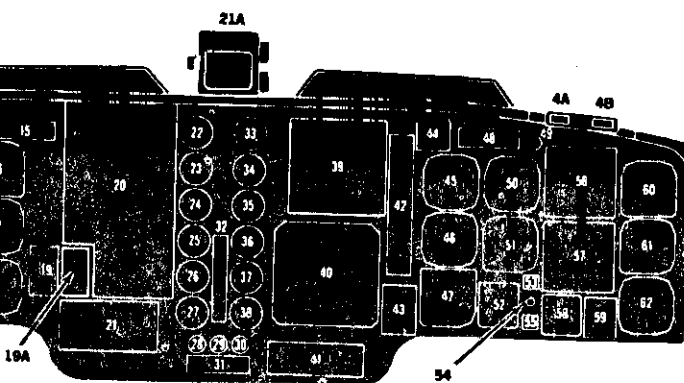

S 8559

Figure FO-3. Overhead Switch and Lighting Panel

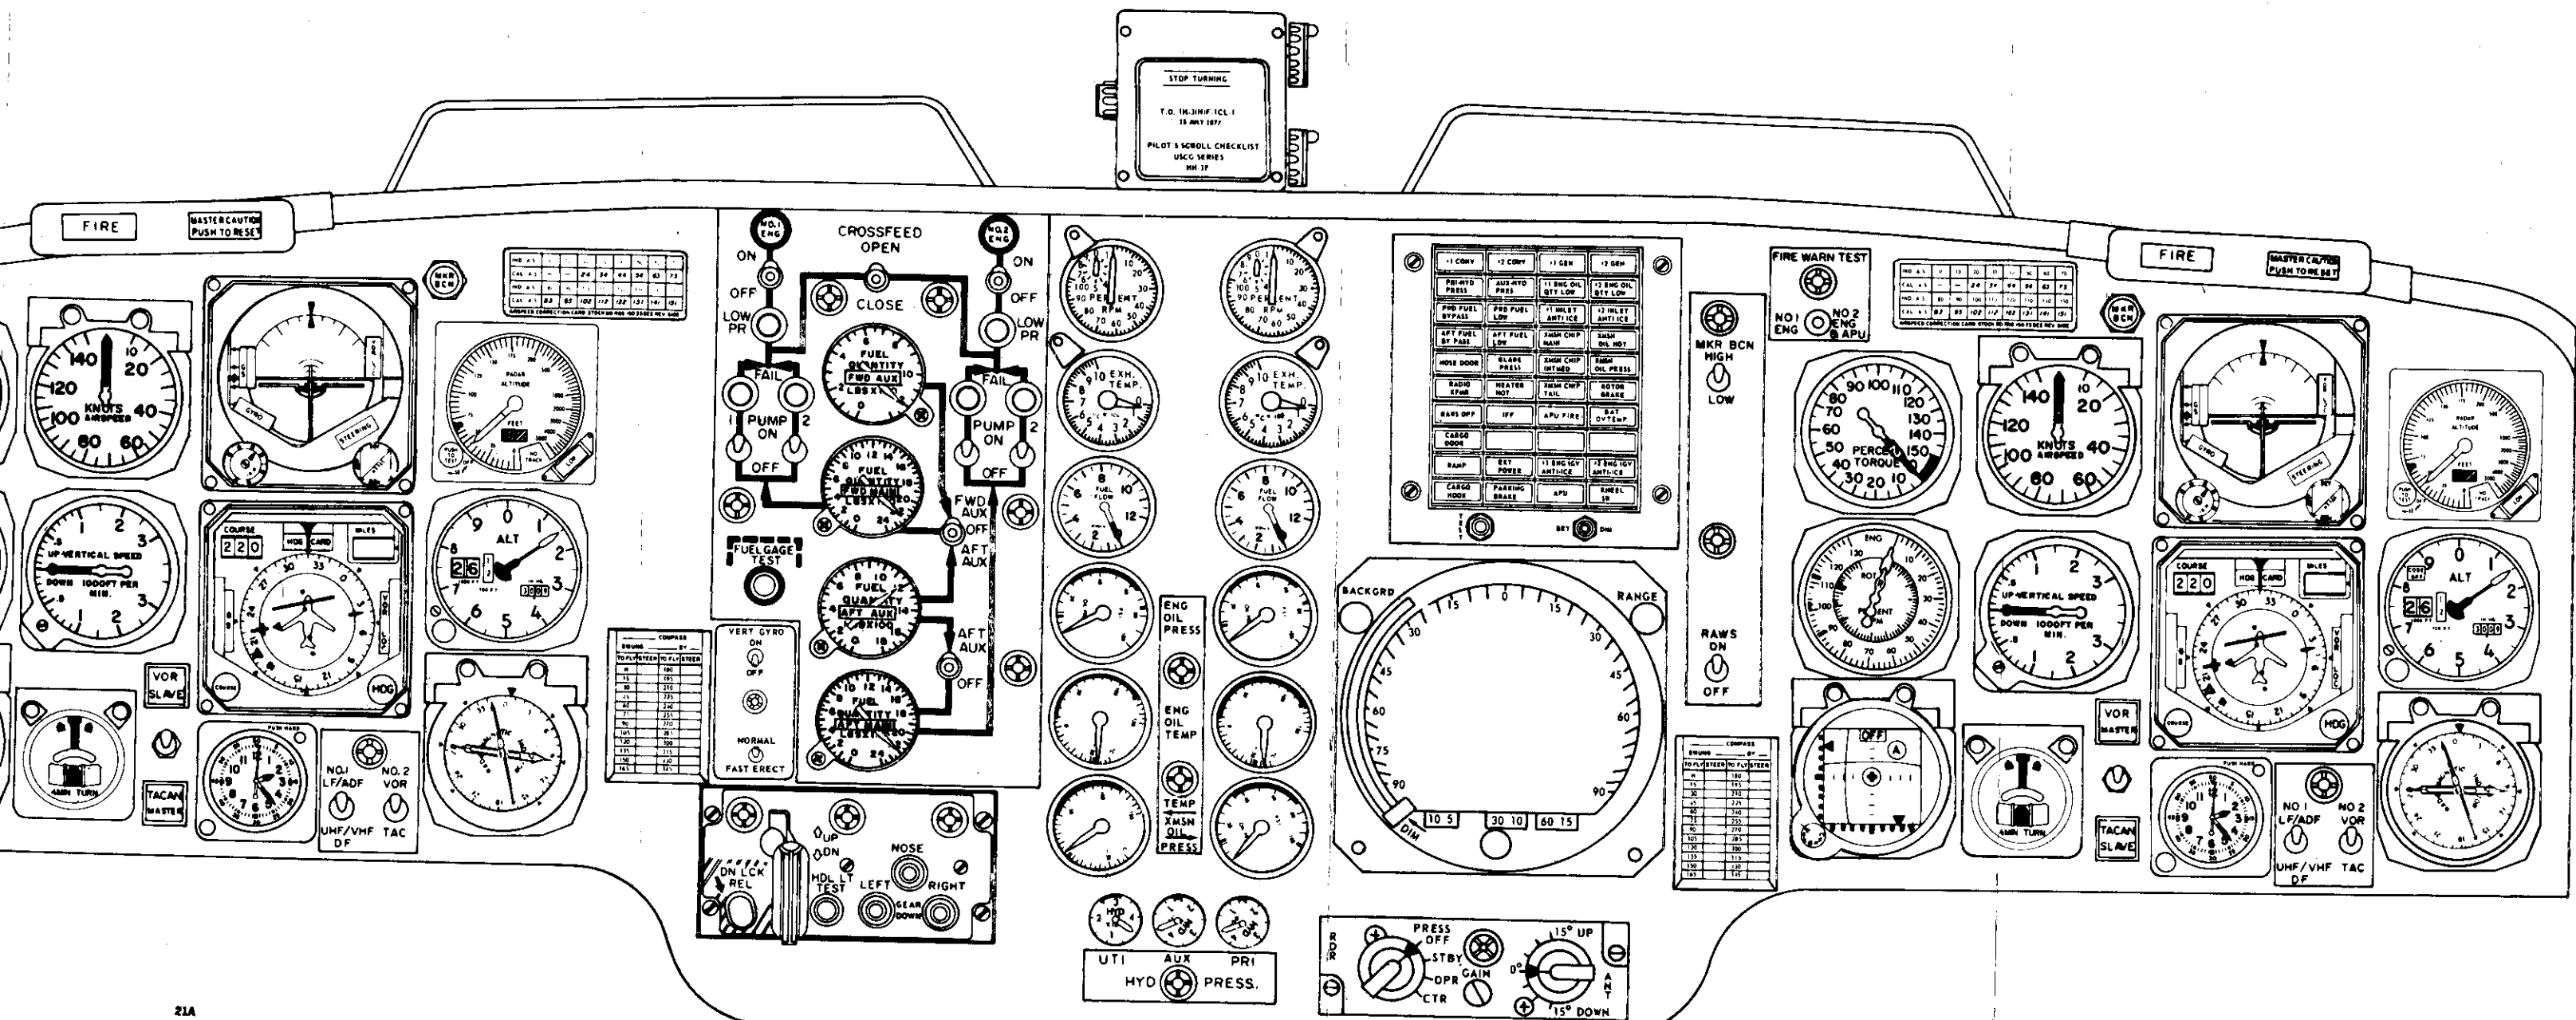

1. TORQUE INDICATOR
2. TRIPLE TACHOMETER
3. AFCS INDICATOR
4. AIRSPEED INDICATOR
- 4-A FIRE WARNING
- 4-B MASTER CAUTION RESET
5. VERTICAL VELOCITY INDICATOR
6. TURN AND SLIP INDICATOR
7. VOR SLAVE LIGHT
8. VOR SLAVE/TACAN MASTER SELECTOR SWITCH
9. TACAN MASTER LIGHT
10. FLIGHT DIRECTOR - ATTITUDE INDICATOR
11. FLIGHT DIRECTOR - COURSE INDICATOR
12. CLOCK
13. LF/ADF - VOR SELECTOR PANEL
14. MARKER BEACON LIGHT
15. AIRSPEED CORRECTION CARD

16. RADAR ALTIMETER
17. PRESSURE ALTIMETER
18. RADIO MAGNETIC INDICATOR (RMI)
19. COMPASS CORRECTION CARD
- 19-A VERTICAL GYRO FAST ERECT SWITCH PANEL
20. FUEL MANAGEMENT PANEL
21. LANDING GEAR CONTROL PANEL
- 21-A SCROLL CHECKLIST
22. GAS GENERATOR TACHOMETER
23. POWER TURBINE INLET TEMPERATURE INDICATOR
24. FUEL FLOW INDICATOR
25. ENGINE OIL PRESSURE INDICATOR
26. ENGINE OIL TEMPERATURE INDICATOR
27. TRANSMISSION OIL TEMPERATURE INDICATOR
28. UTILITY HYDRAULIC PRESSURE INDICATOR
29. AUXILIARY HYDRAULIC PRESSURE INDICATOR
30. PRIMARY HYDRAULIC PRESSURE INDICATOR

31. HYDRAULIC INDICATOR IDENTIFICATION PANEL
32. ENGINE INDICATOR IDENTIFICATION PANEL
33. GAS GENERATOR TACHOMETER
34. POWER TURBINE INLET TEMPERATURE INDICATOR
35. FUEL FLOW INDICATOR
36. ENGINE OIL PRESSURE INDICATOR
37. ENGINE OIL TEMPERATURE INDICATOR
38. TRANSMISSION OIL PRESSURE INDICATOR
39. CAUTION-ADVISORY PANEL
40. RADAR SCOPE
41. RADAR CONTROL PANEL
42. MARKER BEACON/RAWS CONTROL PANEL
43. COMPASS CORRECTION CARD
44. FIRE WARNING TEST PANEL
45. TORQUE INDICATOR
46. TRIPLE TACHOMETER

47. AFCS INDICATOR
48. AIRSPEED CORRECTION CARD
49. MARKER BEACON LIGHT
50. AIRSPEED INDICATOR
51. VERTICAL VELOCITY INDICATOR
52. TURN AND SLIP INDICATOR
53. VOR MASTER LIGHT
54. VOR MASTER/TACAN SLAVE SELECTOR SWITCH
55. TACAN SLAVE LIGHT
56. FLIGHT DIRECTOR - ATTITUDE INDICATOR
57. FLIGHT DIRECTOR - COURSE INDICATOR
58. CLOCK
59. LF/ADF - VOR SELECTOR PANEL
60. RADAR ALTIMETER
61. PRESSURE ALTIMETER
62. RADIO MAGNETIC INDICATOR (RMI)

S 8563 (C3)

Figure FO-4. Instrument Panel (Typical)

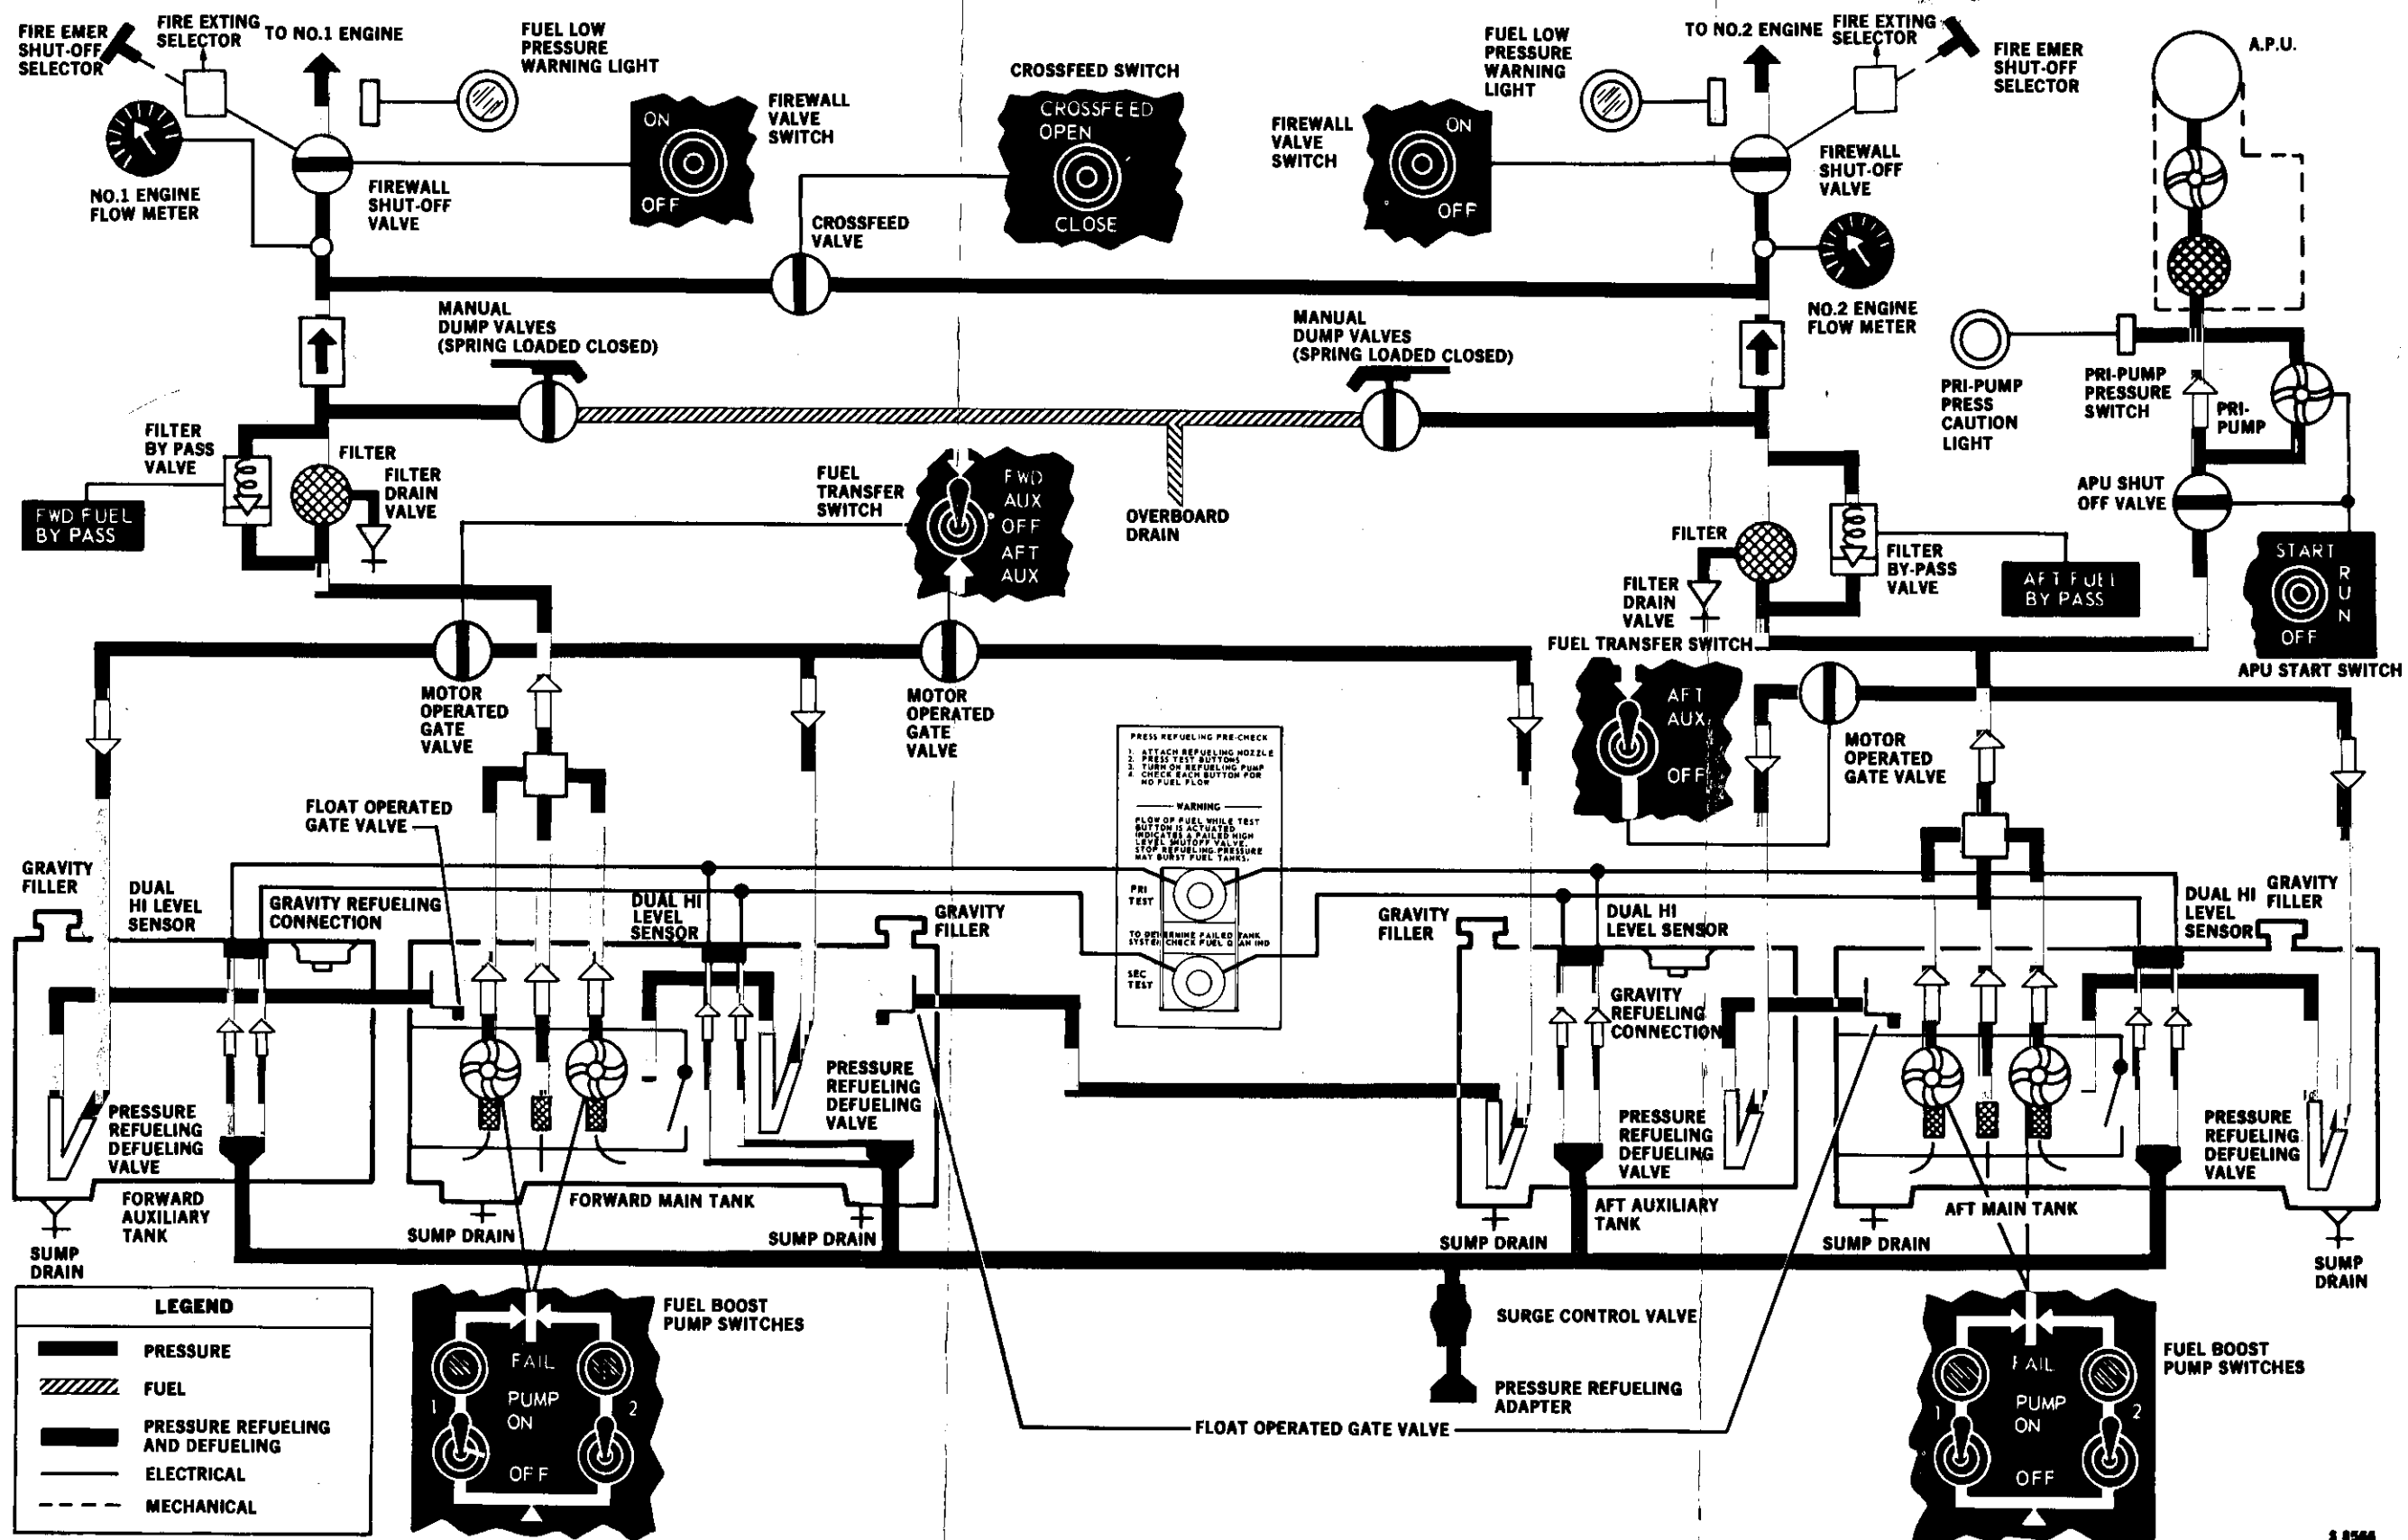


Figure FO-5. Fuel System Schematic Diagram

3 8566



Figure FO-6. AC Electrical System Schematic Diagram


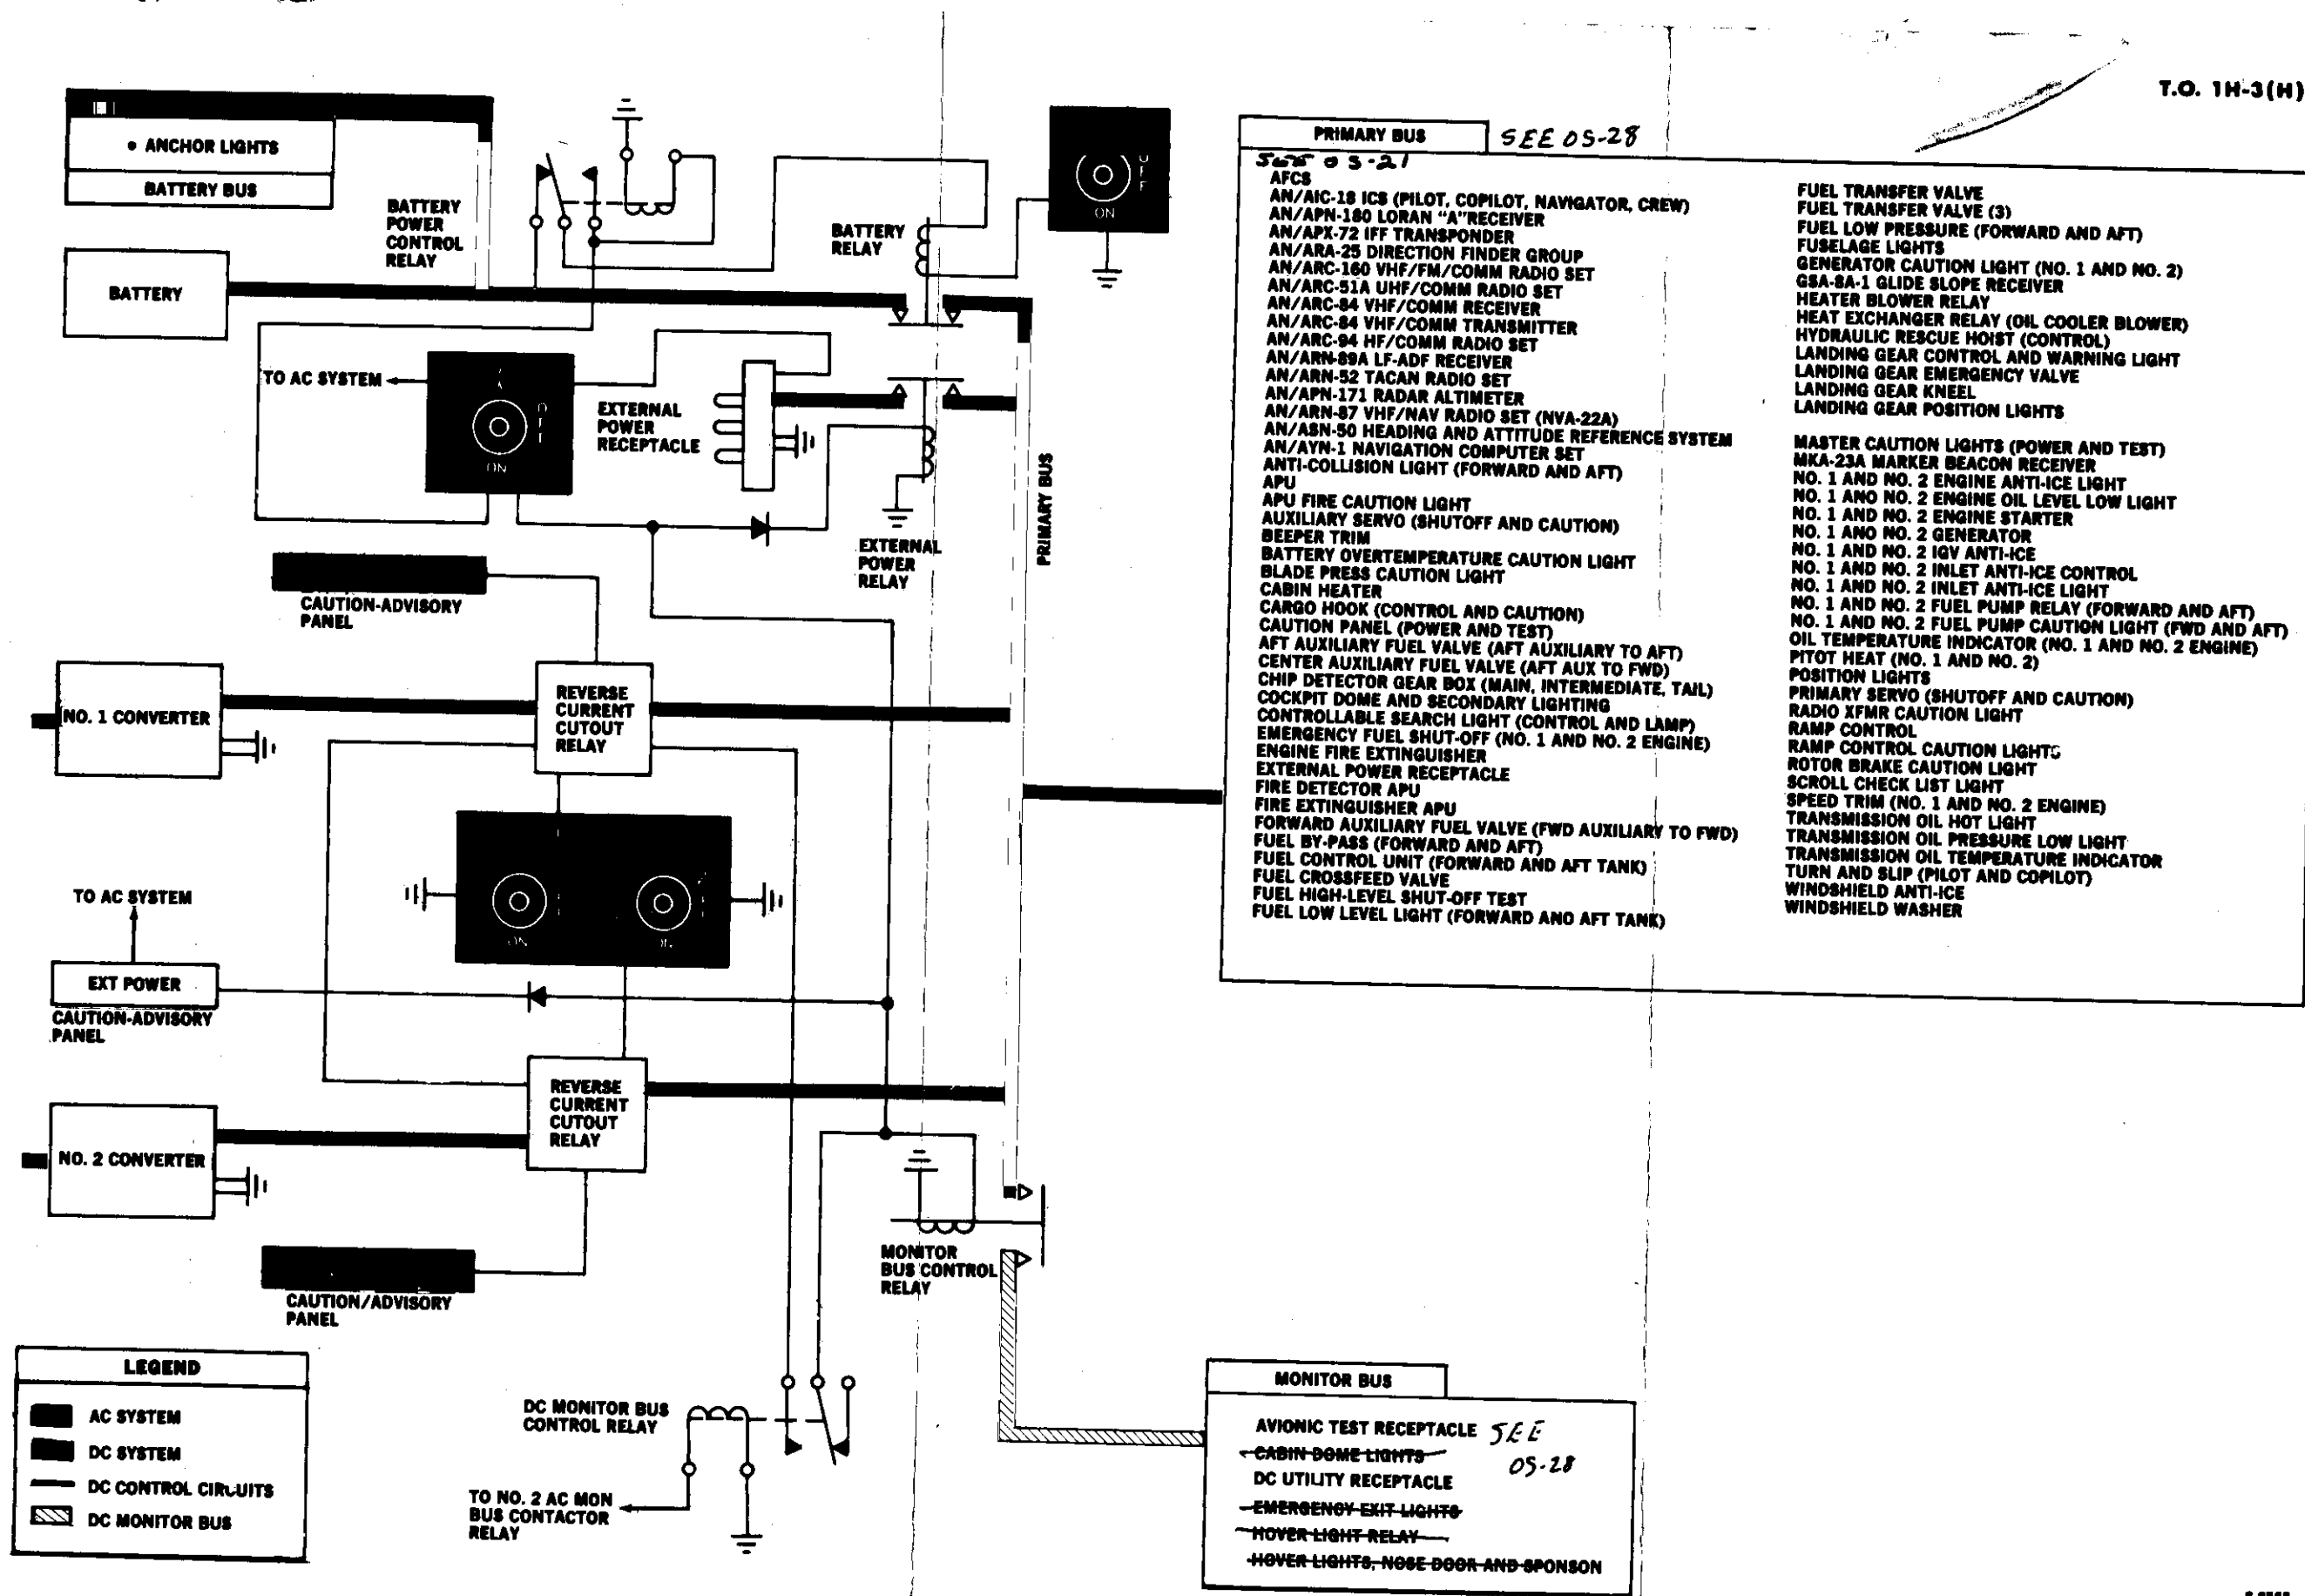


Figure FO-7. DC Electrical System Schematic Diagram

CENTER

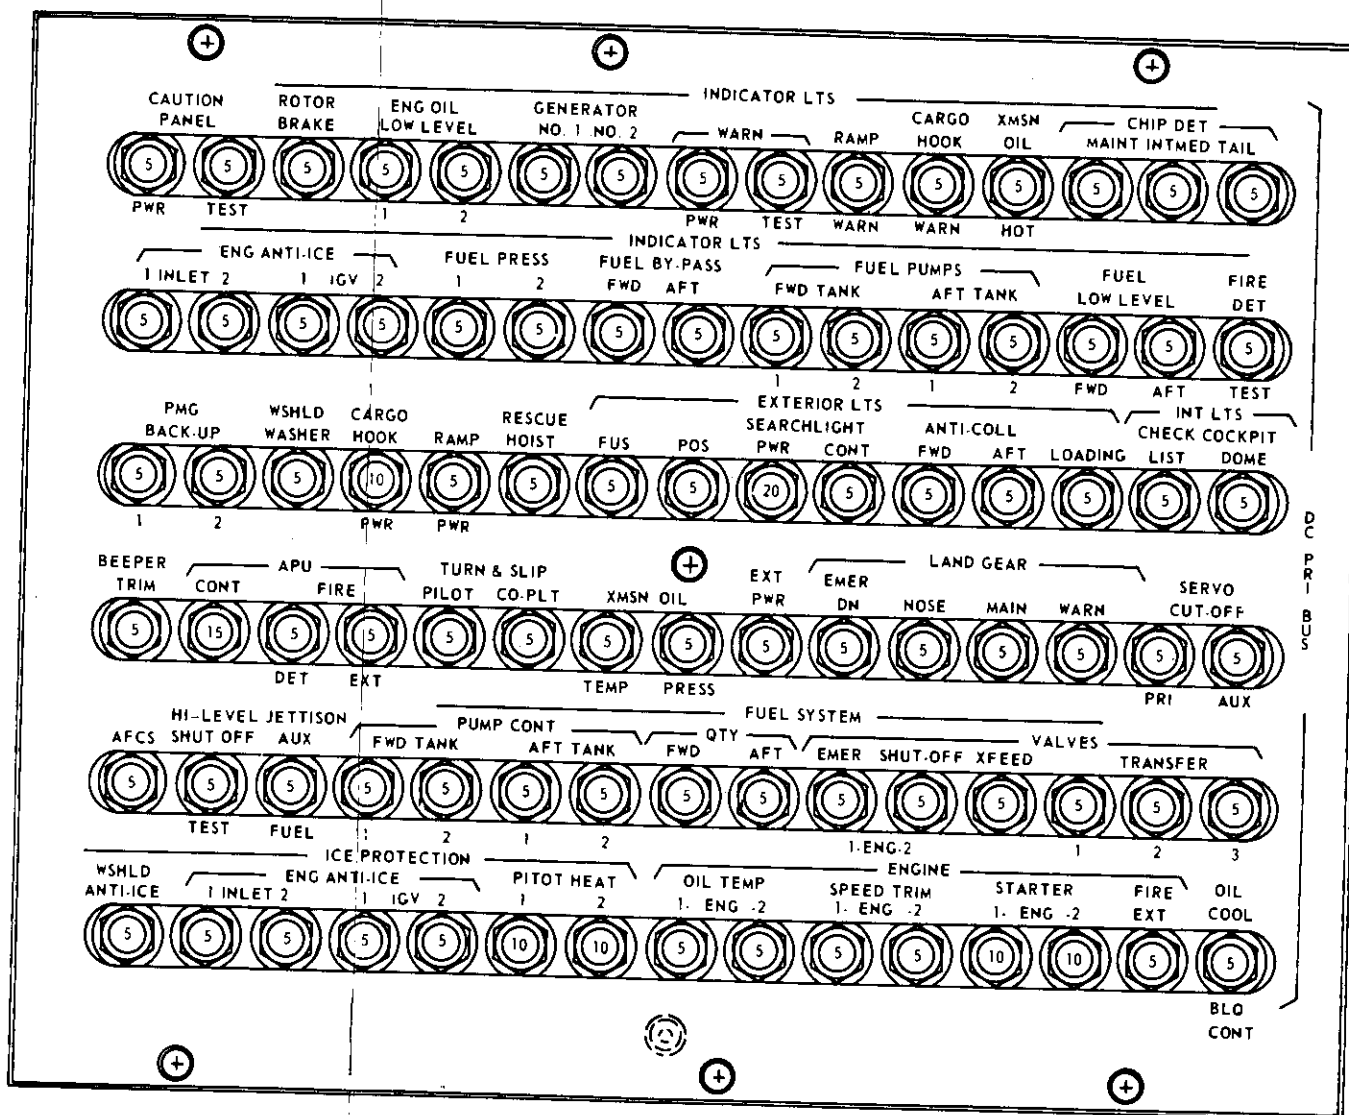

PILOT'S SEE OS-28

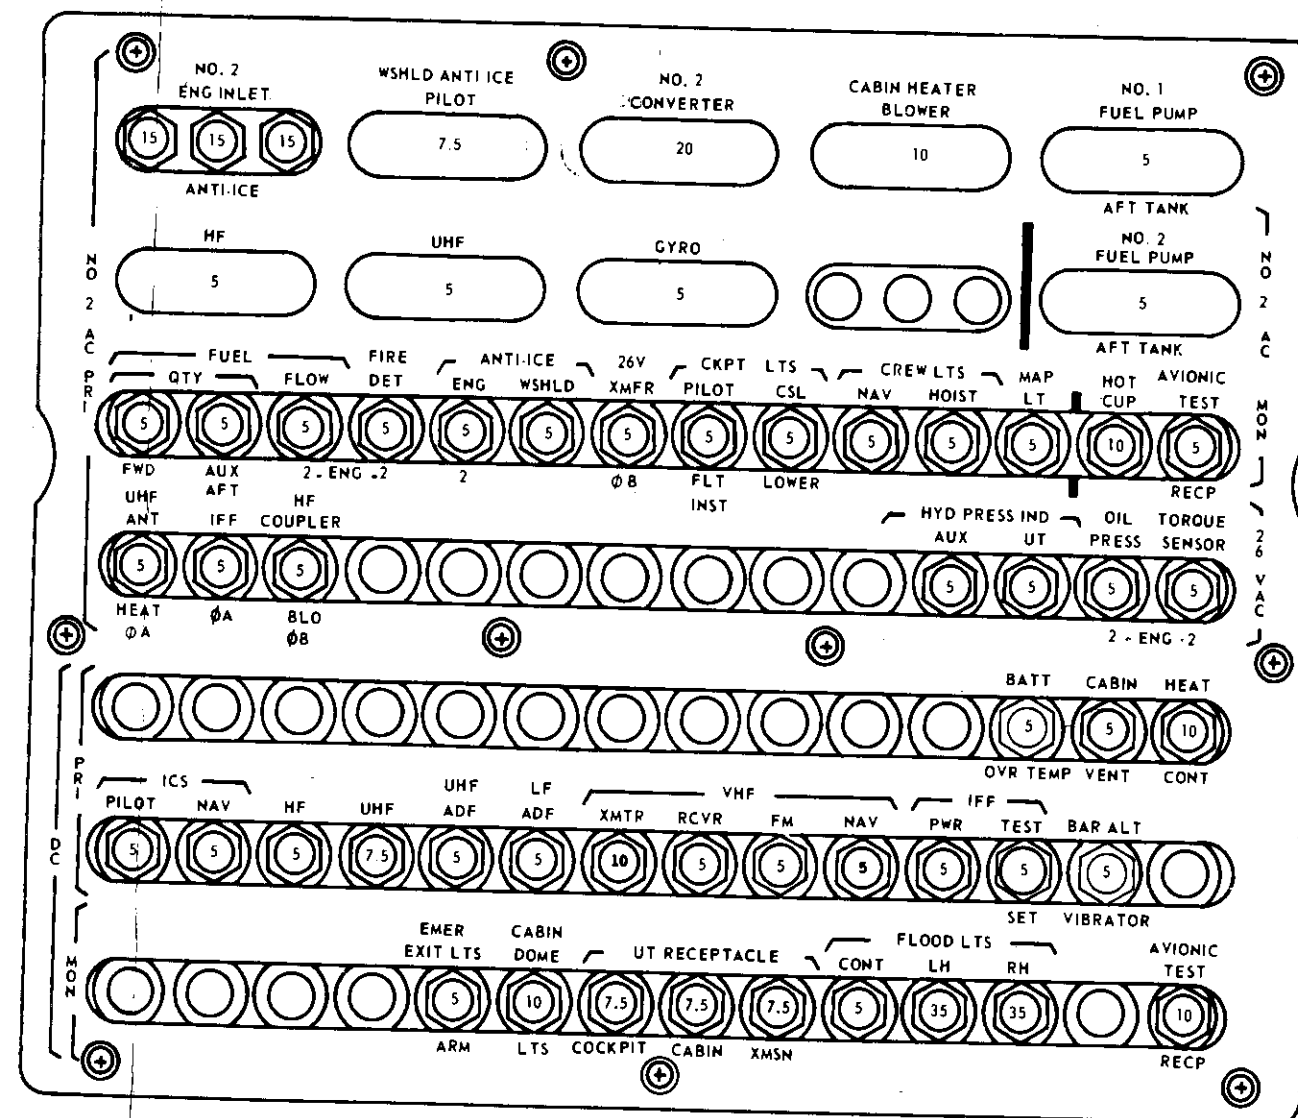
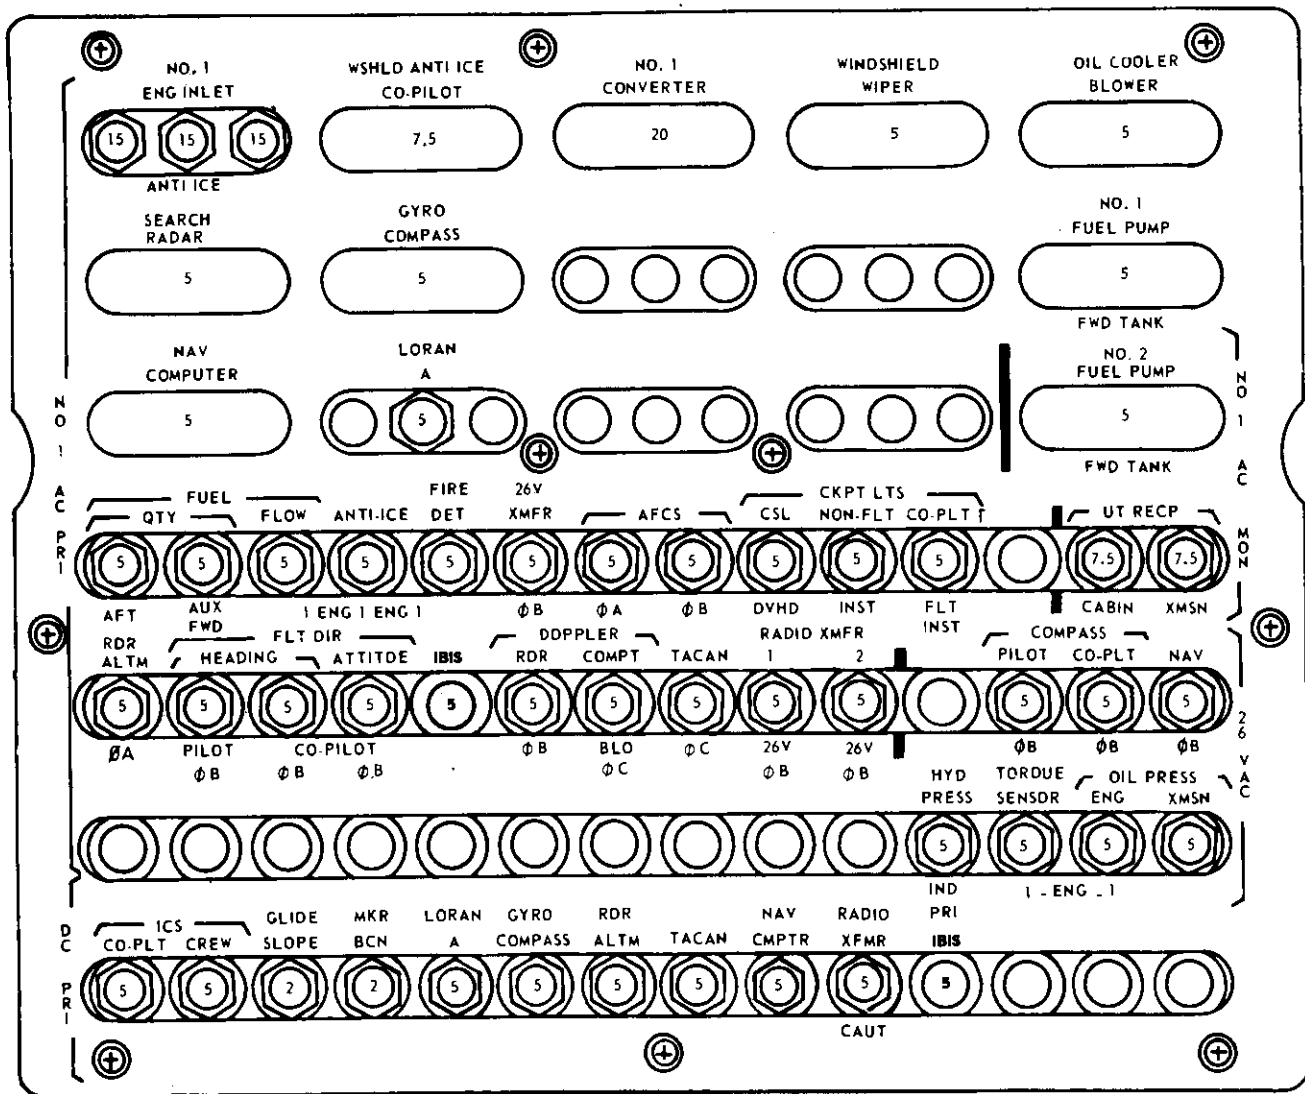


Figure FO-8. Circuit Breaker Panels (Typical)

COPILOTS








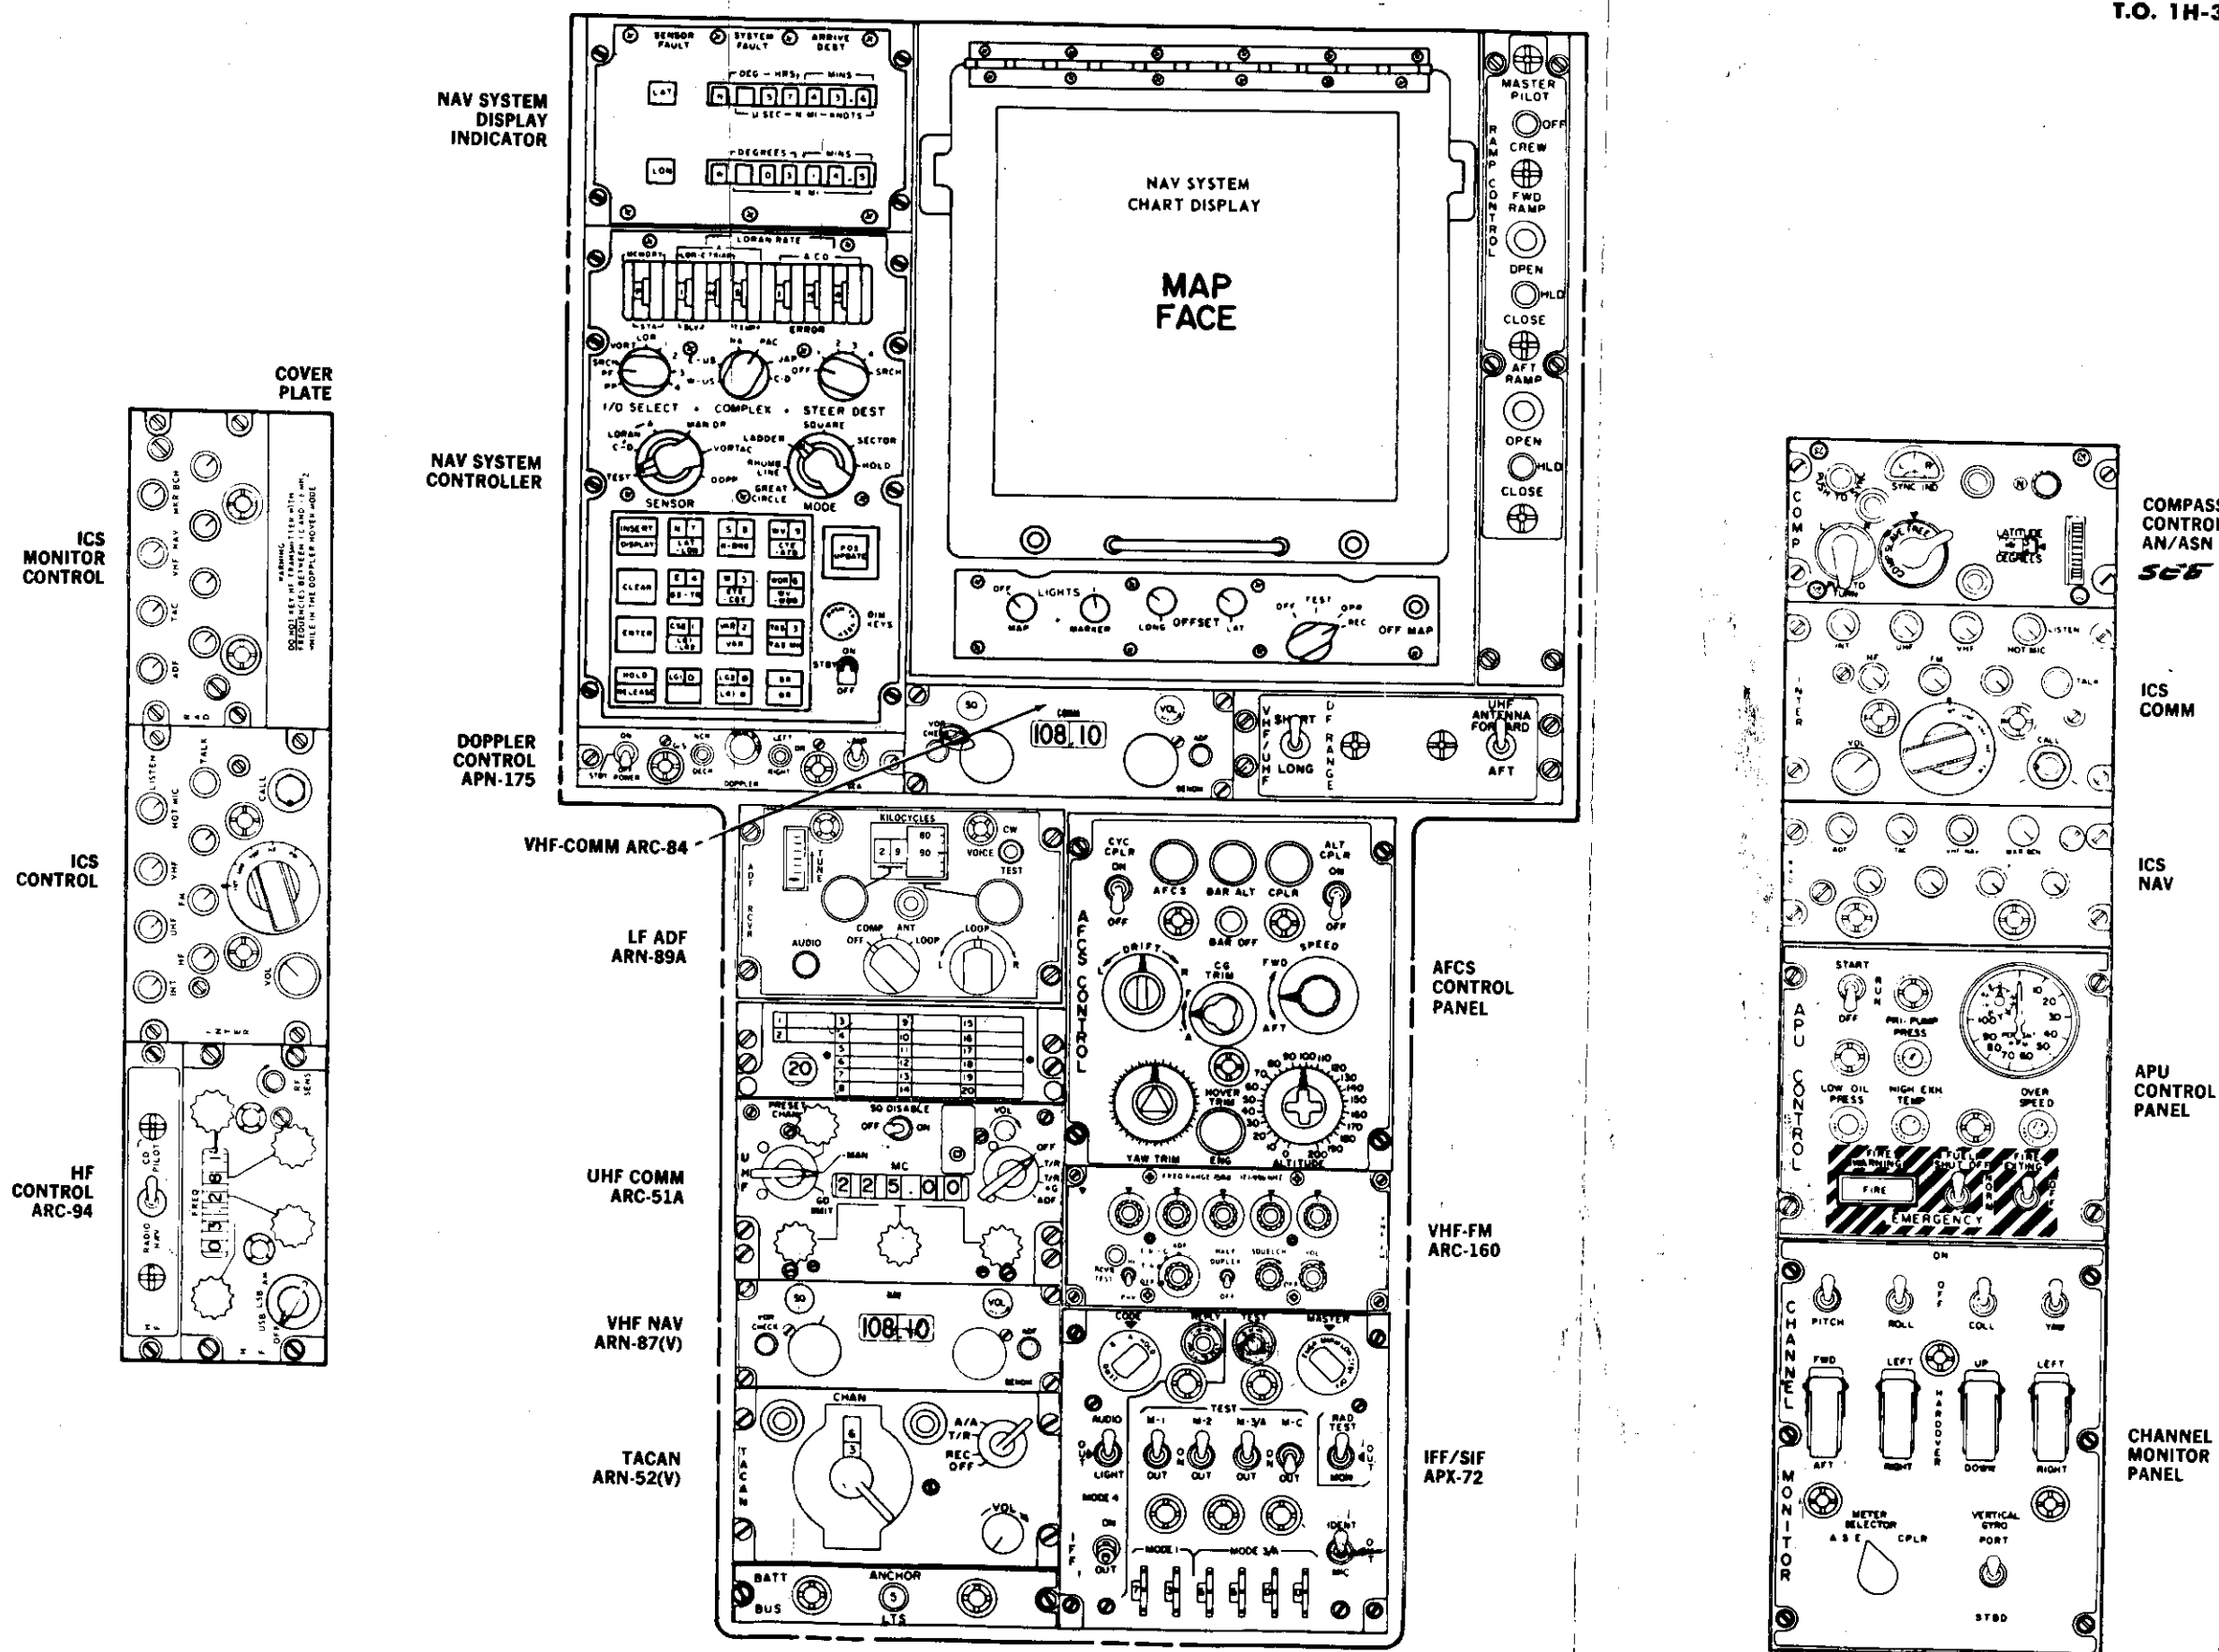


Figure FO-9. Lower Cockpit Control Panels

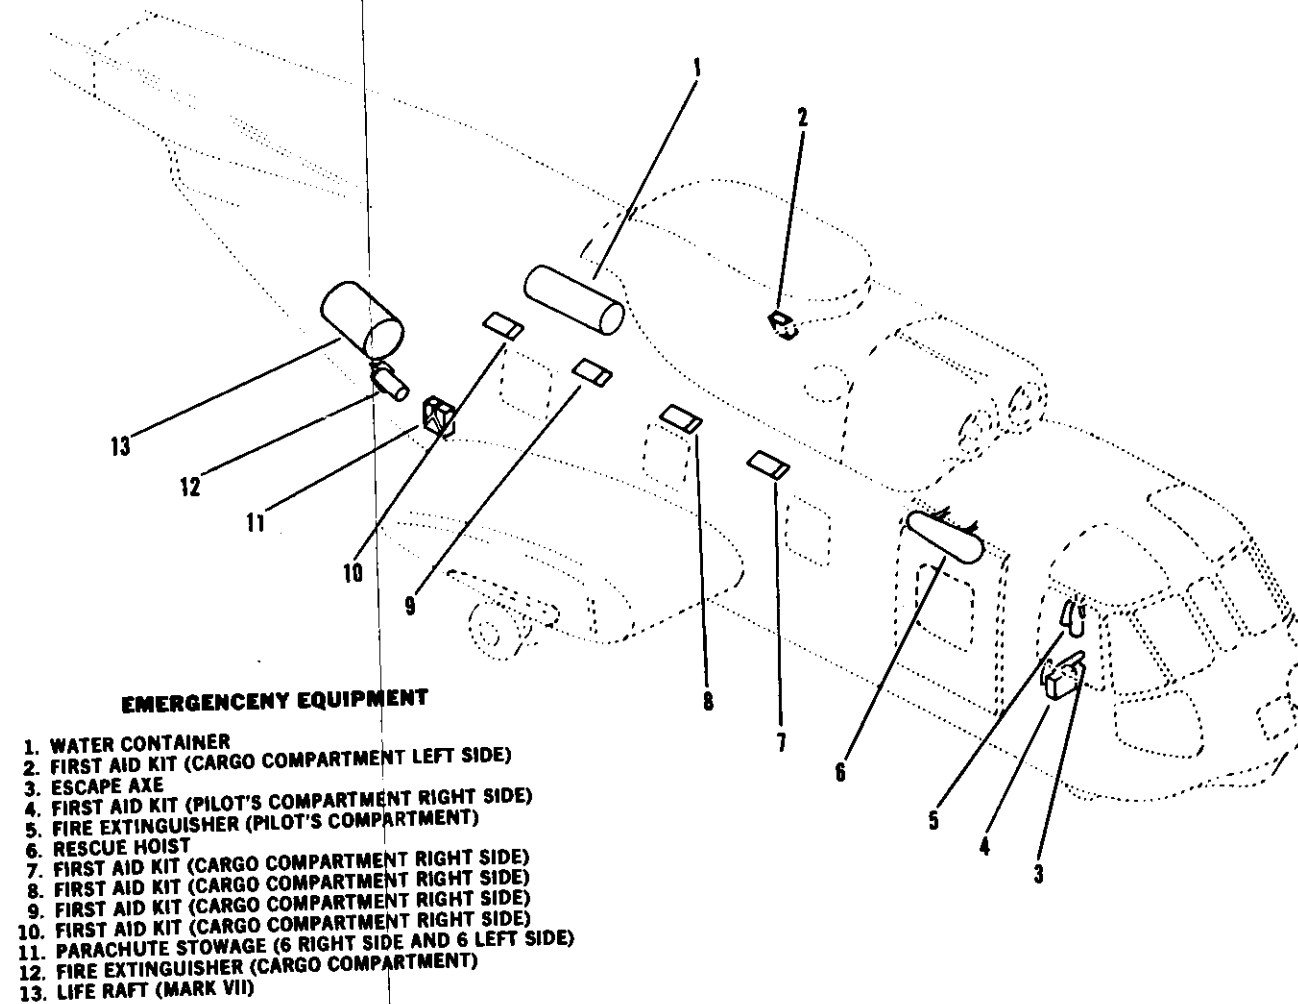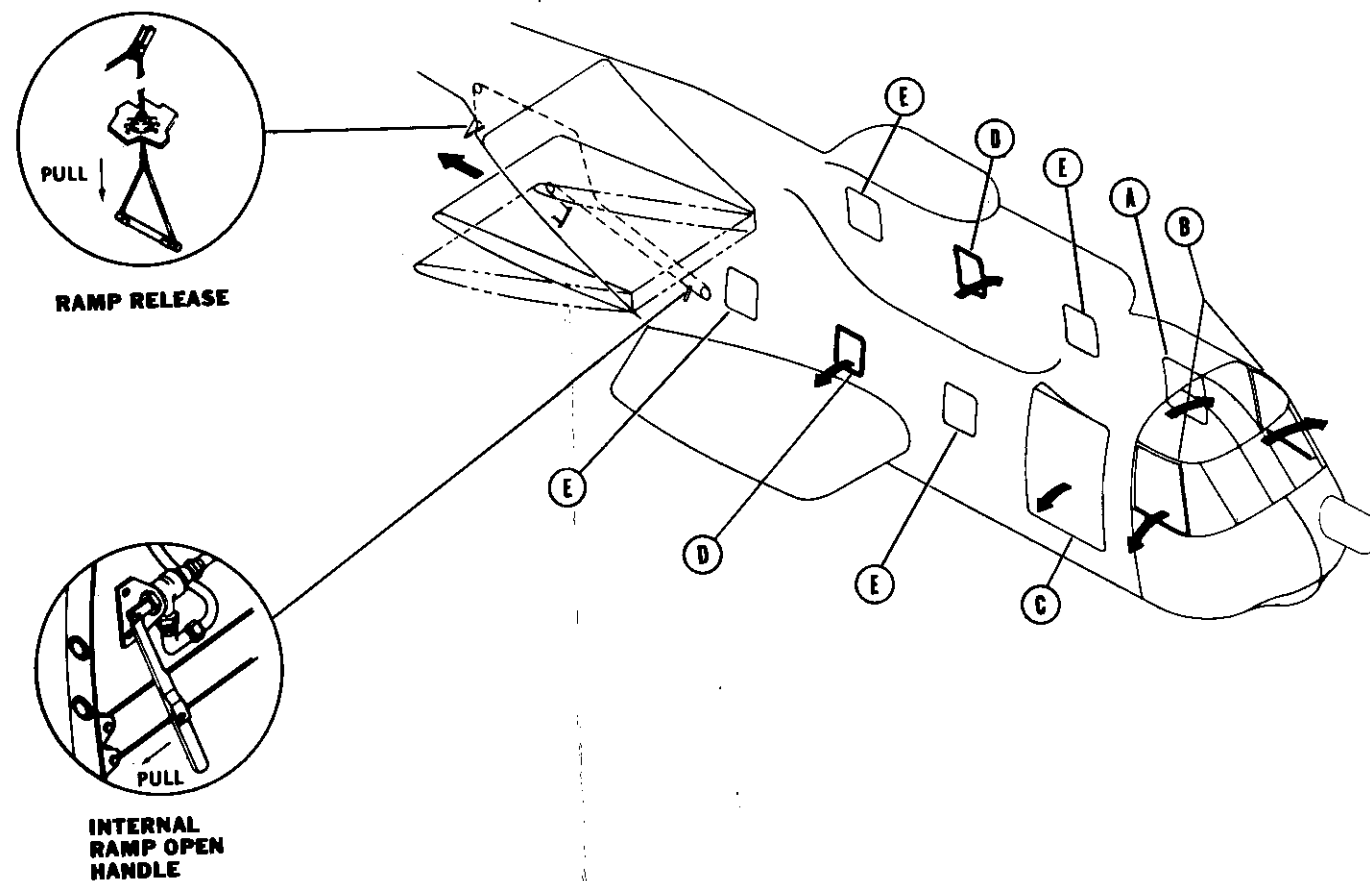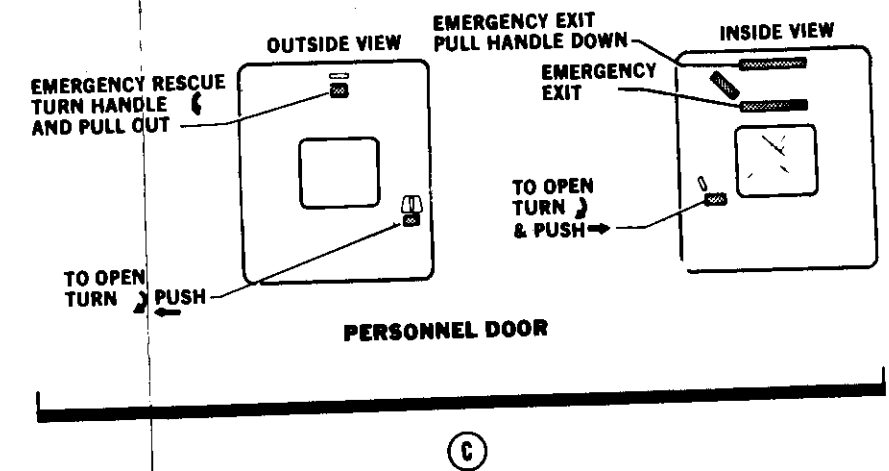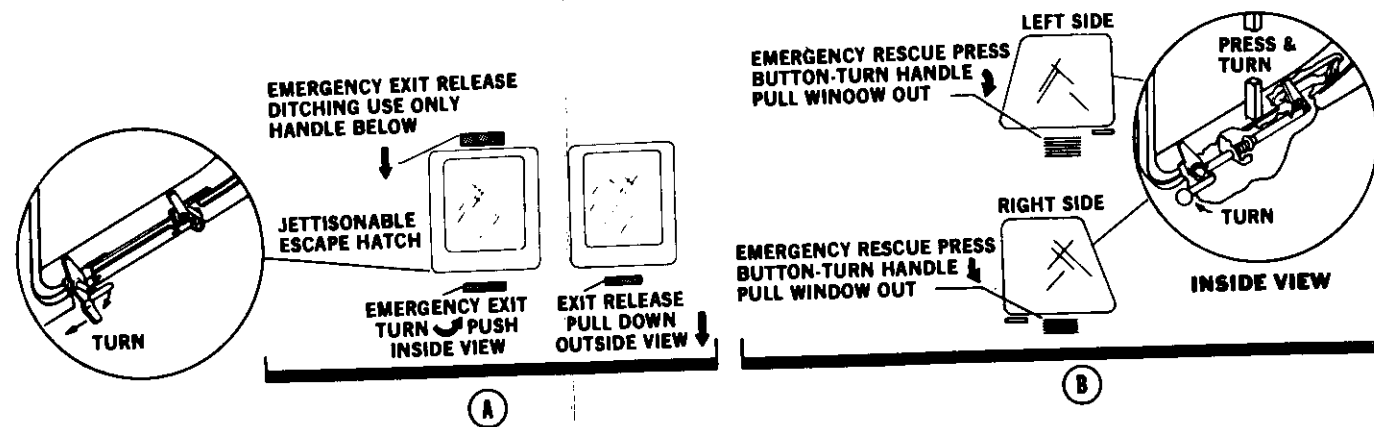

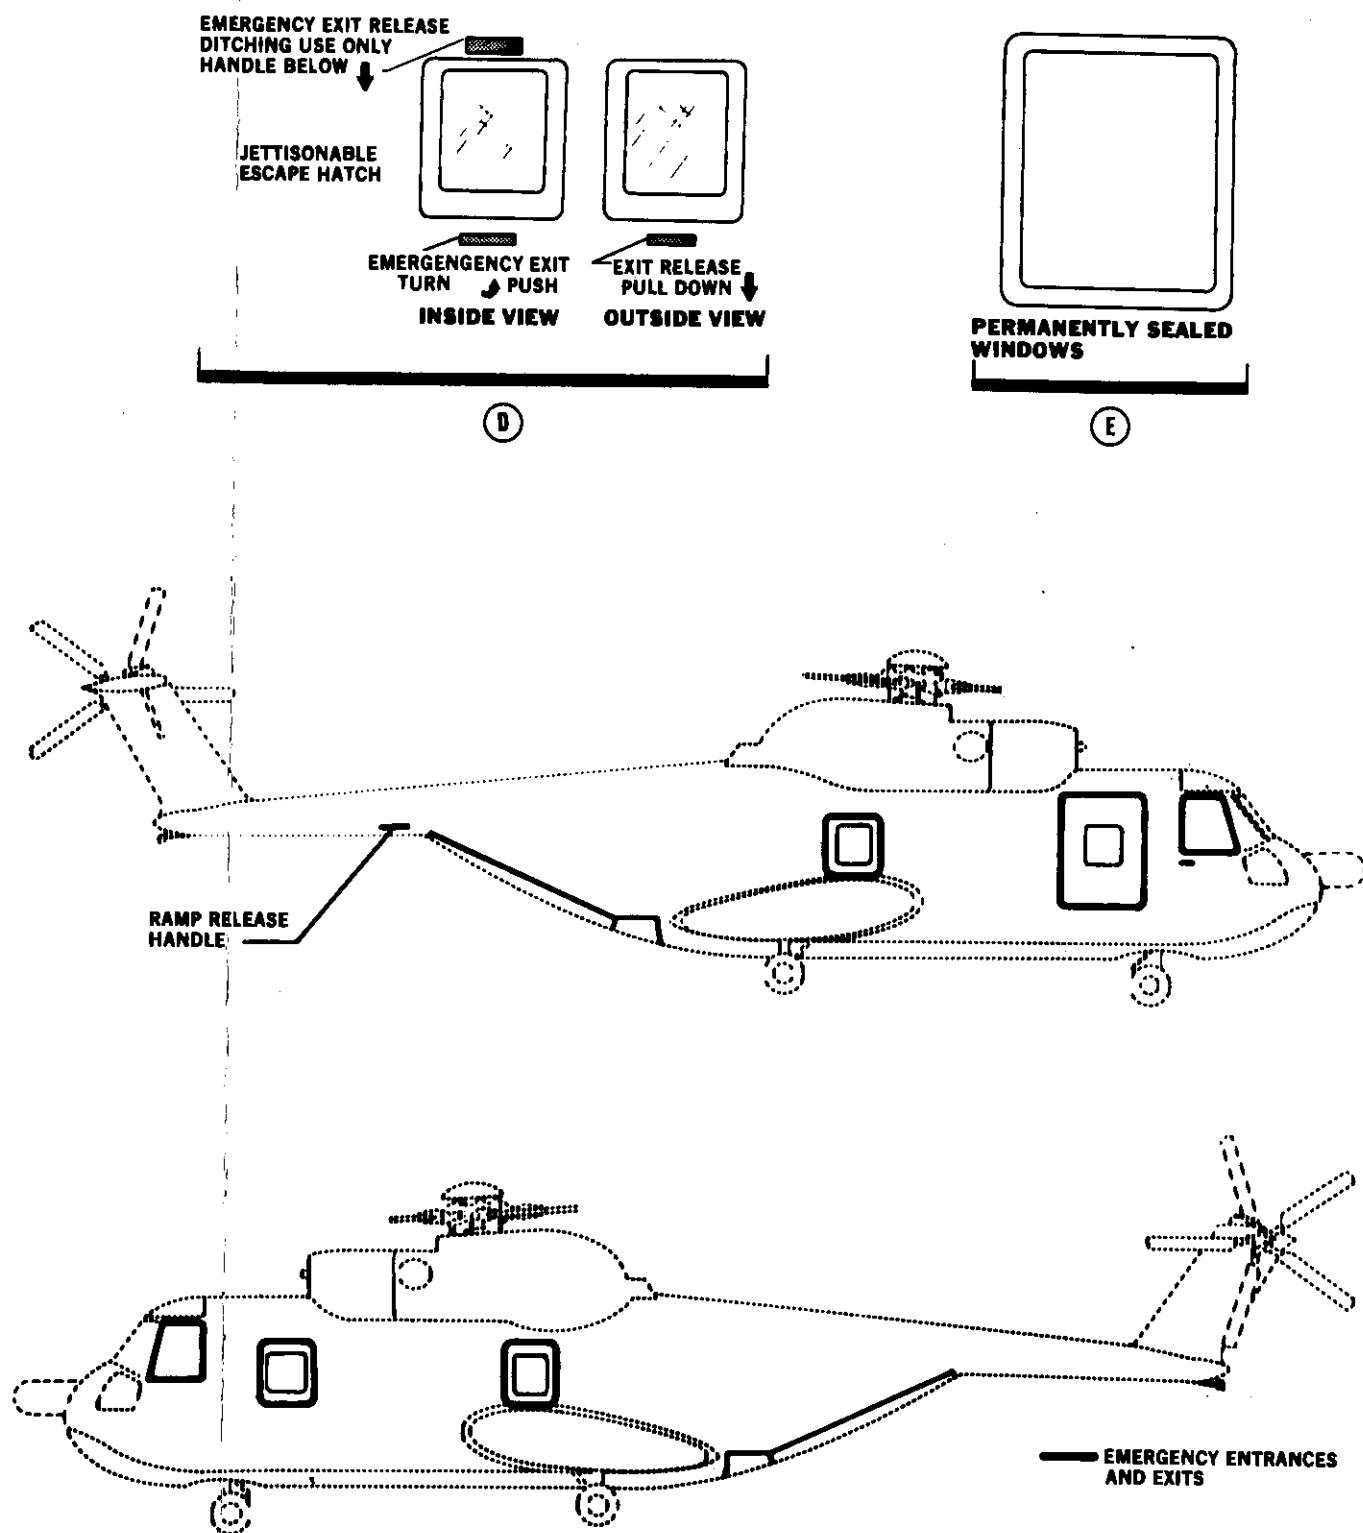

5 8576

Figure FO-10. Emergency Exits, Entrances and Equipment

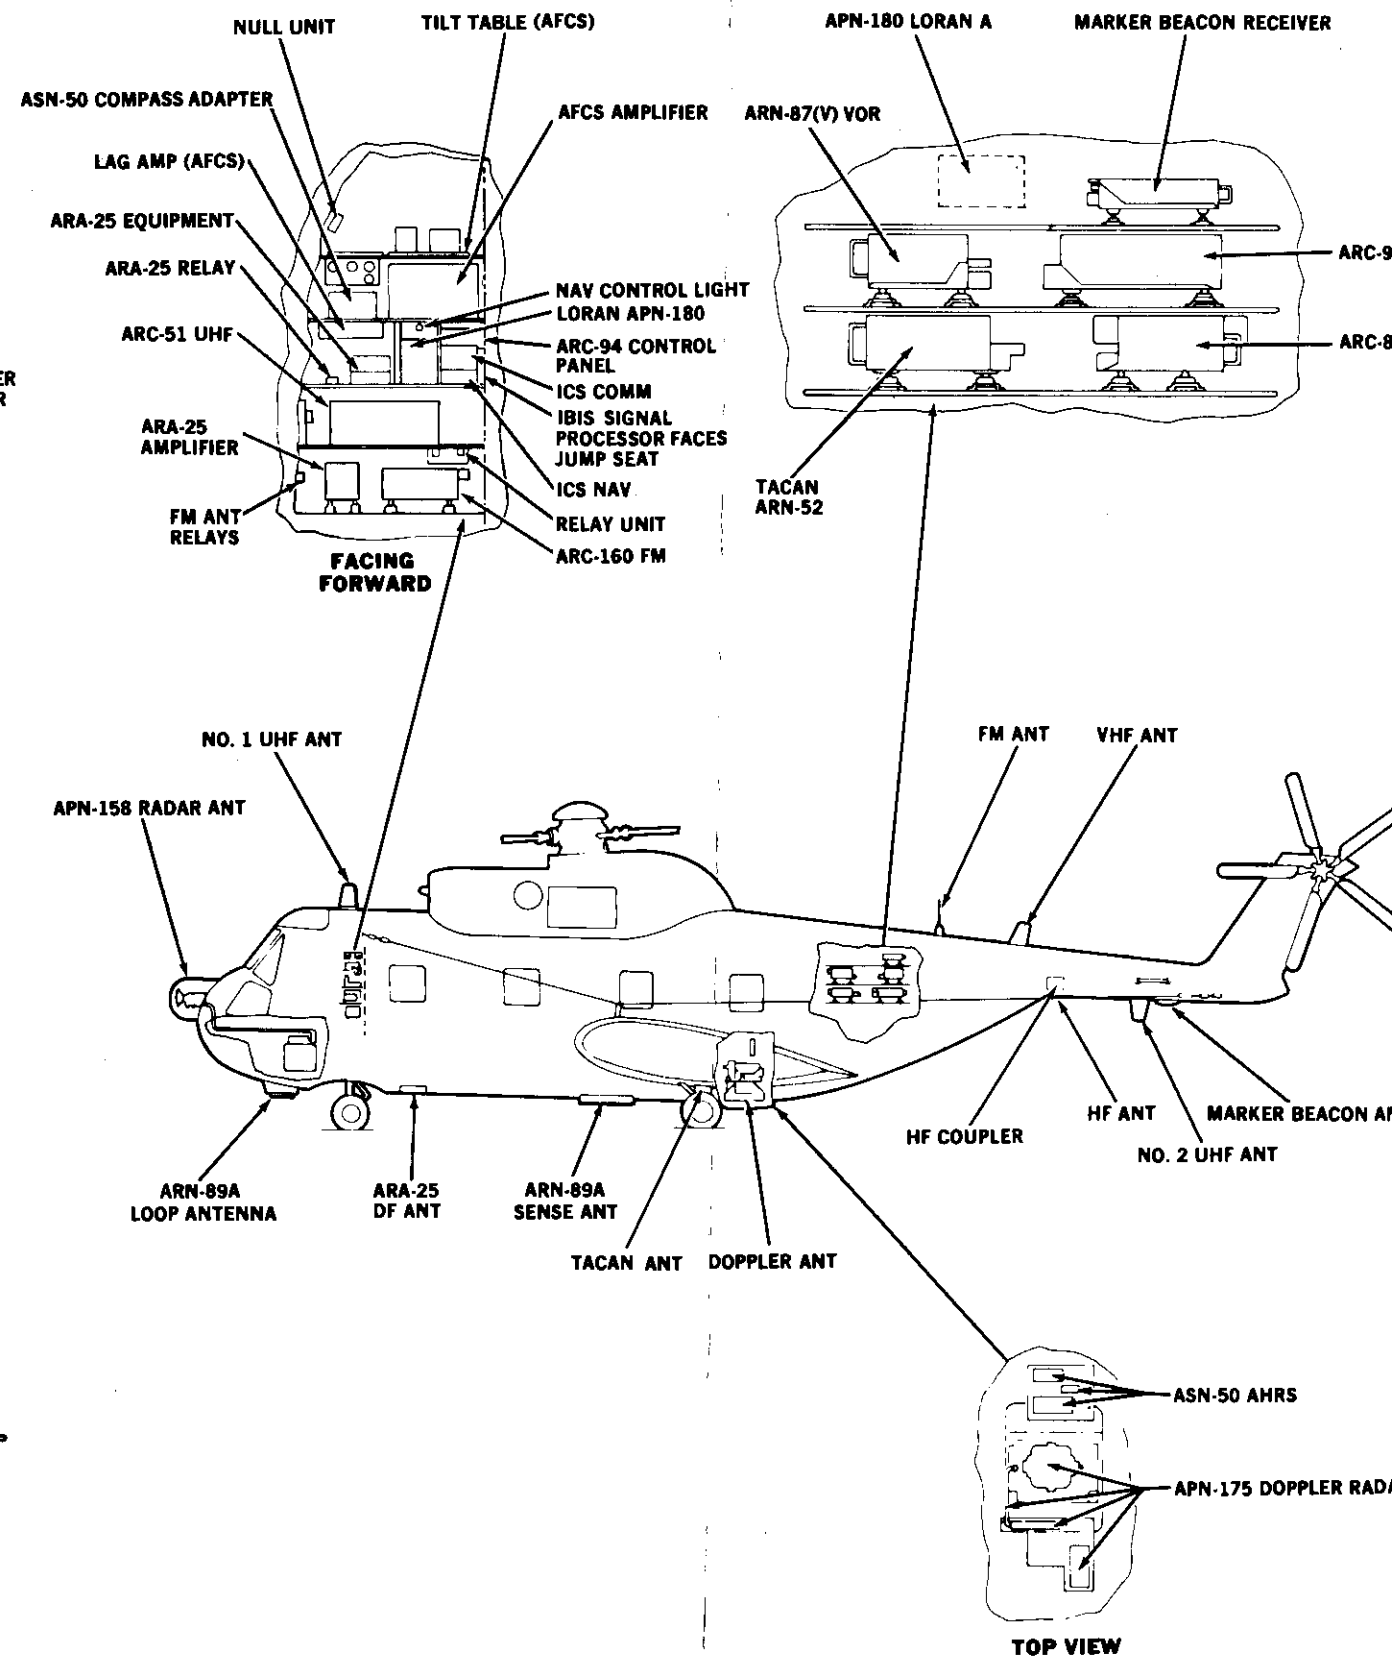
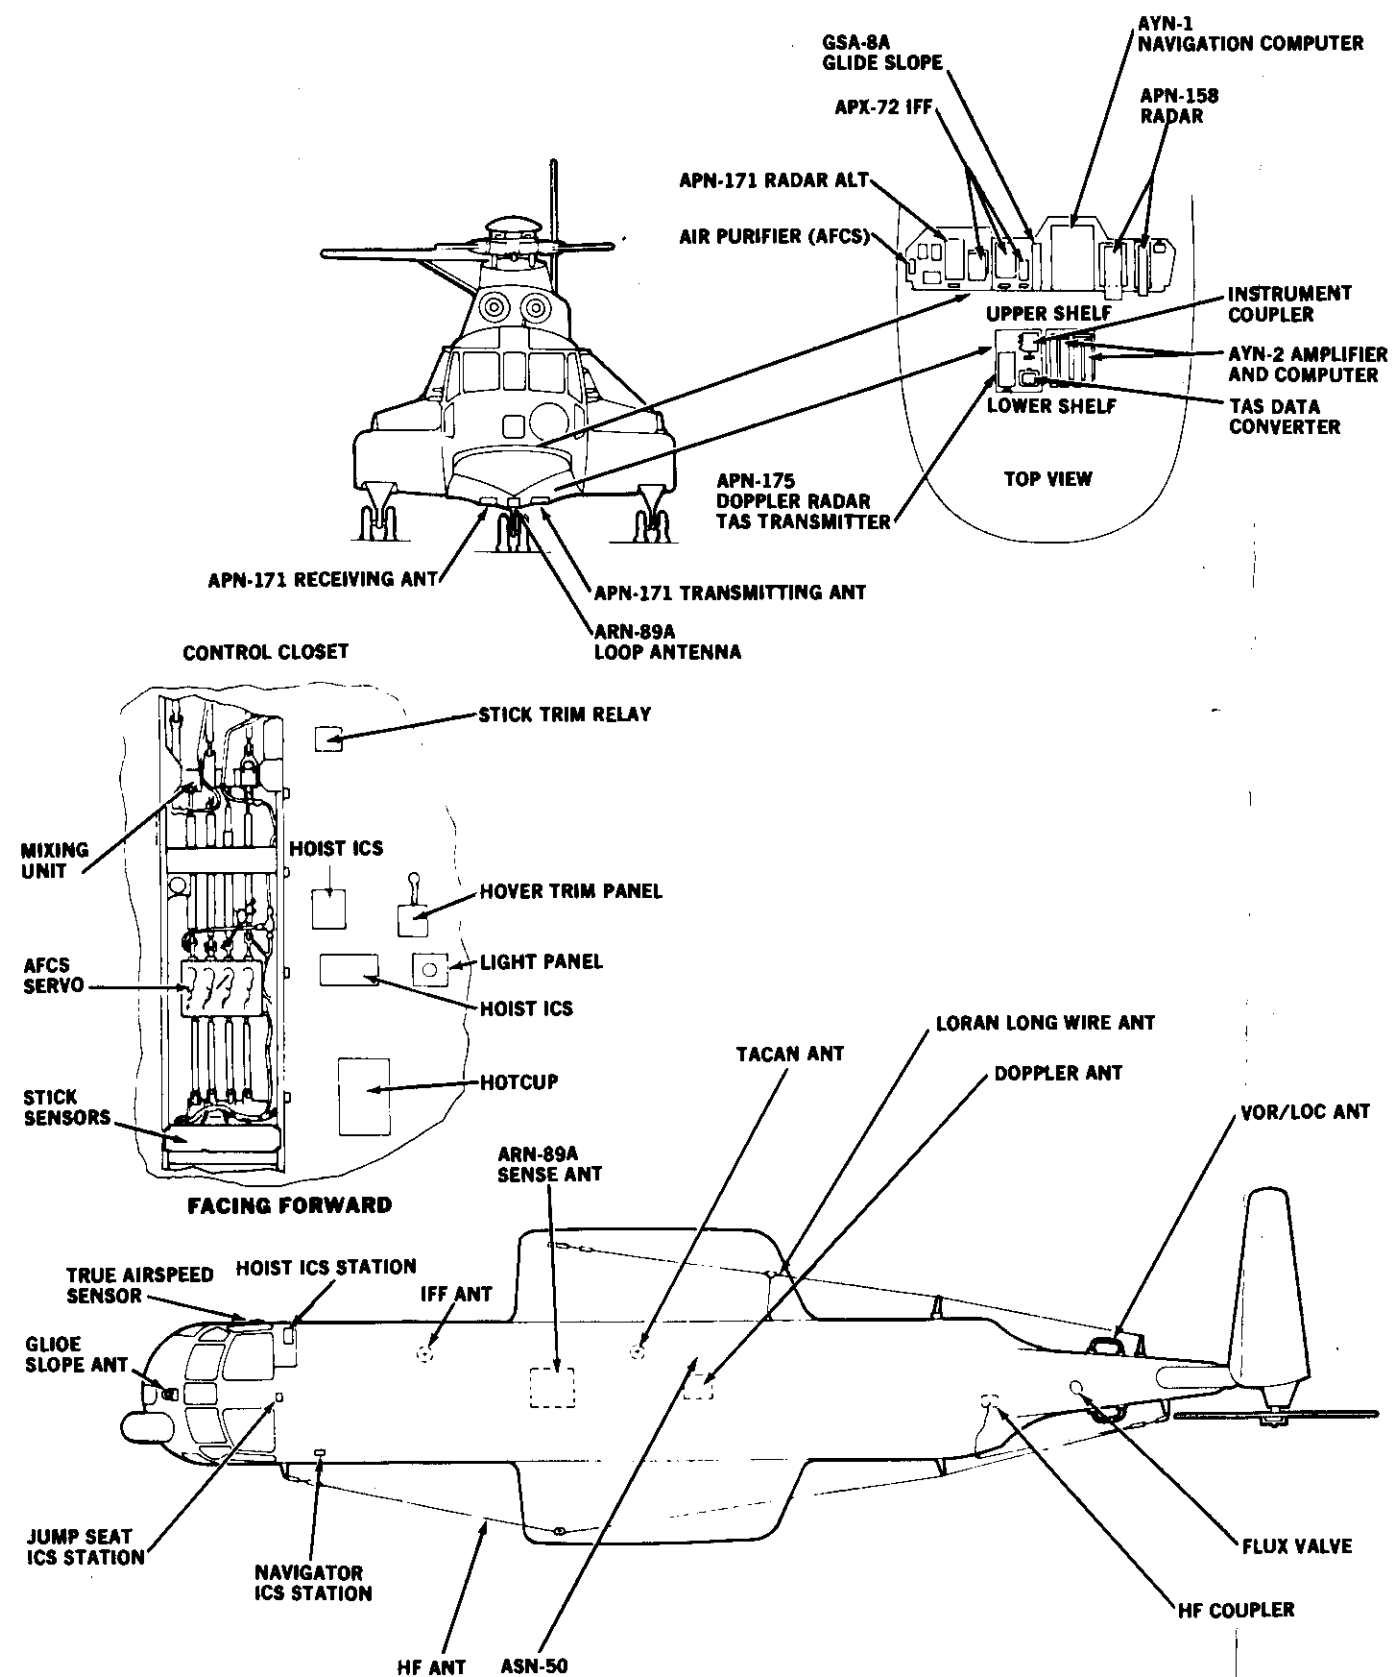
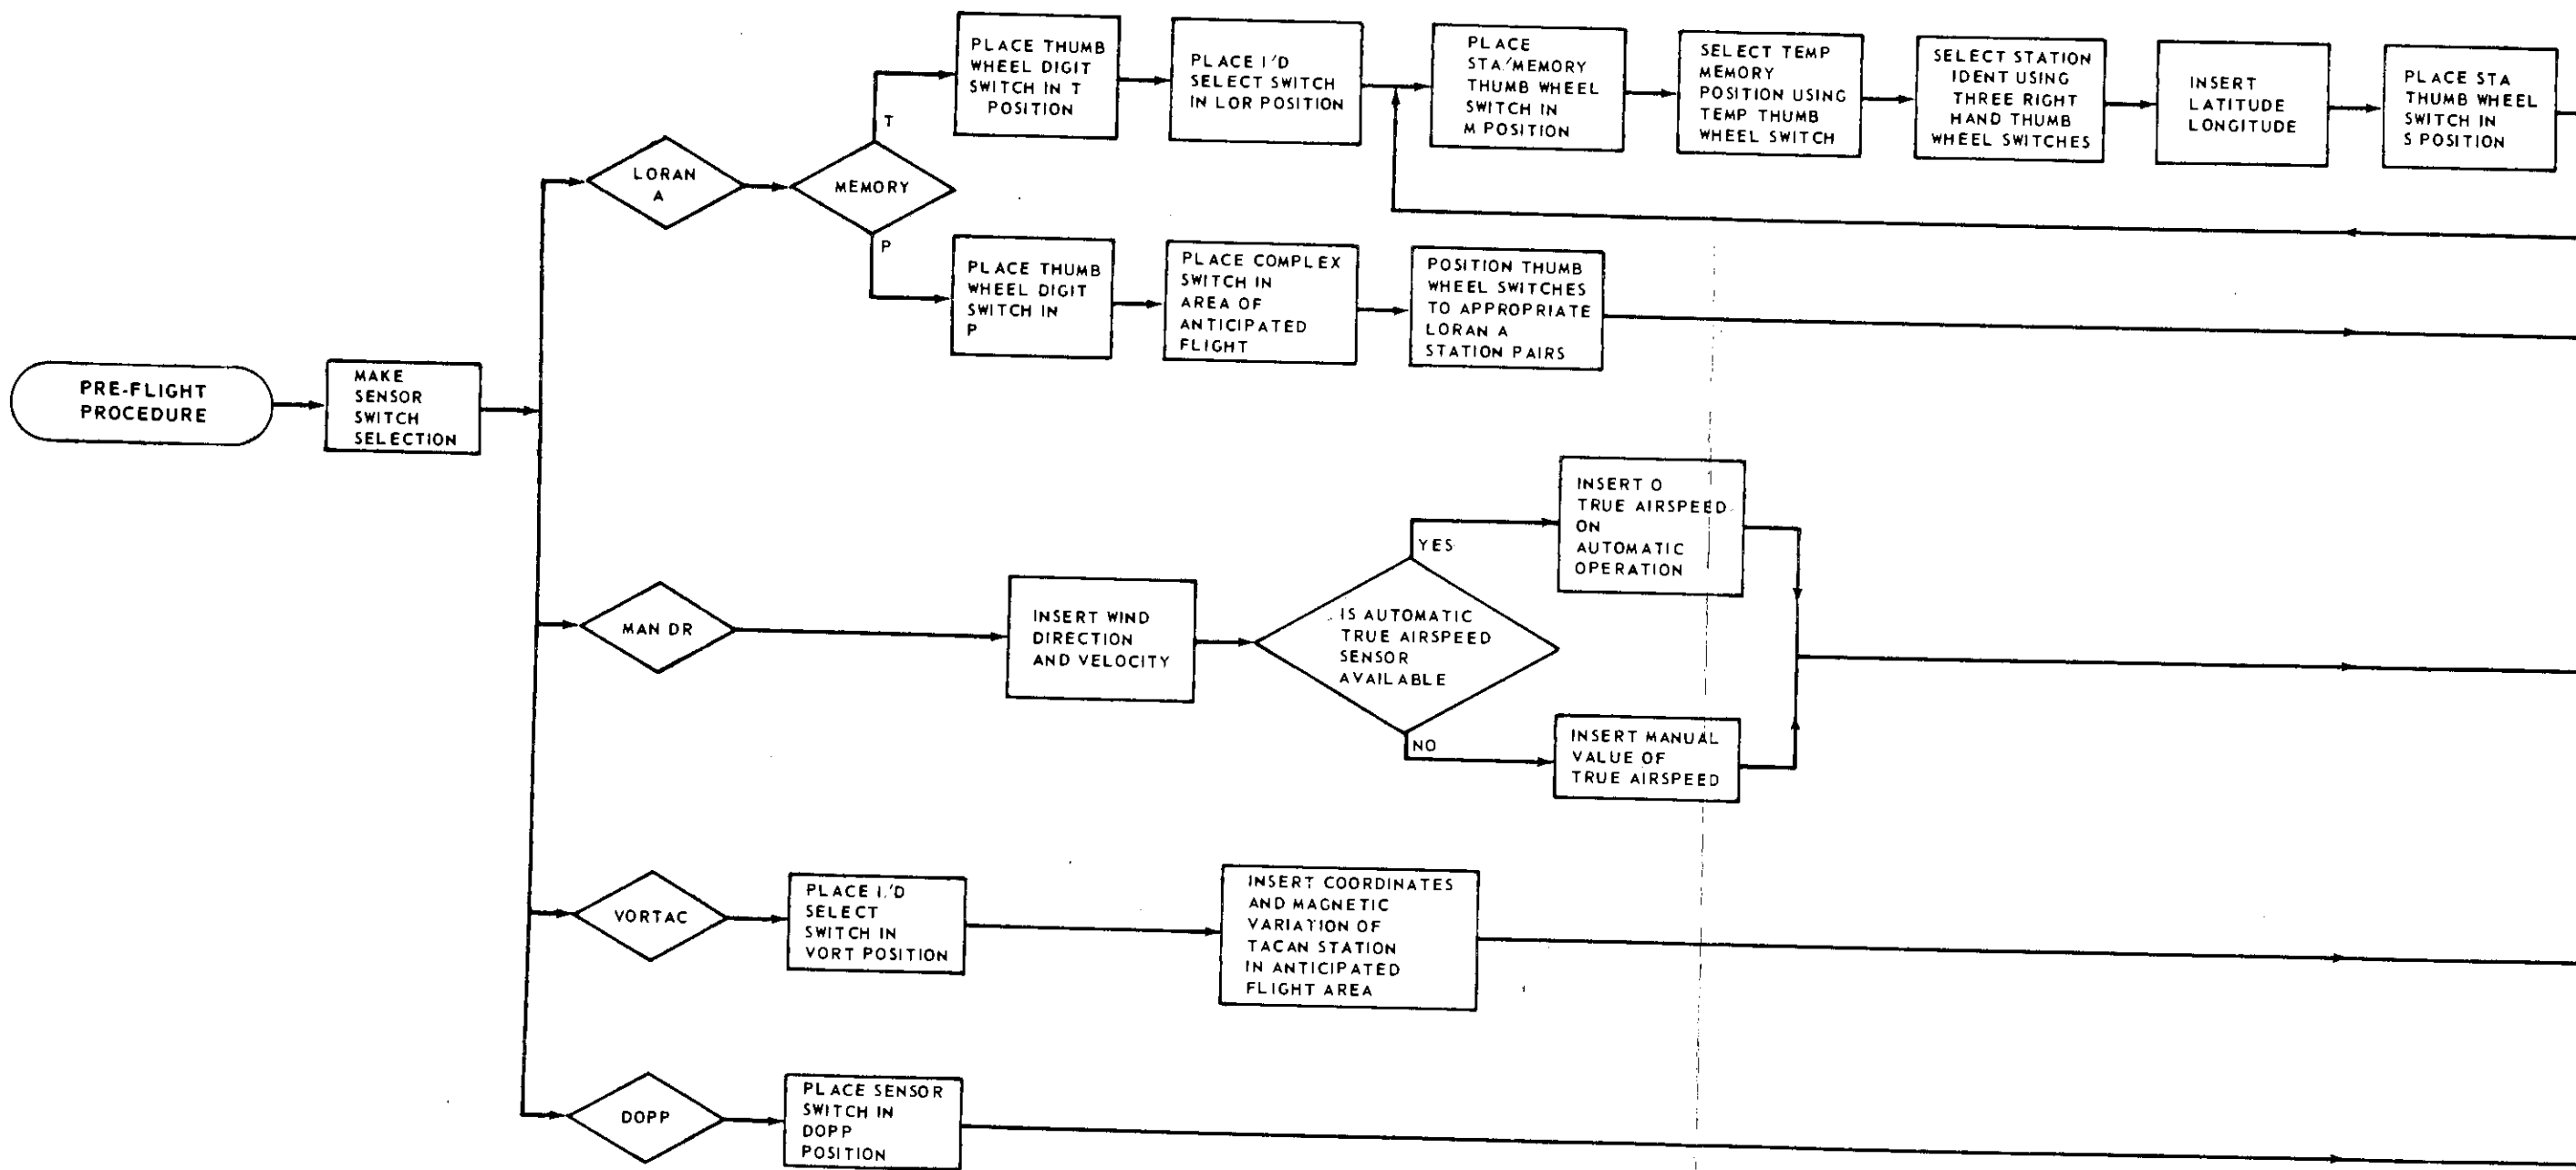
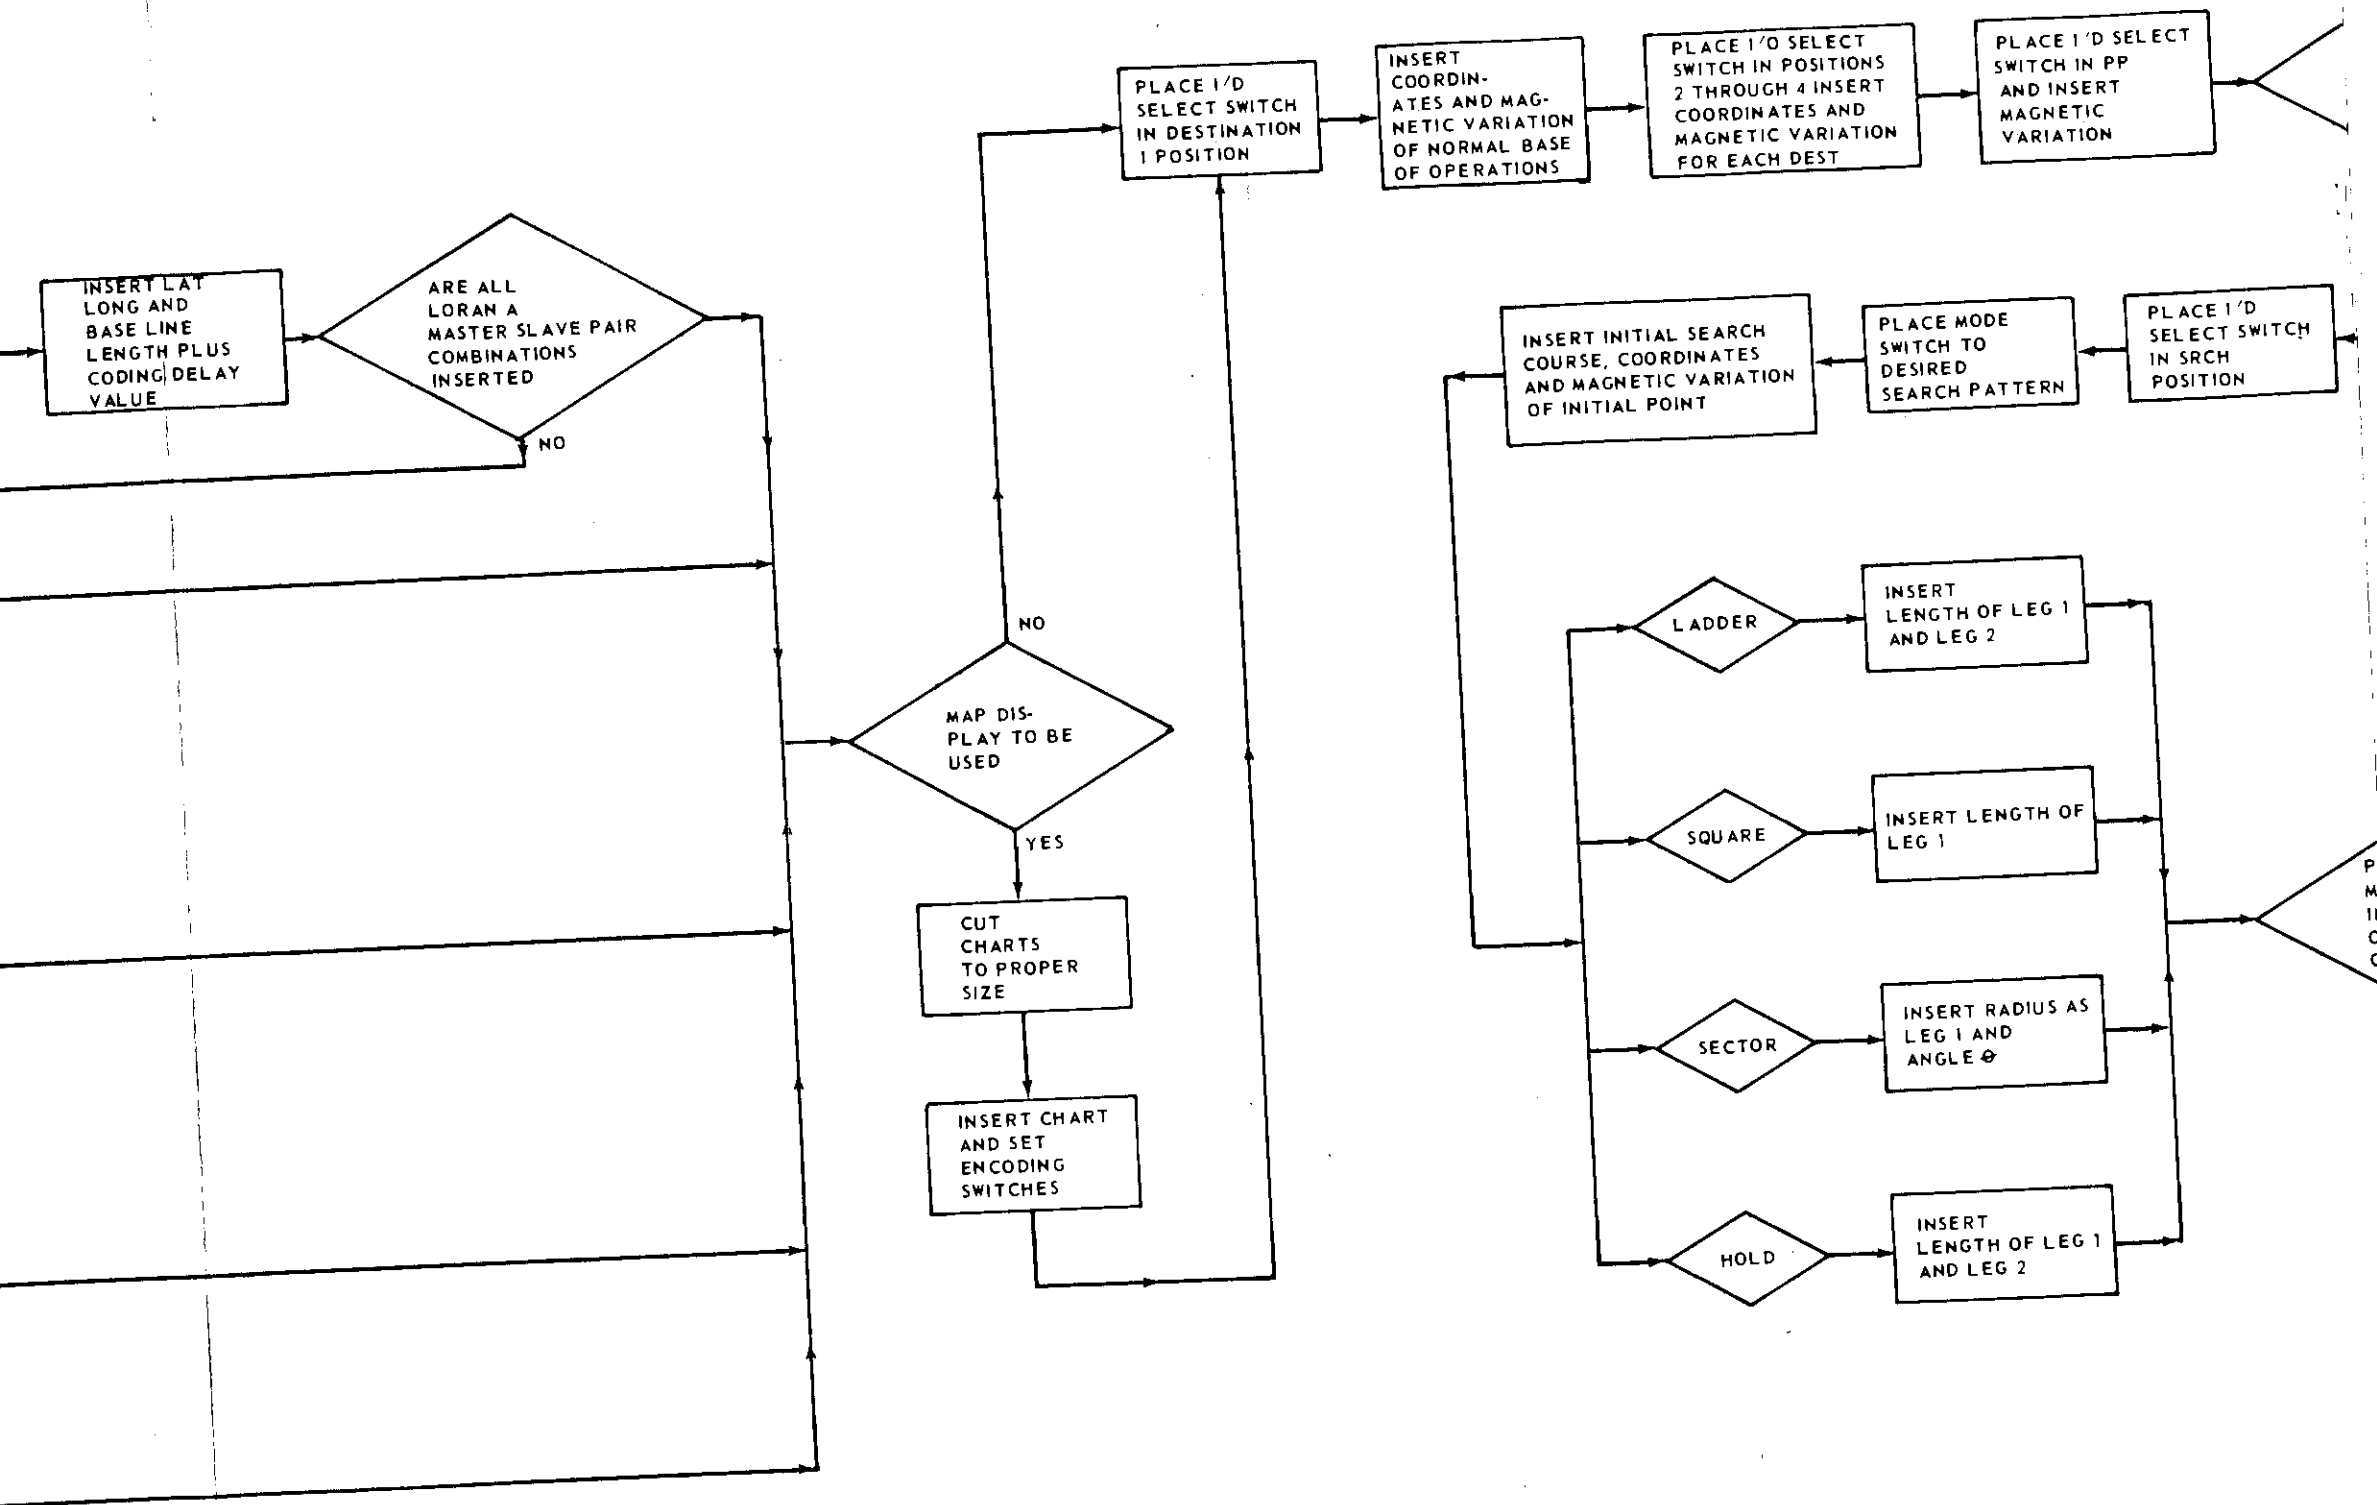


Figure FO-11. Antennas, Avionics, and AFCS Equipment





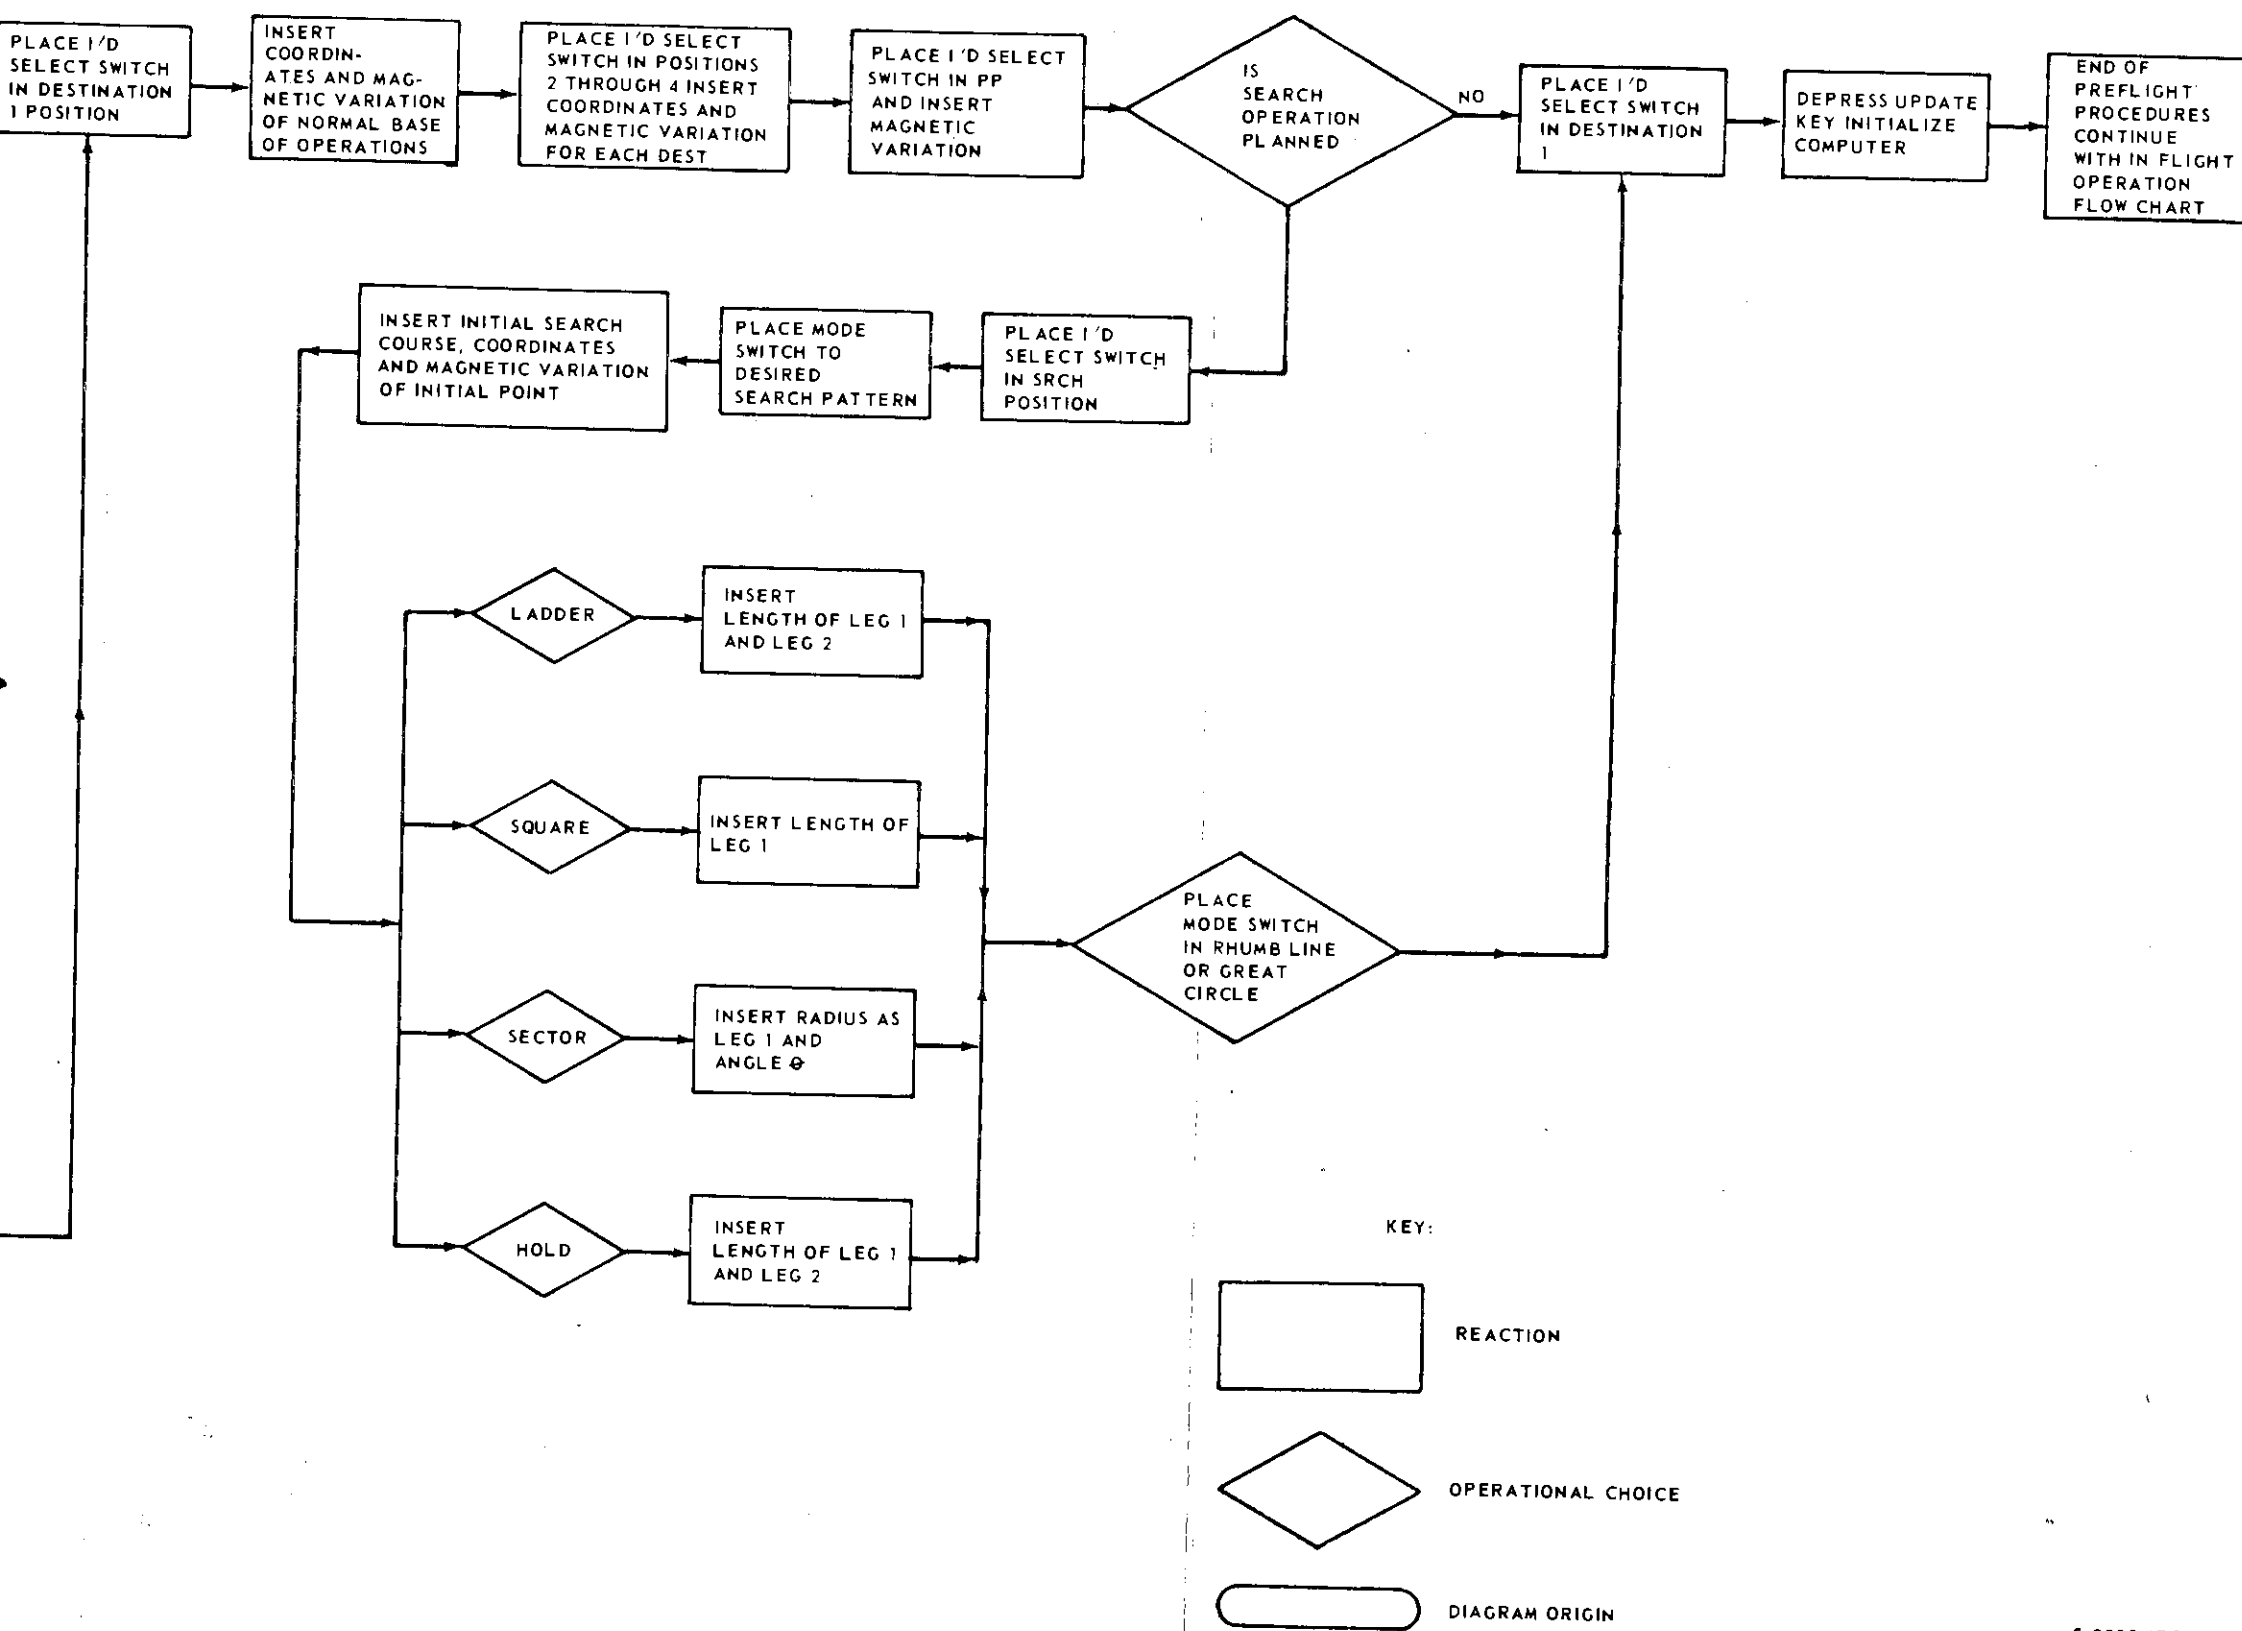


Figure FO-12. Sensor Selection Flow Chart

S 8580 (R2)